



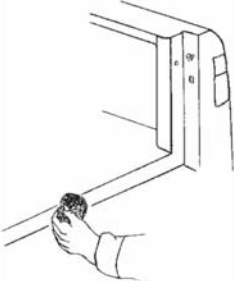
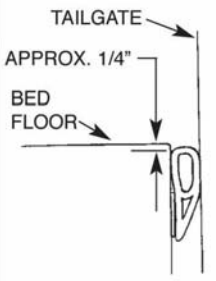

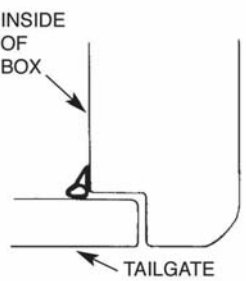
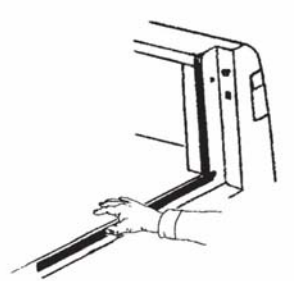
TAILGATE SEAL Kit #30946

IMPORTANT - READ BEFORE INSTALLING: The following instructions are applicable for domestic and import trucks. However, due to the variety of truck box designs, your application may differ from these instructions. Use a 1" test piece to determine the most suitable application for your truck.

SUPPLIES/TOOLS NEEDED

	
Mild soapy water and clean rags.	Scissor

INSTRUCTIONS

	 <p>TAILGATE APPROX. 1/4" BED FLOOR</p>	 <p>START AND END 1/2" BEYOND CORNERS</p>	 <p>INSIDE OF BOX TAILGATE</p>	
<p>1) Clean surface with soapy water and dry. Then wipe with alcohol prep pads included in kit. Avoid touching cleaned surface during installation.</p>	<p>2) Cut test piece 1" long and select best location between bed floor and tailgate.</p>	<p>3) Remove test piece and apply seal in a straight line continuous from one side to other side. Begin 1/2" beyond box wall corner and stop 1/2" beyond box wall corner at opposite end.</p>	<p>4) Use same 1" test piece from Step 2 and select best location up side of box wall. Close tailgate, it should compress the rubber seal approx. 1/4 to 3/8 inch. Apply seal from floor to top of box on both sides. Inspect seal location at sides and floor and make adjustments now if needed.</p>	<p>5) Apply ample pressure to entire seal for maximum adhesion. TIP: When done lubricate the bottom of the tailgate with soapy water and close tailgate. Leave closed for several days. This trains the seal to take the shape of the tailgate resulting in better adhesion and sealing.</p>