



## Installation Instructions

### IMPORTANT:

This product fastens to inside wheel well and box wall. Inspect these areas for hidden components—electric wiring ect., before drilling and make adjustments if needed.

### Tools Needed:

- 3/8 power drill w/ #3 phillips bit (3 inch long)
- marking pen
- protective eyewear

### Step 1:

- Hold storage pocket in level position against wheel well and box wall by tailgate.
- Select best hole (1 of 3) by wheel well and make mark for screw location.
- Then by tailgate, make another mark for screw location. Close tailgate and make sure Storage Pocket is not too far back.



### Step 2:

- By tailgate, align storage pocket hole with mark on box wall. Run self drilling screw into wall, **be careful, don't over tighten.**
- By wheel well, align storage pocket with that mark and run another self drilling screw into wheel well. **Be careful, don't over tighten.** Repeat procedure for Storage Pocket on opposite side.


### NOTE:

On some wheel wells, locating the screw lower down may provide a better fit. Drill a new 1/4" hole in Storage Pocket where screw will fasten to wheel well.

**Drop-in-bedliner:** drill through bedliner and let screw drill into steel wall behind bedliner.

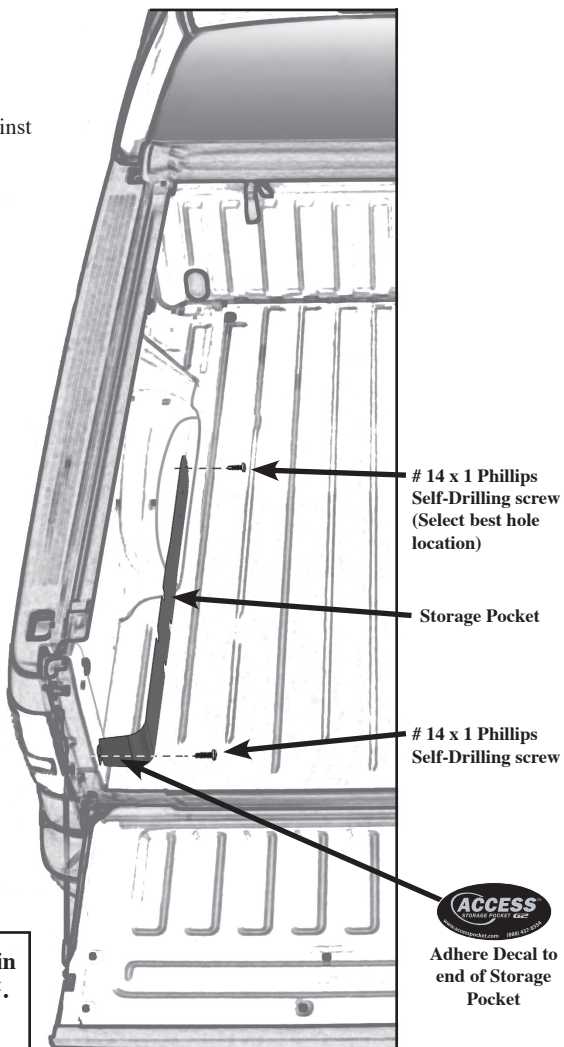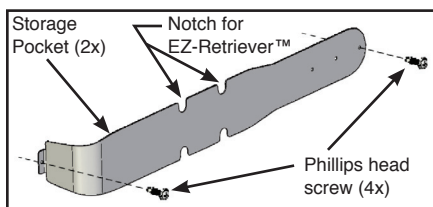

Storage Pockets are notched to work in conjunction with your EZ-Retriever™. See back side for details. EZ-Retriever™ is not included with Storage Pocket Kit

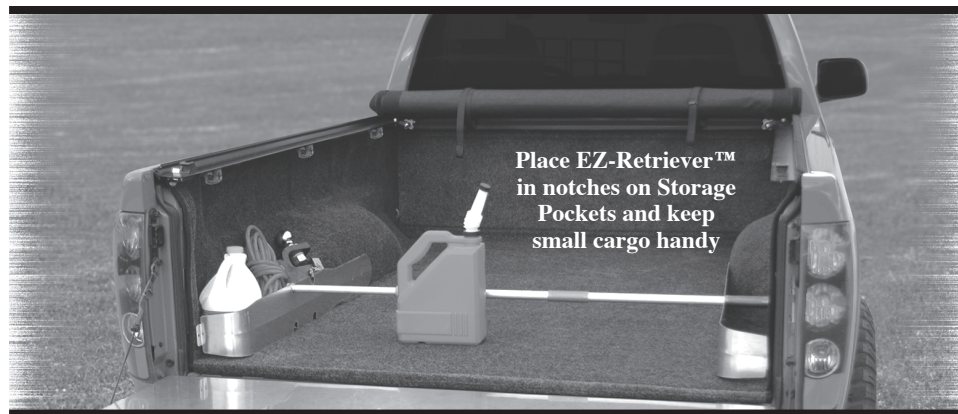

**EXTENDS TO 5' 9"**  
Easily adjusts to the perfect length for any size truck bed



**GRAB IT, MOVE IT OR LOAD IT**  
Instant cargo management at your fingertips.

- Storage Pockets are notched to work in conjunction with your EZ-Retriever™
- Easily reach items that have slid to the front of the truck box
- Works great for vehicles with toppers, tonneaus or lids
- Manufactured from aircraft grade heavy-duty aluminum