




Installation Instructions

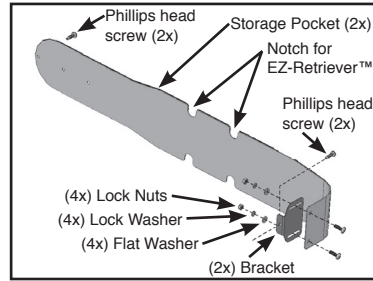

IMPORTANT:

This product fastens to inside wheel well and box wall. Inspect these areas for hidden components—electric wiring ect., before drilling and make adjustments if needed.

Tools Needed:

- 3/8 power drill w/ #3 phillips bit (3 inch long)
- 7/16 wrench
- marking pen
- protective eyewear

Step 1:

- Preassemble Storage Pocket to bracket (see diagram).
- Hold assembly in place against wheel well and box wall by tailgate.
- Select best hole (1 of 3) by wheel well and make a mark for screw location.
- By tailgate, make another mark for screw location for bracket. Close tailgate, check to make sure pocket is not too far back.

Step 2:

- Disassemble bracket from Storage Pocket. Align bracket with mark on box, hold and run self drilling screw into box wall. **Be careful, don't over tighten.**

Step 3:



- Reassemble Storage Pocket to bracket. Leave nuts finger tight.
- Raise front of pocket to level height, hold and run self drilling screw into wheel well. **Be careful, don't over tighten.**
- Tighten bolts holding pocket to bracket. Repeat installation procedure for opposite side Storage Pocket.

NOTE:

On some wheel wells, locating the screw lower down may provide a better fit. Drill a new 1/4" hole in Storage Pocket where screw will fasten to wheel well.

Drop-in-bedliner: drill through bedliner and let screw drill into steel wall behind bedliner.

Storage Pockets are notched to work in conjunction with your EZ-Retriever™. See back side for details. EZ-RETRIEVER™ IS NOT INCLUDED WITH STORAGE POCKET KIT

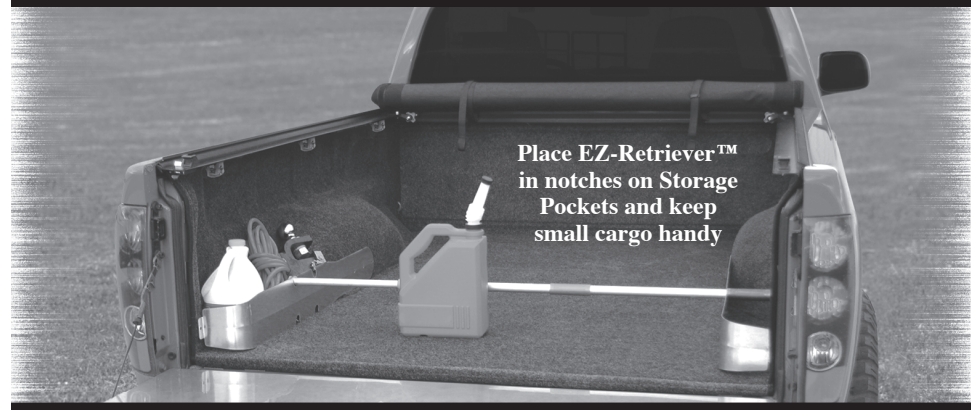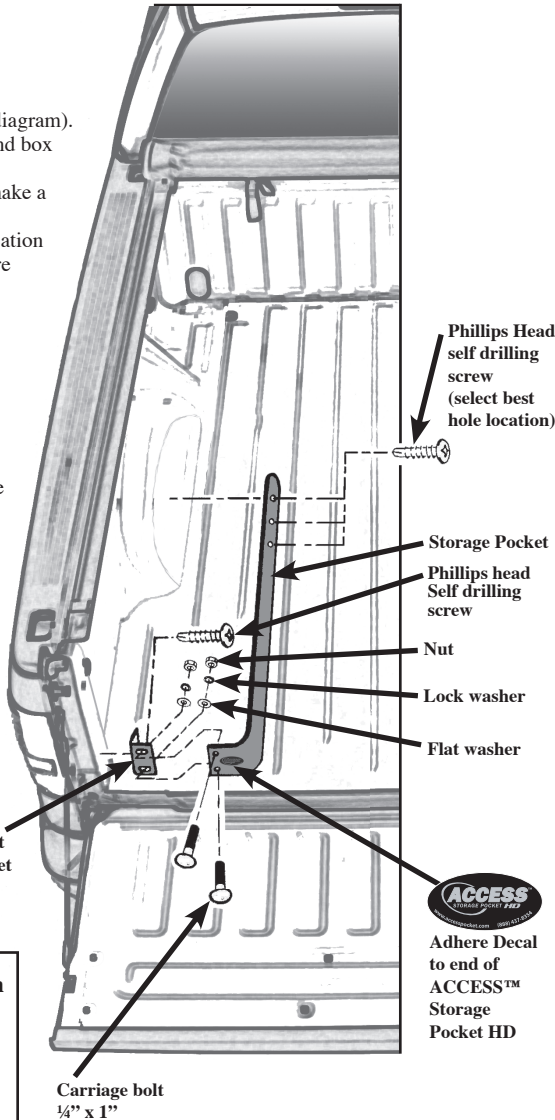

EXTENDS TO 5' 9"
Easily adjusts to the perfect length for any size truck bed



GRAB IT, MOVE IT OR LOAD IT
Instant cargo management at your fingertips.

- Storage Pockets are notched to work in conjunction with your EZ-Retriever™
- Easily reach items that have slid to the front of the truck box
- Works great for vehicles with toppers, tonneaus or lids
- Manufactured from aircraft grade heavy-duty aluminum