



## Instructions for ROCKSTAR™ Vinyl Flaps


Tools needed: • Eye Protection • Scissors

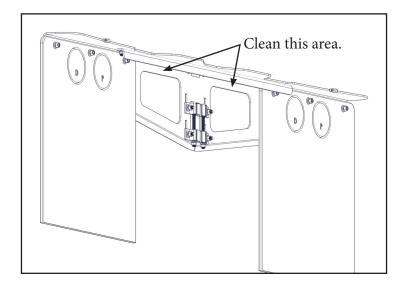


1. Use Alcohol wipe to clean backside of mud flap frame. NOTE: If adding flaps to an existing set of mud flaps, thoroughly clean backside of frame prior to using alcohol wipe.

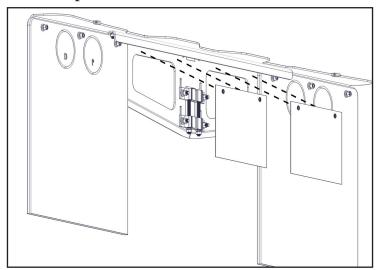

3. Peel protective layer off adhesive pads. Do not touch adhesive with finger. Adhere pad to back of frame as shown in Figure 3. Press pad firmly onto mud flap frame.

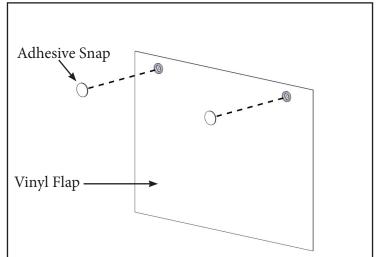

2. Attach adhesive snaps to vinyl flaps. Do not peel protective layer off now.

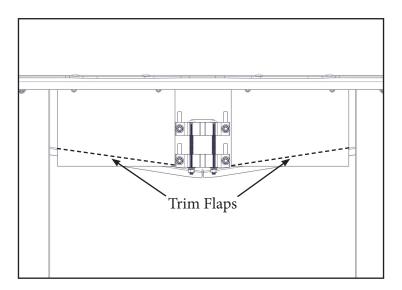

4. Trim bottom of flaps to match the angle of the frame (See Figure 4)

Shop for quality Access products on our website.

Accept no compromises, choose only quality mud flaps and splash guards.