

# ***ADDICTIVE DESERT DESIGNS***


## **2010 - CURRENT DODGE 2500/3500 HONEYBADGER REAR BUMPER INSTALL INSTRUCTIONS**

### **PREPARATION STEPS**

1. Disconnect the negative terminal on the battery. With the vehicle on level ground and the emergency brake set.
2. You will need the following tools:
  - a. 15mm Socket
  - b.  $\frac{3}{4}$ " Socket
  - c.  $\frac{3}{4}$ " Wrench
  - d. Ratchet
  - e. Wire Crimper
3. Hardware Provided:
  - a. 4 - 1  $\frac{1}{2}$ " x  $\frac{1}{2}$ " Bolts
  - b. 8 - Washers
  - c. 4 -  $\frac{1}{2}$ " Nylock Nuts

### **INSTRUCTIONS**

1. Detach the license plate lights.
2. Detach the backup sensor harness.
3. Detach the trailer plug harness.
4. Remove the 4 bolts behind license plate.

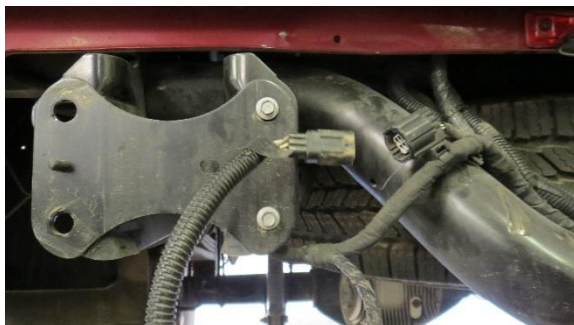

5. Remove stock bolts on rear bumper frame mounts. 2 on each side.




6. After stock bumper is off truck, remove backup sensors and harness from stock bumper.



7. Install backup sensors, wire harness, and dually lights (if purchased) onto your new Honeybadger bumper now.



8. Place New HoneyBadger bumper onto your truck now. Attach with 1 ½" x ½" bolts, washers, and ½" Nylock nuts supplied hardware.

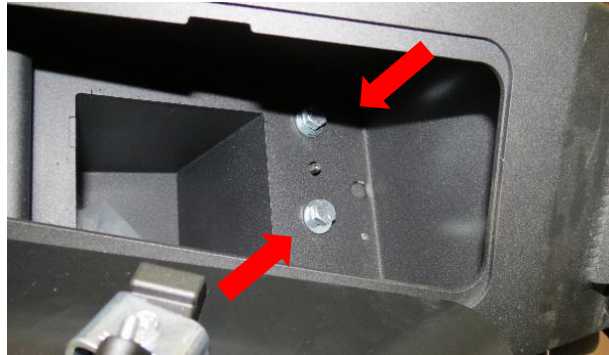

9. Attach backup sensor wire harness.
10. Attach trailer plug.
11. Splice license plate light wire and connect the newly installed license plate lights.



12. Step back and enjoy your new A.D.D. Rear HoneyBadger Bumper!