

Preparation:

- Disconnect the negative battery terminal. Park the vehicle on level ground and set the emergency brake.
- We recommend reading through the installation instructions in whole before performing the work.
- Estimated Installation Time: **1 Hours**

This installation requires 2 people for best results

Labor Rates are based on a vehicle with no pre-existing damage.

You will need the following tools:

- Ratchet
- 5/16" Allen Wrench/Socket
- Drill
- 3/4" Drill Bit

Included in Kit:

- 4 - Button Head Bolts (1/2"-13 x 1 1/2")
- 4 - Flat Washers (1/2")
- 4 - Snaptoggle Anchors (1/2"-13)

Installation:

1. Set the tire carrier into place in your truck bed where you'd like it to sit. Put your spare tire in it while choosing the location so you can make sure it won't hit the front of your truck bed. (Fig A)

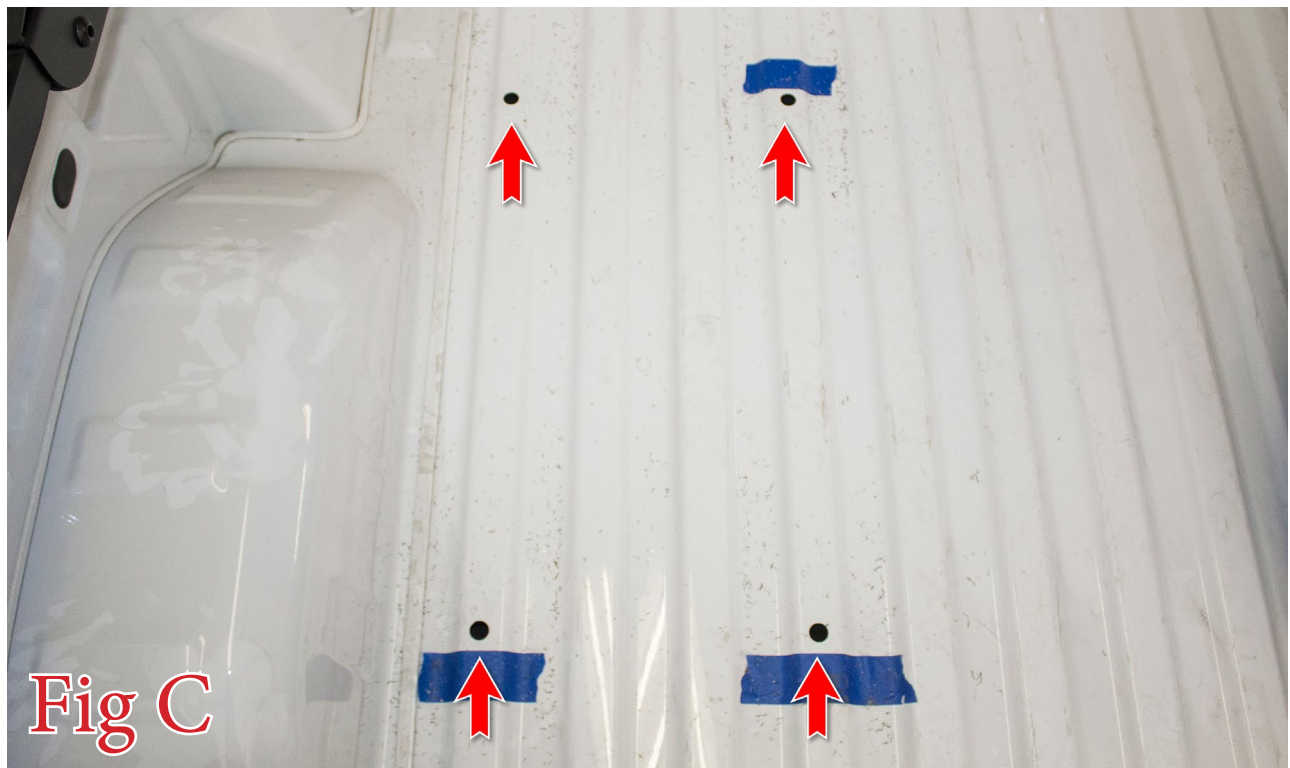


Fig A

2. With the tire carrier placed how you want it, make a mark at each of the 4 mounting holes you would like to use. Make sure the the mounting holes you use line up with the raised parts of the truck bed so that the bed sits flush with tire carrier where its bolted down. (Fig B)




3. Drill a 3/4" Hole at each marked location. (Fig C)




4. Find the supplied 1/2" Snaptoggle Anchors (x4). Push them through the holes you've drilled as shown in (Fig D).




5. Hold the top loop steady and zip the base downwards. **Be very careful as you do this, the lines are easy to break.** (Fig E)

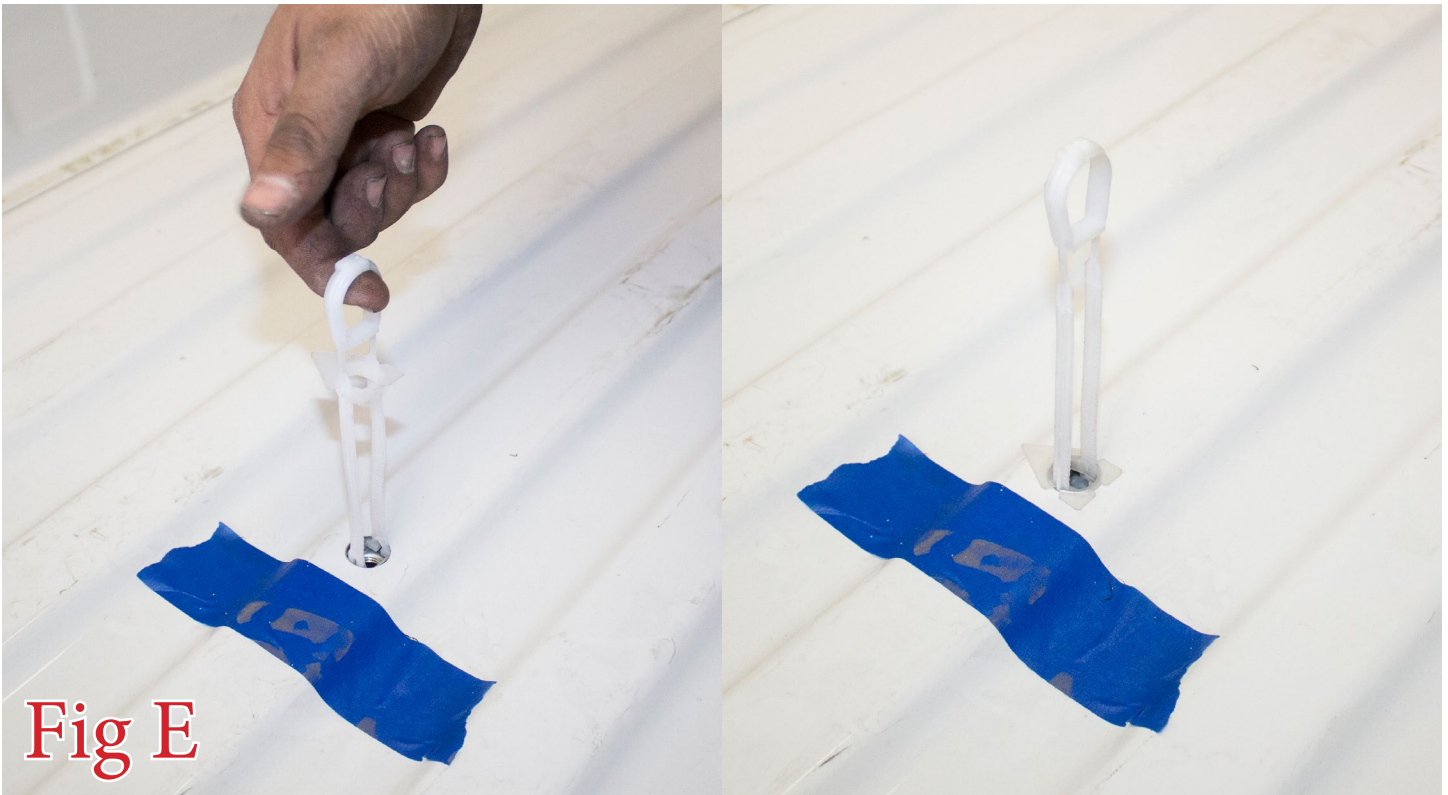

6. With the snaptoggle in place, break the lines off so it looks like (Fig F).

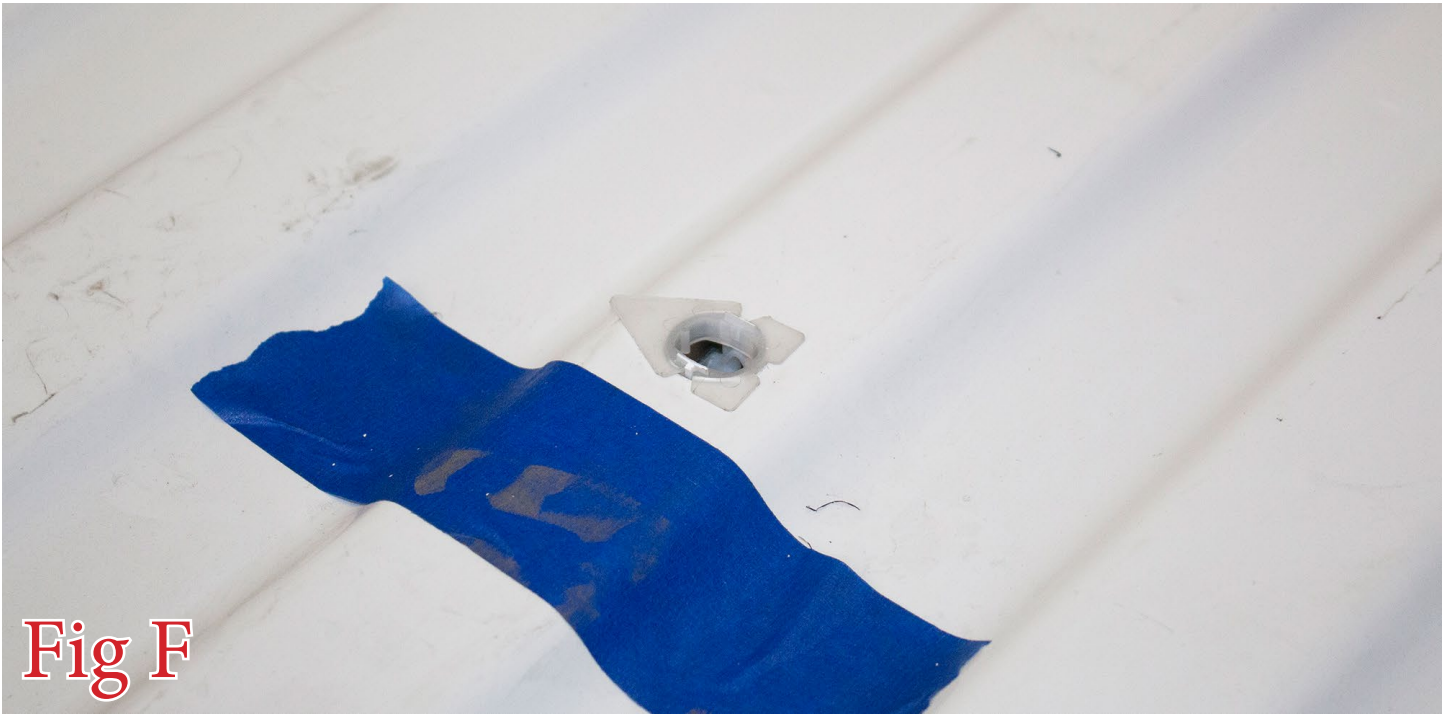

7. Once all 4 snaptoggle anchors are installed, set the tire carrier in place. Then, install the supplied 1/2" Bolts (x4) and 1/2" Washers (x4). **Tighten these bolts until they are snug, be careful not to overtighten.** (Fig G)

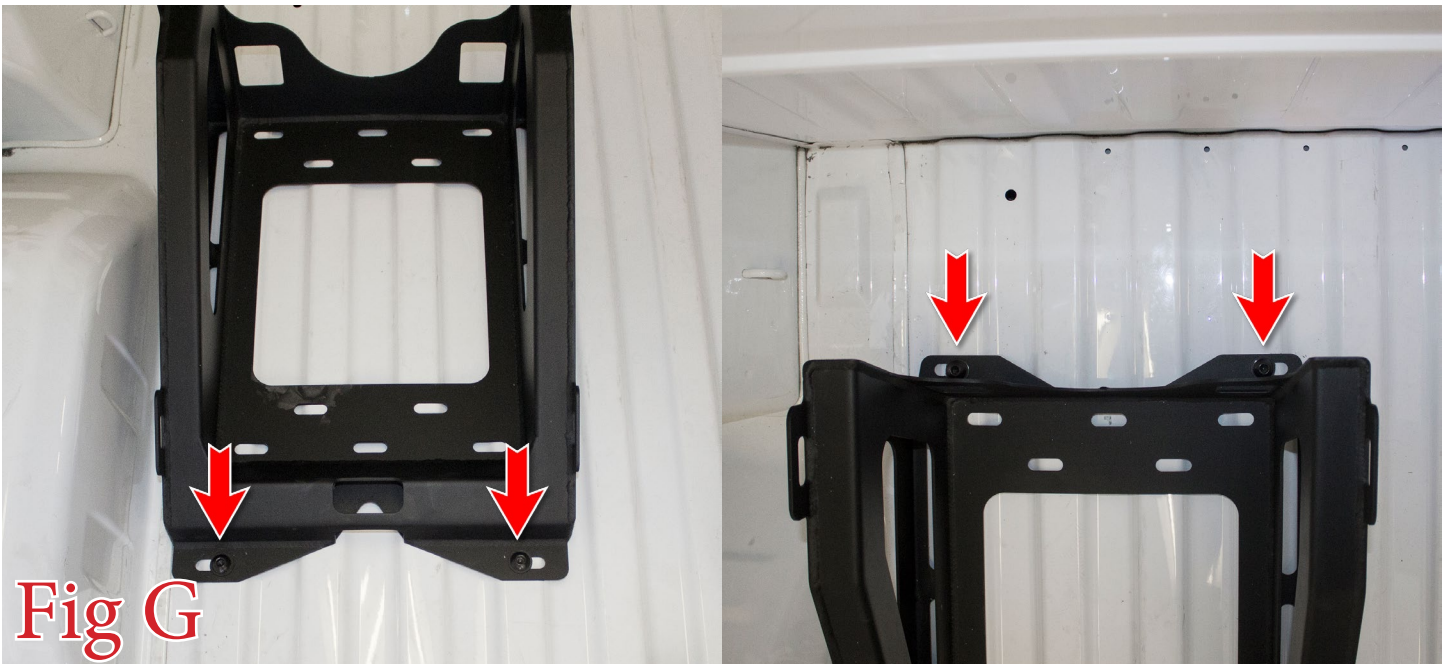

8. Stand back and enjoy your new ADD Tire Carrier.
9. Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.

