

Addictive Desert Designs

2014 – Current Toyota Tundra HoneyBadger Side Steps Installation Instructions

PREPARATION

1. Disconnect the negative terminal on the battery. Park the vehicle on level ground and set the emergency brake.
2. We recommend reading through the installation instructions in whole before performing the work.
3. You will need the following tools:
 - a. 13mm Socket
 - b. Ratchet
 - c. Wire Crimpers

Note: this installation requires 2 people for best results

4. Included in Kit:
 - 8 – Hex Head Bolts – M8-1.25 x 30mm
 - 8 – Flat Washers – 5/16"
 - 8 – Lock Washers – 5/16"
 - 1 – LED Light Harness

REMOVAL

1. Remove the one bolt referenced in Fig A. This bolt is towards the front of the truck.



2. Remove the two bolts referenced in Fig B. These bolts are towards the rear of the truck.




3. Prepare to install your new A.D.D. HoneyBadger Side Steps.

INSTALLATION

1. Set your HoneyBadger Side Steps in place and loosely install the supplied M8 bolts (x4), Lock Washers (x4), and Flat Washers (x4). Fig C shows the locations of these bolts. One of the front bolts takes the place of the bolt taken out in removal Step 1, while the other front bolt goes into the empty hole directly above that. The two rear bolts take the place of the bolts taken out in removal Step 2. Make sure to install the side steps with the longer of the two end pieces in the rear and the wiring in the front.




2. Align the side steps so they are straight in relation to the body of the truck, then tighten the bolts to the manufacturer's specifications.
3. Repeat Steps 1 & 2 on the opposite side of the truck.
4. From the driver side of the truck, run the single end of the LED harness through the transmission cross member and out the passenger side of the truck. (Fig D & E)

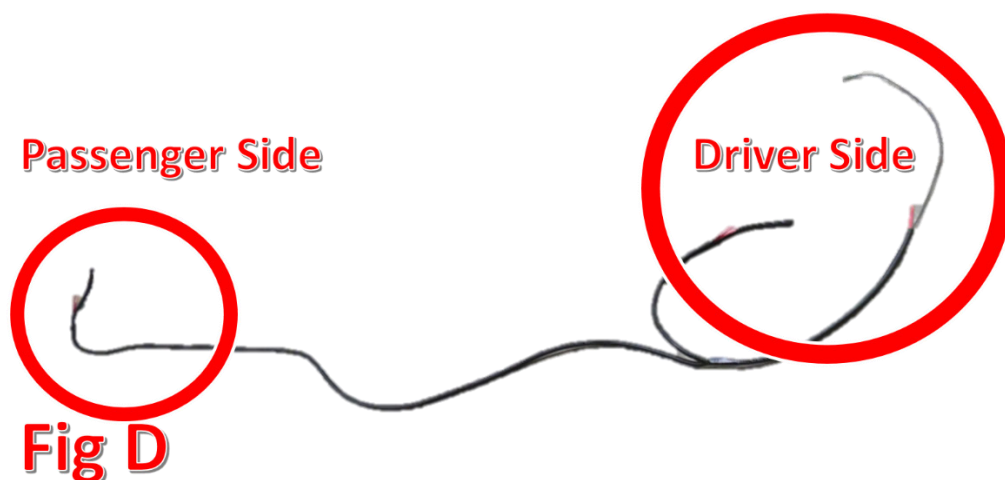




5. Connect the red and black wires of the single end of the LED harness to the red and black wires coming from the passenger side step wires. (Fig F)

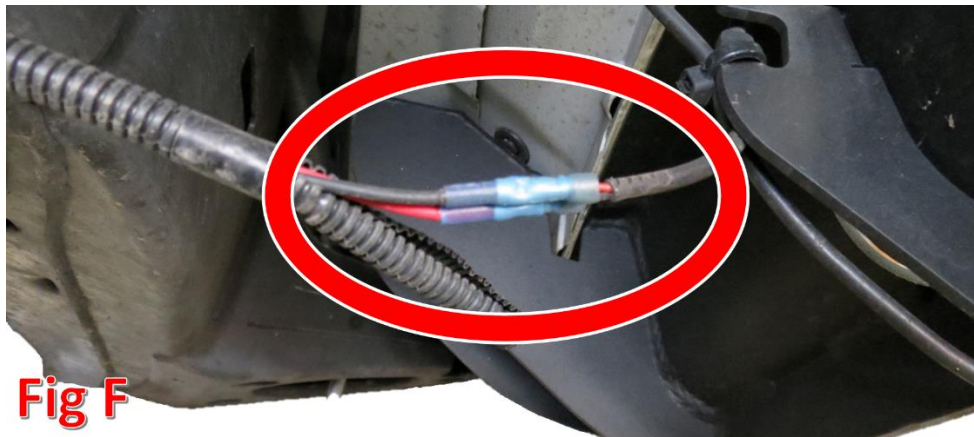

6. Connect the equal length red and black wires on the double ended side of the LED Harness to the driver side step wires. (Fig G)

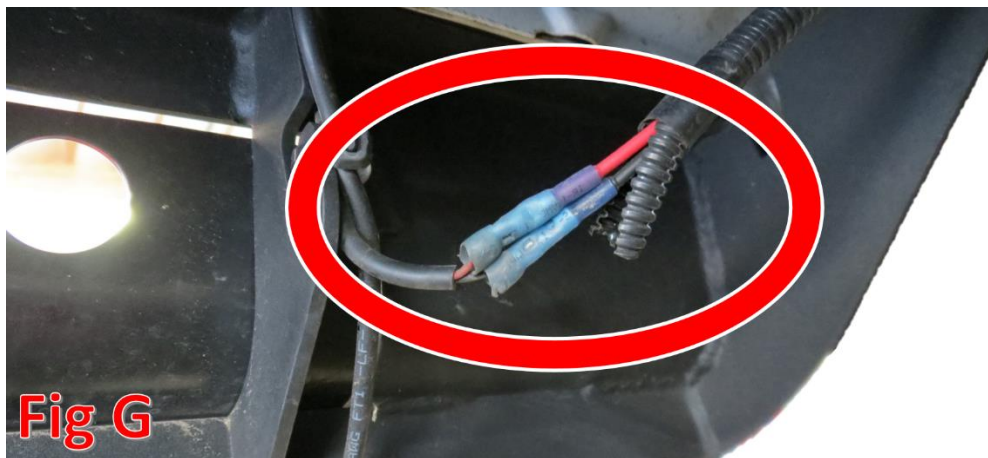


7. Take the last set of Red and Black wires and route them into the cab through the driver side rubber floorboard grommet. (Fig H)
 - a. Remove the door sill/kick panel. This step requires no tools; the panel pulls out by hand.
 - b. Pull the carpet back and unsnap the plastic rail to which the carpet is stapled.
 - c. Pull the rubber floorboard grommet out, and cut a slit in it about the size of the wiring harness.
 - d. Put the rubber grommet back in place and run the remaining end of the wire harness through it.

Fig H



8. Locate the small interior light that sits to the right of the hood latch. (Fig I)

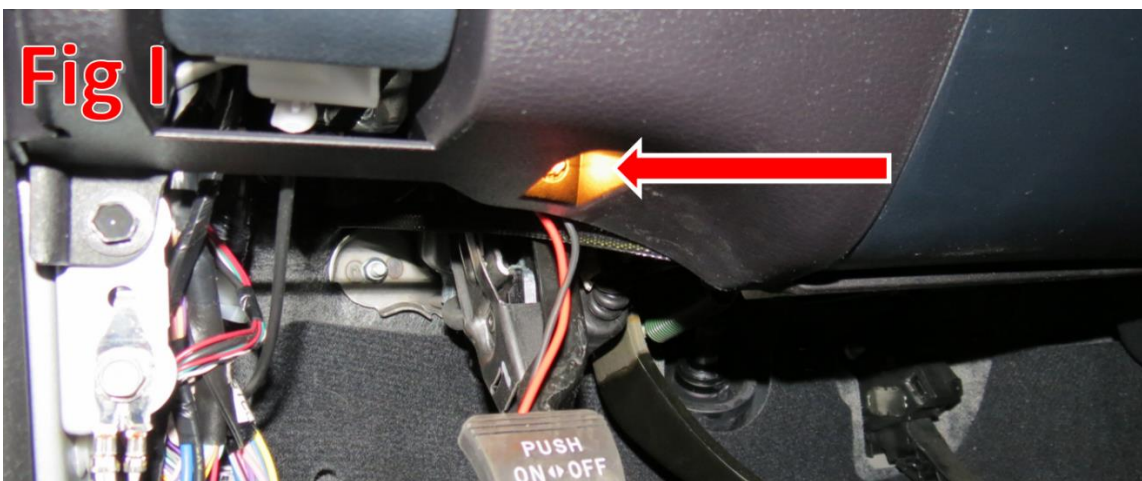

9. Using butt connectors, splice into the wires for the small interior light. Connect the Red Harness wire to the Blue Interior Light wire. Connect the Black Harness wire to the Brown Interior Light wire. (Fig J)
10. Reconnect your battery terminals and open the door to make sure the side step lights turn on.
11. Snap plastic piece from Step 6b and the door sill/kick panel from Step 6a back in place.
12. Stand back and enjoy your new A.D.D. HoneyBadger Side Steps.
13. Check and re-tighten if needed, all mounting bolts after 100 miles and periodically thereafter.

