


## INSTALLATION INSTRUCTIONS

**MAKE:** Nissan  
**MODEL:** Patrol (Y61)  
**YEAR:** 2001-2016  
**ENGINE:** I6-4.8L  
**FITS:** 4-Door Models

**304 Stainless Steel**  
**2-1/2" Cat-Back Exhaust**  
49-36121-P (Polished Tip)  
49-36121-B (Black Tip)

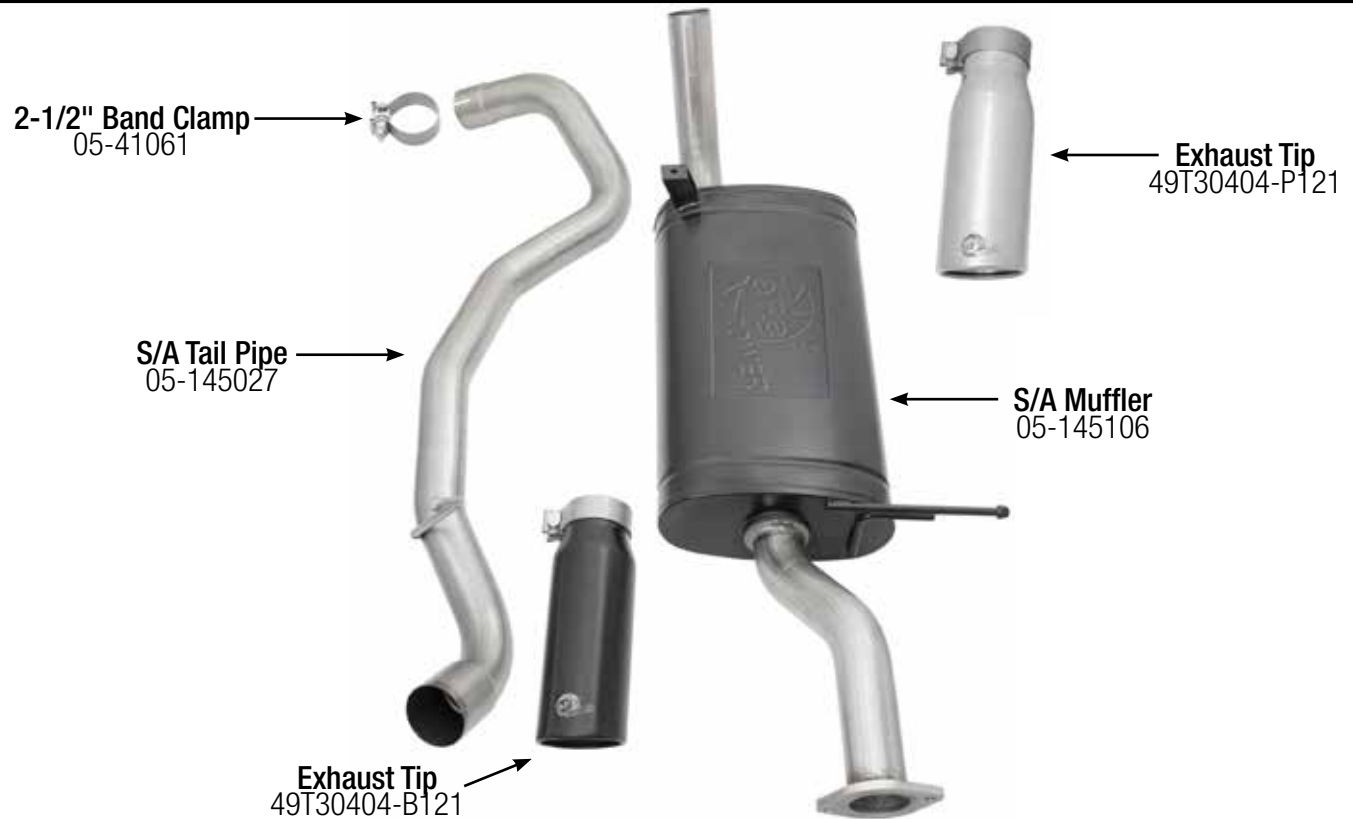

Caution: aFe recommends professional installation on our products. Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

- Step 1:** Read Instructions prior to installation. Professional Installation is highly recommended.
- Step 2:** Secure vehicle on jack stands (refer to your manual for specified jack stand positions).
- Step 3:** First, remove tail-pipe section connected to the muffler assembly flange.
- Step 4:** Now remove the muffler assembly. Be sure to place jack/stand under muffler to support weight. Save stock hardware as it will be used when installing aFe Power Exhaust.

### Installing aFe Power Exhaust

- Step 1:** Install the muffler assembly using stock flange gasket and stock hardware. Do not forget to place jack/stand under muffler assembly to support weight.
- Step 2:** Place the 2-1/2" band clamp over the expanded side of tail-pipe tube and slip over the muffler assembly tube. Slide hanger rod into stock hanger mount.
- Step 3:** Install tip at desired position. Do not fully tighten tip clamp down.
- Step 4:** Begin to tighten down front flange bolts, and then continue with muffler support bracket. Align tail-pipe tube and tighten down band clamp.
- Step 5:** Make sure everything is tight and clearance is good.
- Step 6:** Your installation is now complete. It is recommended to re-tighten all exhaust components after 50-100 miles.

Caution: aFe recommends that the tailpipe be at least 1/2"-1" away from any body panels to avoid heat related body damage. Tighten and secure.