




INSTALLATION INSTRUCTIONS

MAKE: VW
MODEL: JETTA TDI
YEAR: 2009-2010
ENGINE: I4-2.0L TDI
NOTE: *Cutting is required*



2.5" Cat-Back (304SS)
49-36401

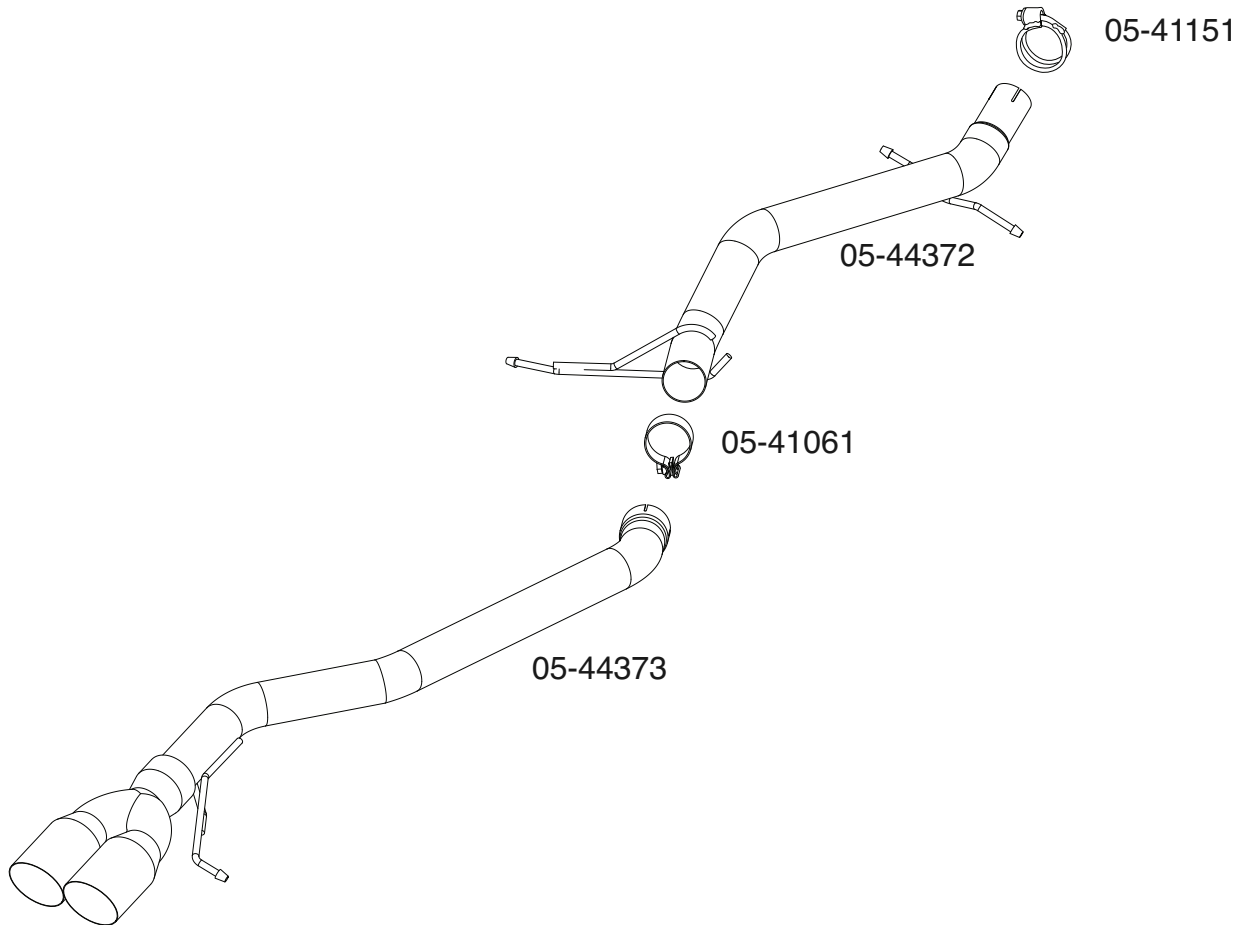

Step 1: (Read Instructions prior to installation) Remove your stock exhaust from the rear of your vehicle working your way forward. It will be necessary to cut the pipe to clear the rear axle. Do not cut the pipe after the cat; you will be using this slip connection.

Step 2: For faster installation spread the new exhaust components along the side of your vehicle according to the diagram shown.

Step 3: Install the Mid-pipe assembly using the existing isolation mounts and the supplied 2-5/8" wire clamp provided.

Step 4: Install the Over axle tailpipe using the existing isolation mounts and the supplied 2-1/2" band clamp.

Your installation is now complete. (It is recommended to retighten all parts after 50-100 miles)

NOTE:

- aFe recommends that the tailpipe be at least 1/2"-1" away from any body panels to avoid heat related body damage. **Tighten and secure.**
- If additional clearance is needed, the soft aluminum heat shield can be reshaped at any points of contact.

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. **aFe recommends professional installation on our products.**