




INSTALLATION INSTRUCTIONS

MAKE: FORD
MODEL: MUSTANG
YEAR: 2005-2009
ENGINE: V6-4.0L


**Cat Back Dual Exhaust
Stainless Steel
49-43047**

Note: Requires V8 rear bumper cover (P/N 5R3Z17K835BAA) or cutting of OE rear bumper cover

aFe recommends professional installation on our products.

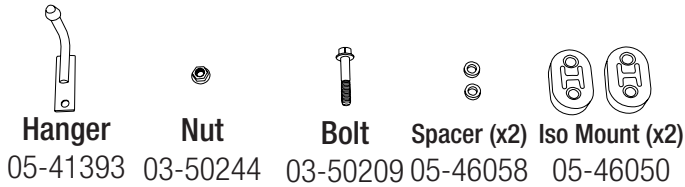

Hanger 05-41393
Nut 03-50244
Bolt 03-50209
Spacer (x2) 05-46058
Iso Mount (x2) 05-46050

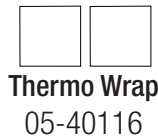

Thermo Wrap
05-40116



Nut
03-50208



Front Mid Pipe
05-44741



Band Clamp
05-41061



Band Clamp
05-41061



Left Mid Pipe
05-44742




Right Mid Pipe
05-44743



Band Clamp
05-41061




Band Clamp
05-41061

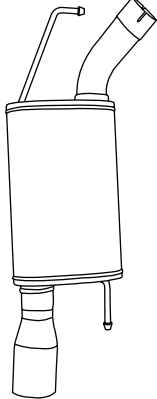

Left Side Tail Pipe
05-44745



Zip Ties (x4)
05-60167

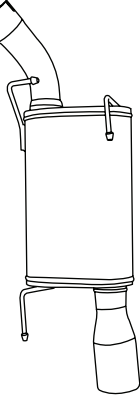

Right Side Tail Pipe
05-44747

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Step 1: (Read Instructions prior to installation) Secure vehicle on jack stands (Refer to your manual for specified jack stand positions).

Step 2: Loosen stock muffler band clamp and remove the (x3) muffler rubber hanger mounts off chassis, then remove stock muffler section.

Step 3: Loosen the band clamp securing the stock mid pipe to the catalytic converter pipes and remove stock mid pipe.

Step 4: Remove rubber hanger mounts off the stock muffler section and transfer onto the aFe right side muffler section.

Step 5: Install the supplied 7/16-14 x 2 1/2" length flange bolt, (x1) rubber hanger mount, (x2) aluminum spacers and 7/16-14 flange nut to the chassis and tighten.



Step 6: Install the supplied hanger rod assembly, (x1) rubber hanger mount and 8 x 1.25 bolt to the chassis and tighten.



Step 7: Install the (x2) 3"x3" heat shield adhesive on the fuel line using (x4) zip ties.



Step 8: Install the aFe Front Mid Pipe using the original band clamp from step 4 but do not tighten.

Step 9: Using (x2) aFe band clamps, install the left and right side aFe Mid Pipes but do not tighten the band clamps.

Step 10: Using (x1) aFe 2.5" band clamp, install the right side aFe Muffler onto the chassis and right side mid pipe. Tighten the rubber hanger mounts back on the chassis but do not tighten the band clamp.

Step 11: Using (x1) aFe 2.5" band clamp, install the left side aFe Muffler onto the newly installed rubber hanger mounts and onto the left side mid pipe but do not tighten.

Step 12: Align the aFe Exhaust System and then tighten all band clamps. Re-check all your work. Check system and retighten after 150 miles.

Note: It is normal for your exhaust system to emit smoke for the first few minutes upon initial start-up.