




INSTALLATION INSTRUCTIONS

MAKE: Volkswagen
MODEL: Jetta TDI
YEAR: 2011-2012
ENGINE: L4-2.0L
WHEELBASE: 101.5" to 104.4"

2.5" Cat-Back
49-46401 (409 SS)
Cutting is Required

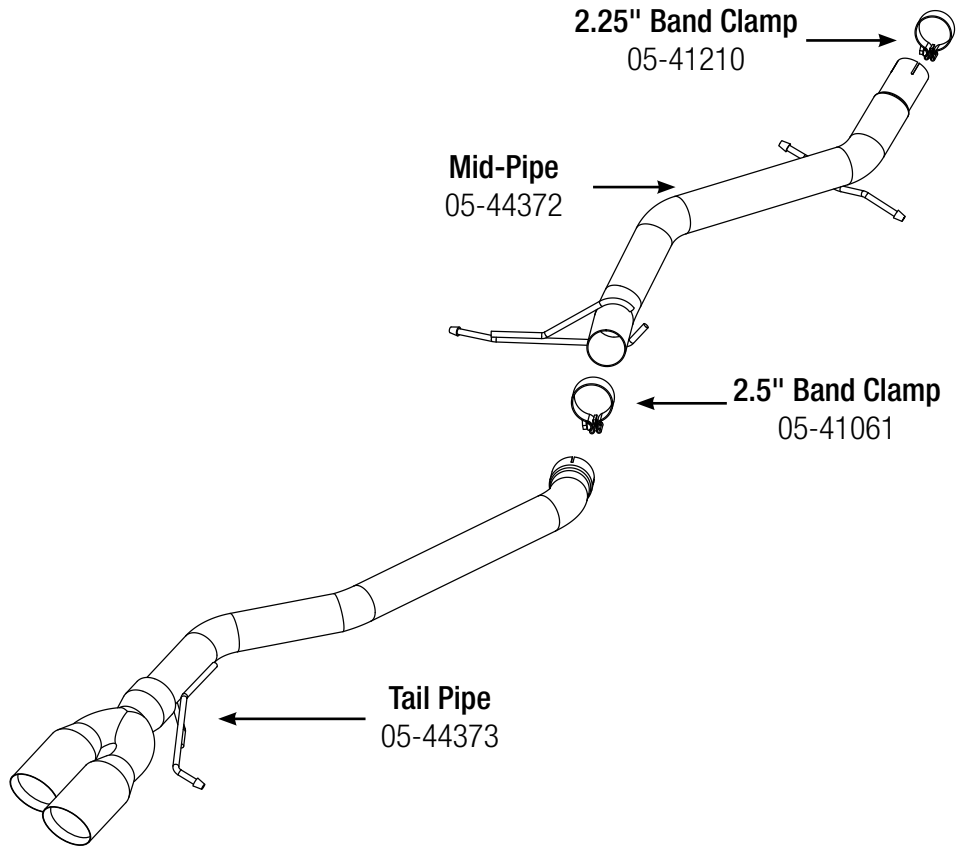

Step 1: (Read Instructions prior to installation) Remove your stock exhaust from the rear of your vehicle working your way forward. It will be necessary to cut the pipe to clear the rear axle. Do not cut the pipe after the cat; you will be using this slip connection.

It is recommended to not fully tighten the clamps until the entire system has been installed.

Step 2: For faster installation spread the pieces of the exhaust along side of your vehicle according to the diagram shown.

Step 3: Install the Mid-pipe assembly using the existing isolation mounts and the supplied 2.25" band and clamp provided.

Step 4: Install the Over axle tailpipe using the existing isolation mounts and the supplied 2.5" band clamp.

Step 5: Now fully tighten the turbo band clamp. Your installation is now complete. It is recommended to re-tighten all exhaust components after the first 50-100 miles.

NOTES:

- aFe recommends that the tailpipe be at least 1/2"-1" away from any body panels to avoid heat related body damage. **Tighten and secure.**

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. **aFe recommends professional installation on our products.**