




## INSTALLATION INSTRUCTIONS

MAKE: DODGE  
MODEL: RAM 1500  
YEAR: 2019  
ENGINE: V8-5.7L

**Exhaust Tip Upgrades**  
49C42073-B (Black Tip)  
49C42073-P (Polished Tip)

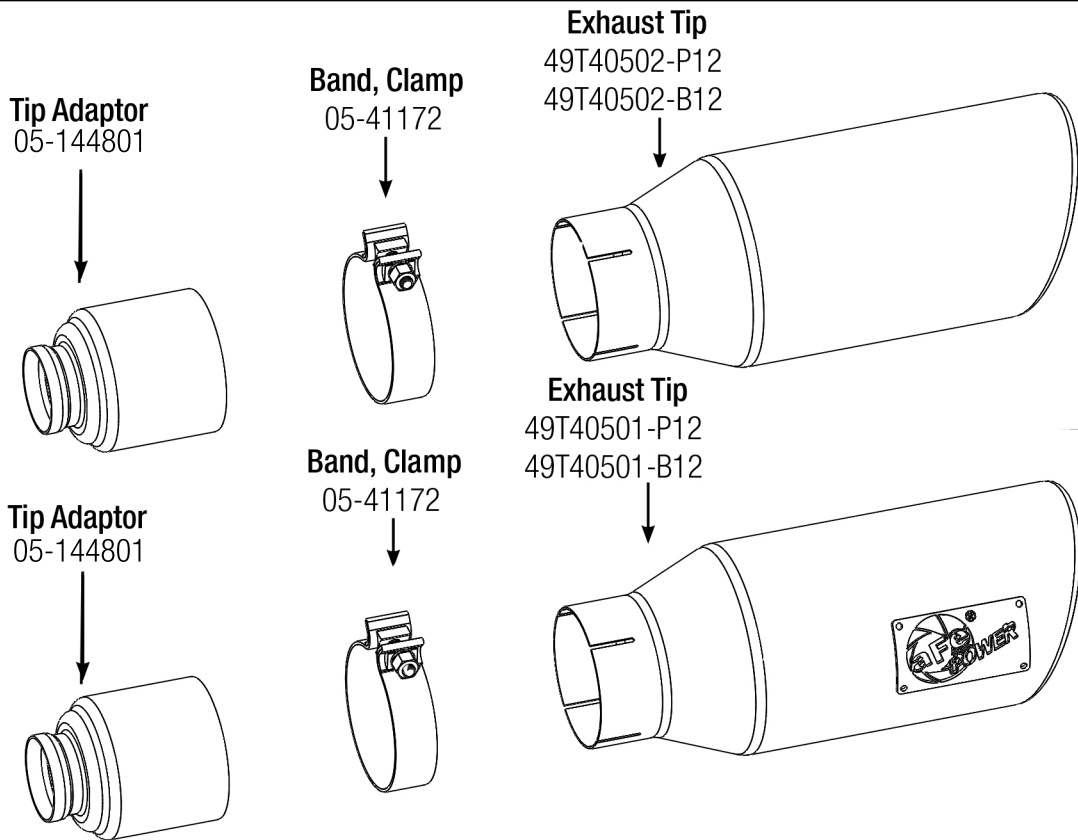

- Step 1:** (Read instructions prior to installation.) For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
- Step 2:** Remove the O.E. exhaust tips by loosening the ball clamp and sliding the tip off.
- Step 3:** Remove the O.E. ball clamp from the O.E. tip by prying up on the locking tab. Then slide the clamp off.
- Step 4:** Install the O.E. ball clamp onto the aFe POWER Tip Adaptors. Then install the Tip Adaptors onto the O.E. exhaust.
- Step 5:** Install the aFe POWER Tips onto the Tip Adaptors using the provided 4" clamp.
- Step 6:** It is recommended to re-tighten all clamps and hardware after 50-100 miles.

**Caution:** Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. **aFe recommends professional installation on our products.**

Learn more about performance exhaust systems we have.