



Intake Kit Installation Instructions: 05-15 Nissan Frontier/ Xterra & 05-12 Pathfinder 4.0L V6


Kit Part #	54-10492/ 51-10492	Tools Required	Parts List:	
Make:	Nissan	5/16" nut driver	1 Air Filter Replacement P/N (24-91034 or Pro Dry S™ 21-90047)	2 Spacer nylon
Model:	Frontier, Xterra	Slotted screwdriver	1 Intake tube	1 Gasket MAF sensor
Engine:	4.0L V6	10mm socket or wrench	1 Intake housing	1 Trim seal 3/4" Bulb (26.5")
Year:	2005-2015	Ratchet and extension	2 Screw M6x1x25	1 Coupler 3.5"x4"
Make:	Nissan		2 M6 washer	2 Clamps #060
Model:	Pathfinder		2 Washer wavy M6	
Engine:	4.0L V6		2 M6 nut	
Year:	2005-2012		2 Phillips screw M4x.7x8"	



Step 1
Complete kit. Please verify all components are present prior to beginning installation.



Step 2
Complete stock intake.

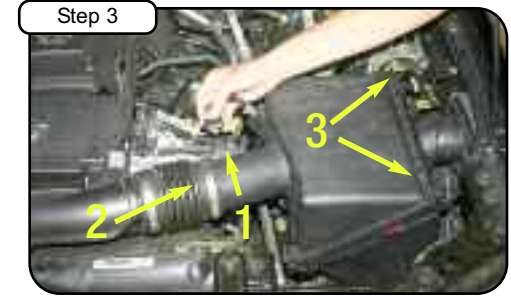

Step 3
Disconnect the MAF sensor (1). Loosen the hose clamp on the air box (2), and unclip the upper portion of the air box (3).



Step 4
Remove the upper portion of the air box and the factory air filter.



Step 5
Remove the 10mm bolt on the side of the air box set aside for later use. Lift the lower air box up and out of the engine bay.



Step 6
Transfer the rubber vibration mounts located on the bottom of the air box over to the new housing.



Step 7
Place the rubber trim seal along the edge of the housing. Lower the housing into the engine bay secure housing with the bolt removed in step 5.



Step 8
Place the coupler on to the intake tube. Do not tighten clamps at this time.



Step 9
Slide the intake tube assembly into the housing. Secure the tube to the housing with the supplied M6 hardware. Tighten and secure the hose clamp.



Step 10
Carefully remove the MAF sensor from the OEM air box lid.



Step 11
Transfer the MAF sensor to the aFe intake tube. Secure with the supplied gaskets, spacers, and screws. Make sure you pay attention to the direction of the arrow on the MAF sensor.



Step 12
Install the pre oiled air filter. Do not use any grease or oil. Secure with the provided clamp. Make sure you tighten all clamps and check all electrical connections. Re check periodically.



Step 13
Place enclosed CARB EO sticker on a clean/smooth surface on or near the intake system. EO identification label is required in passing the smog check inspection. Your installation is now complete.