





Intake Kit Installation Instructions: 1991-2001 Jeep Cherokee (XJ) I6-4.0L w/ABS* Stage 2


Kit P/N: 51/54-11552-1	Tools Required: 5/16" nut driver Flat head screwdriver Phillips screwdriver 10mm socket or wrench 12mm socket or wrench Ratchet w/extension	Parts List: 1 Air filter (Pro-5R™ 24-30018 or Pro Dry S™ 21-30018) 1 Housing 1 Coupler, reducer elbow 1 Tube, intake 1 3/4" trim seal @ 14.5" L 1 3/4" trim seal @ 8" L 1 Isolation mount M6 2 Washer, flat M6	2 Washer, wavy M6 2 Nut, M6 1 Clamp, #044 1 Clamp, #052 1 Grommet, rubber 1 Fitting, plastic 1/2" 1 1/2" hose @ 12"L
*Also fits non-ABS version			

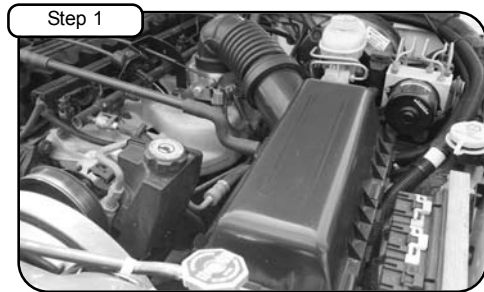


Step 1
Complete Stock Intake.
Disconnect battery before install.

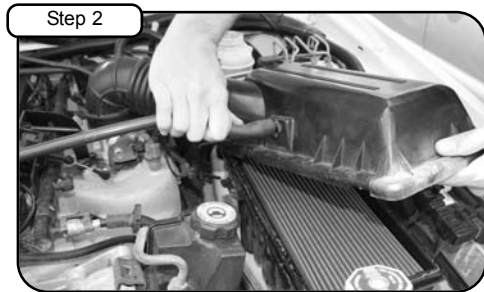


Step 2
Unclip upper half of air box and pull back crankcase line.

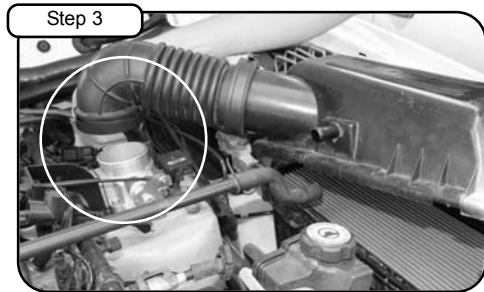


Step 3
Pull back clamp clip on Throttle Body side of intake tube and remove. Remove air filter.

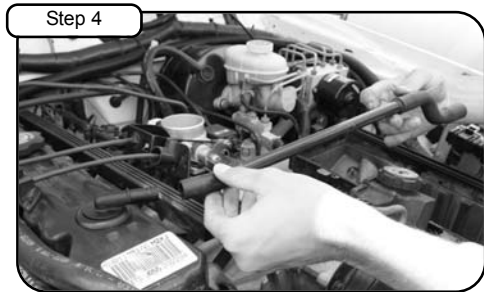


Step 4
Remove crankcase line from valve cover.

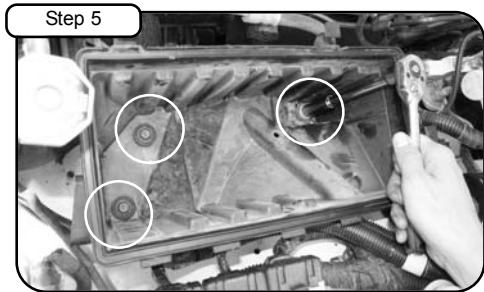


Step 5
Loosen the 2 bolts and 1 nut holding in bottom half of air box using 12mm socket or wrench. Save all hardware for later use (see step 9).

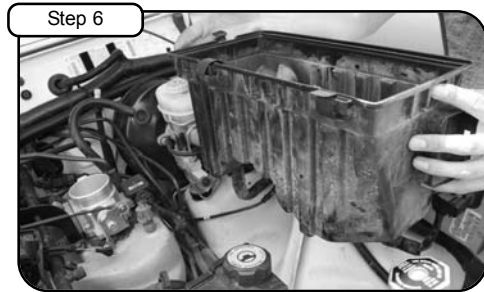

Step 6
Remove air box from vehicle.

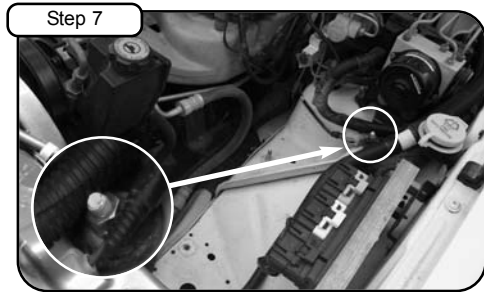

Step 7
Loosen nut holding in ECU bracket with 12mm socket or wrench and remove. Save for later use (see step 10).

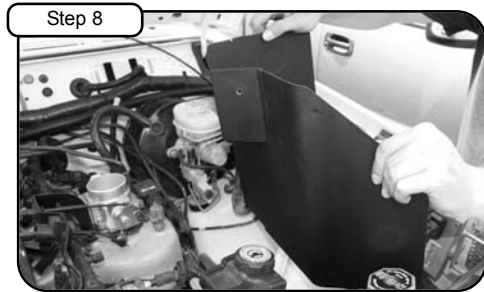


Step 8
Place housing in vehicle and position holes of housing in factory positions.




Step 9
Secure housing using the 2 bolts and 1 nut from step 5 and tighten using 12mm socket or wrench.



Step 10
Re-install nut from step 7 to secure back of housing tab to ECU bracket.

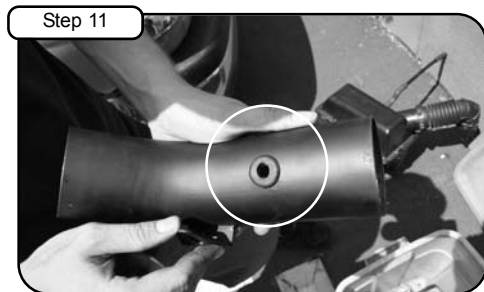


Step 11
Install grommet in new intake tube.

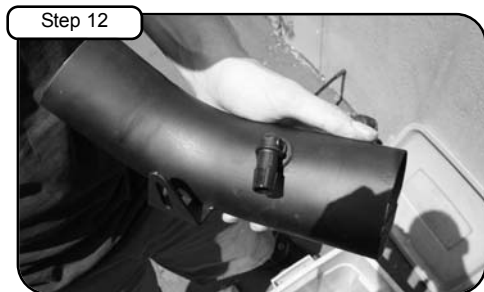


Step 12
Install 1/2" fitting in grommet.



Step 13
Install 1/2" hose on fitting.

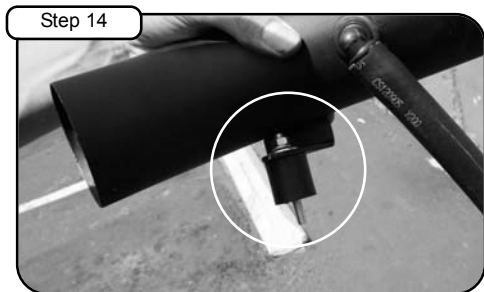

Step 14
Install isolation mount to bracket with flat/wavy washers and nut provided. Do not tighten.

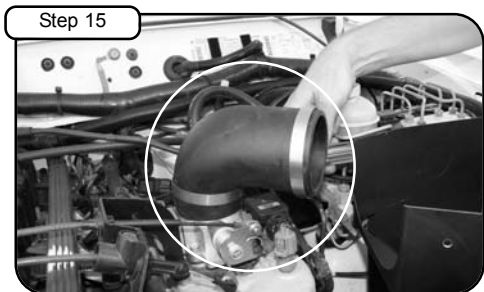

Step 15
Install reducer elbow coupler to Throttle Body with clamps and nut provided. Do not tighten.
Turn page over and continue to page 2 →



Intake Kit Installation Instructions: 1991-2001 Jeep Cherokee (XJ) I6-4.0L w/ABS* Stage 2

Accessories Available:




Restore Kits

- 90-50001 Blue Aerosol
- 90-50501 Blue Squeeze
- 90-59999 Pro Dry S™ Cleaner



Pre-filter 28-1008x



Replacement Air Filter:



Pro-5R™ 24-30018 Blue Media



Pro Dry S™ 21-30018 White Media


Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50001 blue oil aerosol, aFe P/N: 90-50501 blue squeeze bottle oil, aFe P/N: 90-59999 Pro Dry S™ cleaner only.) Pro Dry S™ cleaning: see cleaning instruction sheet 06-00074.

Step 16




Insert tube in coupler. Place isolation mount in hole of housing.

Step 17

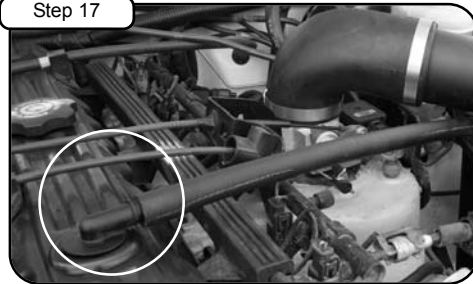


Attach 1/2" hose to crankcase engine side.

Step 18

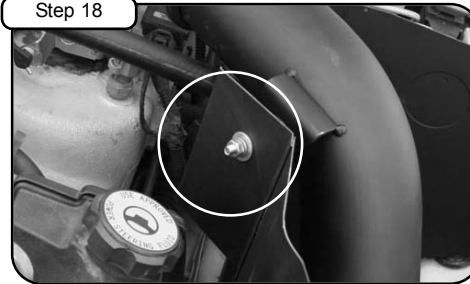


Install flat/wavy washers and nut to isolation mount. Tighten both sides with 10mm socket or wrench.

Step 19

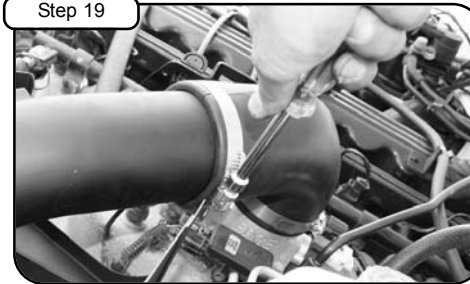

Tighten all clamps using 5/16" nut driver.

Step 20

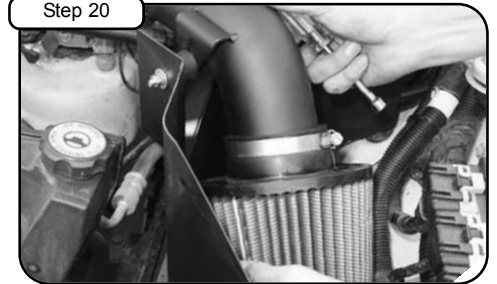

Install air filter on tube and tighten using 5/16" nut driver.

Step 21



Install trim seal on housing. Your installation is now complete. Make sure you tighten all clamps and check all electrical connections periodically. Thank you for choosing aFe!