



## Intake Kit Installation Instructions: Golf/Jetta 09-12 L4-2.0L TDI

Kit Part #	Stage 1	Tools Required:	Part List:	Value Pack Includes:
51-54-81711 75-81715 75-81711-0V Value Pack		5/16" nut driver or slotted screwdriver Phillips screwdriver 1/2" open end wrench Medium size pliers	1 Air Filter <i>Pro-SR™</i> 24-35507 <i>Pro Dry S™</i> 21-35507 or <i>Pro GUARD 7™</i> 72-35507 1 Tube, Intake 1 Cover 1 Coupling (05-00664) 2 Clamp #048 4 Screws, 1-1/2" 1 Trim, Rubber 21.25" 1 Nipple, Brass 1/4" x 1.8"NPT	1 <i>Pretfilter</i> 1 <i>Pro GUARD 7™ Restore kit</i> 1 <i>Pro Dry S™ Air filter</i>



Complete stock intake.



Remove the (8) screws holding the stock cover to the housing.




Disconnect the MAF sensor and unplug the breather tube that are located on the top side of the stock intake tube.



With a pair of pliers, loosen the clamp holding the MAF sensor to the stock intake tube and remove the cover and sensor from the vehicle.



Remove the stock air filter and plastic grill from the factory air box.

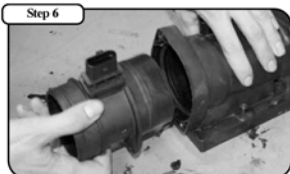

Using a phillips screwdriver, remove the MAF sensor from the stock cover.



Re-insert the MAF sensor into the stock intake tube.



Insert the aFe intake tube along with the coupling and clamps onto the MAF sensor. Secure the intake tube using the provided screws.



Install the aFe air filter onto the aFe intake tube.



Tighten the Brass Nipple using either a box wrench or a deep socket.



Push the breather tube onto the brass nipple. The special fitting does not require a clamp.




Tighten all clamps.



Place trim seal on the bottom side of the intake cover.



Secure the cover to the housing by tightening two of the stock screws using a phillips screwdriver. Use one of the screws provided for the tab that sits on the intake tube.

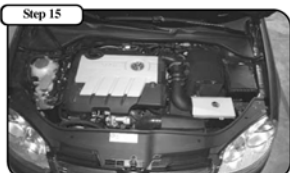

**Your Stage 1 Intake is now complete.** Make sure to tighten all clamps and check all electrical connections. Re-tighten clamps after a few hours of Operation. Thank you for choosing aFePower!

**Note** Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore kit" (aFe P/N 90-50001 blue oil aerosol, aFe P/N: 90-50501 blue squeeze bottle oil, aFe P/N: 90-59999 Pro Dry S™ Cleaner, aFe P/N: 90-50500 Pro GUARD 7™ gold squeeze bottle oil, or aFe 90-50000 gold aerosol oil)  
Filter Replacement: Magnum FLOW P/N: *Pro-SR™* #24-35507 (black w/ blue media) or *Pro Dry S™* #21-35507 (black w/ white media) or *Pro GUARD 7™* #72-35507 (black with gold media)

Buy quality performance air intake systems in our online store.