




# Intake Kit Installation Instructions: 2005 Dodge Magnum/ Chrysler 300C V8-5.7L

<b>Kit Part #</b>	54-10712	<b>Tools Required:</b>	<b>Part List:</b>	1 Trim seal 7/16" bulb (21")
<b>Make:</b>	Dodge	5/16" nut driver or slotted screwdriver	1 Air filter (replacement # 24-91031)	3 Screw M6 x 1 x 25
<b>Model</b>	<b>Year</b>	<b>Engine</b>	1 Intake tube	6 Washer Flat M6
Magnum	2005	V8-5.7L	1 Intake housing	3 Washer Split M6
<b>Make:</b>	Chrysler		1 Coupler 3.5 x 4.25 x 2.4L	1 Grommet temp. sensor
<b>Model</b>	<b>Year</b>	<b>Engine</b>	1 Clamps #072	
300C	2005	V8-5.7L	1 Clamps #056	
			2 Clamps #008	
			1 Vent hose 5/8 x 15"	
			3 M6 Nut	

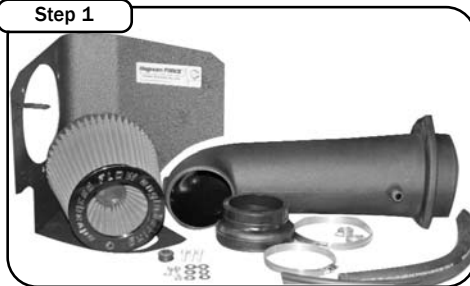

Step 1  
Complete kit



Step 2  
Complete stock intake.



Step 3  
Disconnect negative terminal from battery. Lift off Hemi engine cover. Remove the Temp.Sensor on the side of the intake duct. Be careful not to damage sensor



Step 4  
Loosen the two hose clamps on the intake duct and remove duct form engine bay.



Step 5  
Remove the 10mm screw securing the airbox to the vehicle. Save for re-use later.




Step 6  
Remove the 5/8" breather hose on the side of the valve cover. Remove airbox assembly out of the engine bay.



Step 7  
Slide the intake duct into the housing make sure you line up the mounting holes correctly.




Step 8  
Lower housing and tube assembly into engine bay. Make sure the tab on the back of the housing slides into the slot on the side of the radiator reservoir. Be shure to clear rubber hose near bottom of housing.

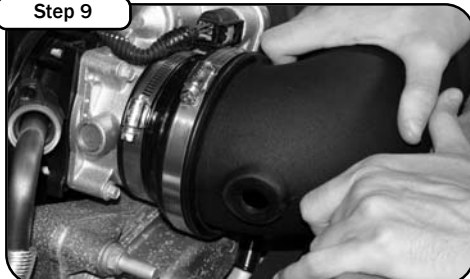


Step 9  
Place coupler and hose clamps on the throttle body. Position tube into coupler and tighten the clamps down.



Step 10  
Align the mounting holes on the tube and the housing. Secure the assembly with the provided M6 bolts washers and nuts.

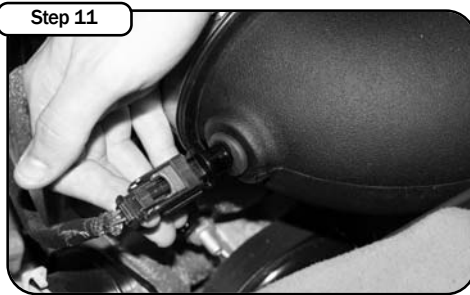

Step 11  
Insert the rubber grommet into the side of the intake duct and re-connect the Temperature Sensor.

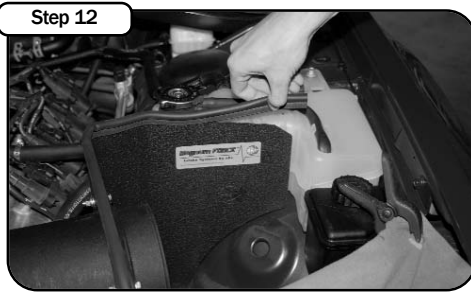

Step 12  
Install trim seal along the edge of the housing. Start at one end and work your way around the housing.



Step 13  
Install and tighten your pre-oiled filter. Do not use any grease or oil.



Step 14  
Place enclosed CARB EO sticker on a clean/smooth surface on or near the intake system. EO identification label is required in passing the Smog Check inspection. Your installation is now complete. Tighten all connections and clamps. Re-check after a few hours.

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil or aFe P/N: 90-50000 gold oil aerosol, or aFe P/N: 90-50500 gold squeeze oil).  
Filter Replacement: Magnum FLOW PN: 24-91031 (black w/blue media).

Buy quality performance air intake systems in our online store.