





Intake kit Installation Instructions: 05-08 Dodge Magnum/06-10 Charger/ 09-10 Challenger/05-10 Chrysler 300 V6-3.5L


Kit P/N: 51/54-10922	Tools Required: 9/16" socket or wrench 10mm socket or wrench 5/16" nut driver Flat head screwdriver Ratchet w/ extension 5/32" allen key T-20 torx bit (included)	Parts list: 1 Air filter (<i>Pro 5-R</i> ™ 24-40011 or <i>Pro Dry 5</i> ™ 21-40011) 1 Housing 1 Tube, rotomold 1 Coupler, hump 3" x 3" 2 Clamps, #048 2 Screw, hex M6 x 1 x 25	2 Washer, flat M6 2 Nut, hex M6 2 Washer, wavy M6 2 Grommet, rubber 1 Fitting, plastic 1/2" 1 7/16" trim seal @ 26"L
Make: Dodge			
Model: Year: Engine: Magnum '05-'08 V6-3.5L Charger '06-'10 V6-3.5L Challenger '09-'10 V6-3.5L			
Make: Chrysler			
Model: Year: Engine: 300 '05-'10 V6-3.5L			

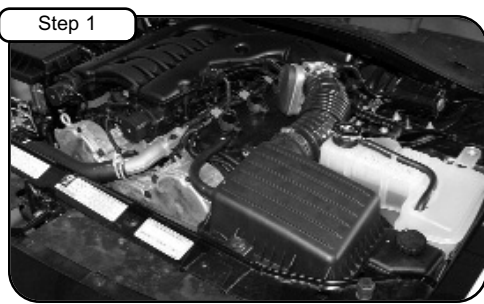


Step 1 Complete Stock Intake.

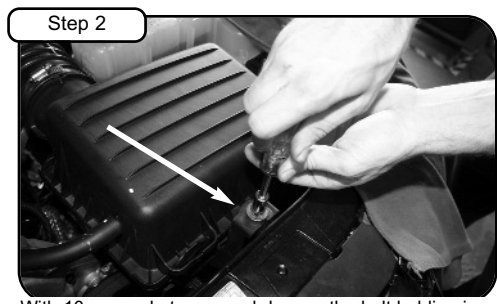


Step 2 With 10mm socket or wrench loosen the bolt holding in upper half of OE air box. (Save for step 8)

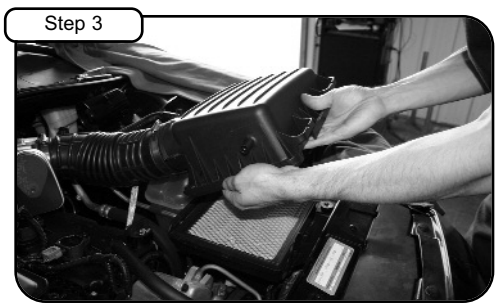


Step 3 Disconnect air temp sensor and crank case line. Lift up and pull OE air box out of vehicle.

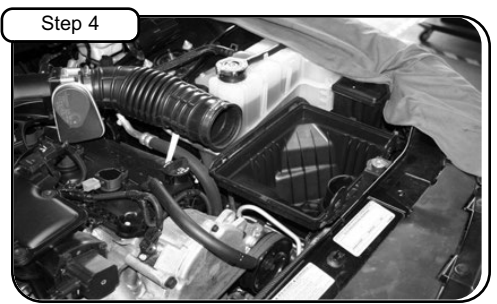


Step 4 Loosen and remove OE intake tube with 5/16" nut driver. Remove bottom air box out of vehicle. Remove air temp sensor.

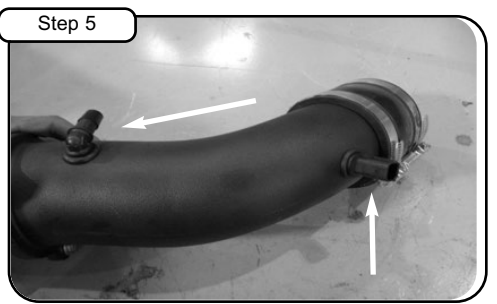


Step 5 Install air temp sensor and 1/2" fitting into new tube with grommet(s) provided. Place hump coupler with clamps provided onto tube.

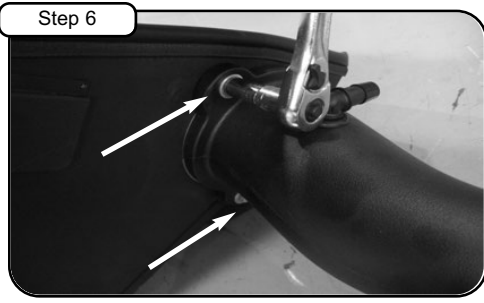

Step 6 Install tube to outside of housing with M6 screws, washers, and nuts provided. Tighten using 10mm socket or wrench. Install trim seal to housing.

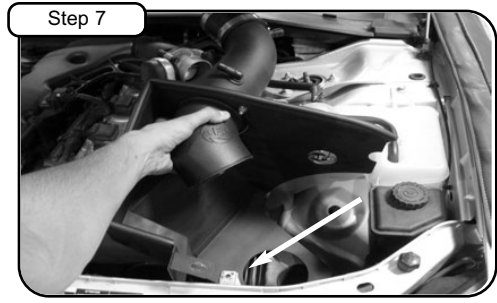


Step 7 Install intake into vehicle. Position housing to tab.

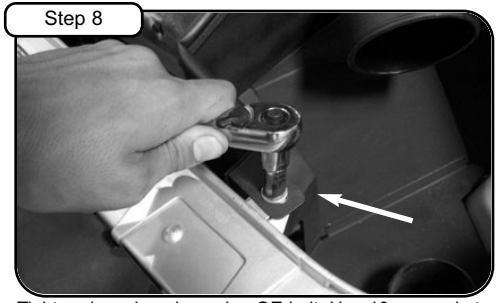


Step 8 Tighten down housing using OE bolt. Use 10mm socket or wrench.




Step 9 Tighten clamps using 5/16" nut driver.

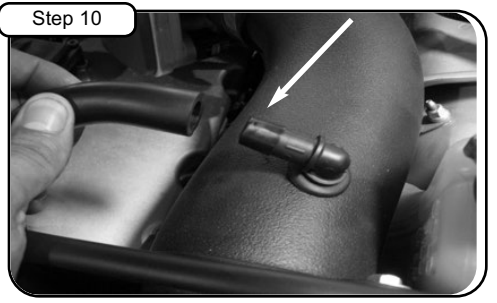

Step 10 Re-connect crank case line to fitting on tube.

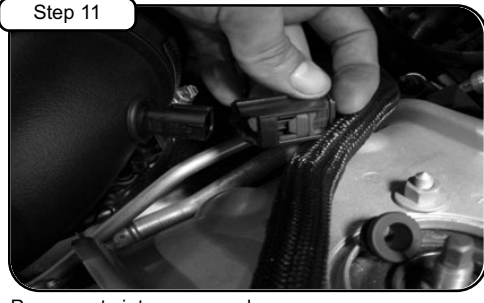

Step 11 Re-connect air temp sensor harness.

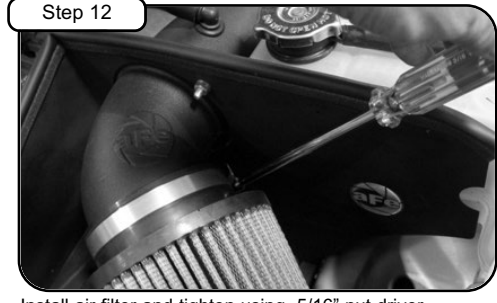

Step 12 Install air filter and tighten using 5/16" nut driver.



Step 13 Place enclosed CARB EO sticker on a clean/smooth surface on or near the intake system. EO identification label is required in passing the Smog Check Inspection. Your installation is now complete. Please check all bolts and clamps periodically. Re-tighten if necessary. Thank you for choosing aFe!

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil)
Filter Replacement: Magnum FLOW PN: 24-40011 *Pro 5-R*™ (black w/blue media) or *Pro Dry 5*™ P/N 21-40011 (black w/white media) *Pro Dry 5*™ cleaning: see cleaning instruction sheet 06-00074

Feel the difference with aFe.

Buy quality performance air intake systems in our online store.