

**advanced FLOW engineering**

**Instruction Manual** P/N: 54-12432 & 51-12432

---

Make: **VW** Model: **Jetta/Golf/Rabbit (MKV)** Year: **2009-2010** Engine: **L5-2.5L**




- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Disconnect the negative battery terminal before proceeding.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
A1	1	Air Filter (Pro 5R)	24-30016 (Blue Media)
A2	1	Air Filter (Pro DRY S)	21-30016 (Grey Media)
B	1	Tube	05-12432B1
C	1	Coupling, Silicone	05-01106
D	1	Grommet	03-50033
E	2	Clamp 048	03-50007

Installation will require the following tools:  
Phillips screw driver, 8mm nut driver, ratchet, extension & pliers

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.

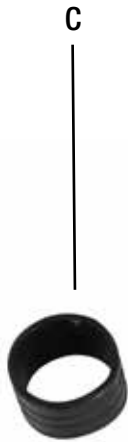



**Refer to Figure A for steps 1-4**

- Step 1: Remove the two screws holding the air scoop in place ① (Picture shows scoop removed).
- Step 2: Unplug the Smog Pump and Crank Case breather ②.
- Step 3: Using pliers, squeeze the pressure clamp open and pull the OE tube from the throttle body ③.
- Step 4: Remove the engine cover by pulling up from the back side near the firewall and work it loose.  
Then pull up on the front side and remove it out of the vehicle ④.



Figure B

**Refer to Figure B for step 5**

Step 5: Using pliers, squeeze the pressure clamp open and pull off the OE tube off ⑤  
(Picture shows tube already removed).

**Figure C****Refer to Figure C for steps 6-9**

Step 6: Install the straight coupling onto the throttle body with the clamps provided (6) do not tighten.

Step 7: Install the grommet onto the intake tube bracket (7) .

Step 8: Install the intake tube onto coupling and push the intake tube bracket with grommet into factory mounting bracket (7) .

Step 9: Re-connect smog pump and crank case breather (8) .

**Figure D****Refer to Figure D for steps 10-14**

- Step 10: Remove the driver side fog light duct. This will allow you to access the air filter to tighten it.
- Step 11: Remove the driver side splash pan to slide the aFe filter onto the intake tube.
- Step 12: Through the fog light duct, tighten your aFe filter.
- Step 13: Re-install the fog light duct.
- Step 14: Re-install the driver side splash pan.



Figure E

**Refer to Figure E for steps 15-16**

Step 15: Tighten all clamps and bolts, and re-install the engine cover.

Step 16: Your installation is now complete. Thank you for choosing aFe Power!





Pro DRY S Air Filter



P/N: 21-30016

Pro 5R Air Filter



P/N: 24-30016

Pro 5R Restore Kit Aerosol



P/N: 90-50001

Pro 5R Restore Kit Squeeze



P/N: 90-50501

Pro DRY S Restore Kit



P/N: 90-59999

# Warranty

## General Terms:

- aFe warrants their products to be free from manufacturer's defects due to workmanship and material.
- This warranty applies only to the original purchaser of the product and is non-transferrable.
- Proof of purchase of the aFe product is required for all warranty claims.
- Warranty is valid provided aFe instructions for installation and/or cleaning were properly followed.
- Proper maintenance with regular inspections of product is required to insure warranty coverage.
- Damage due to improper installation, abuse, unauthorized repair or alteration is not warranted.
- Incidental or consequential damages or cost, including installation and removal of part, incurred due to failure of aFe product is not covered under this warranty.
- All warranty is limited to the repair and/or replacement of the aFe part. To request Return Goods Authorization ("RGA"). Upon receipt of the RGA, you must return the product to the address provided in the RGA, freight prepaid and accompanied with a dated proof of purchase and the RGA. Upon receipt of the defective product and upon verification of proof of purchase, aFe will either repair or replace the defective product within a reasonable time, not to exceed thirty days.

<b>Product Category</b>	<b>P/N Prefix</b>	<b>Warranty duration</b>
Direct OE Replacement Filters	10, 11, 30, 31, 71, 73	Life of the vehicle
Racing Filters	18	1 year
Universal	21, 24, 72, TF	2 years
Air Intake Systems	50, 51, 54, 55, 75, TR, TA, TL	2 years
Exhaust Systems	49	2 years
Intercoolers & Intercooler Tubes	46-2	2 years
Intake Manifolds	46-1	2 years
Differential Cover	46-7	Life of the vehicle
Exhaust Manifolds	46	2 years
Throttle Body Spacers	46-3	2 years
Turbochargers	46-6	2 years*
Fluid Filters	44	90 days
Pre-Filters	28	2 years
Heavy Duty OE Replacement	70	2 years
PowerSports OE Replacement	81, 87	2 years
PowerSports Intake Systems	85	2 years

No other warranty expressed or implied applies nor is any person or advanced FLOW engineering authorized to assume any other warranty. Some States do not allow the exclusion or limitation of incidental or consequential damages or do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

\*See turbocharger warranty for more info

Buy quality performance air intake systems in our online store.