



## advanced FLOW engineering Instruction Manual P/N: 54-72203-SF

Make: Dodge Model: Challenger Year: 2015-2018 Engine: V6-3.6L / V8-5.7L / V8-6.4L HEMI






- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Disconnect the negative battery terminal before proceeding.
- Retain factory parts for future use.

Label Qty.	Description	Part Number
<u>A</u> 1	Air Inlet Duct	05-72203C3

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.

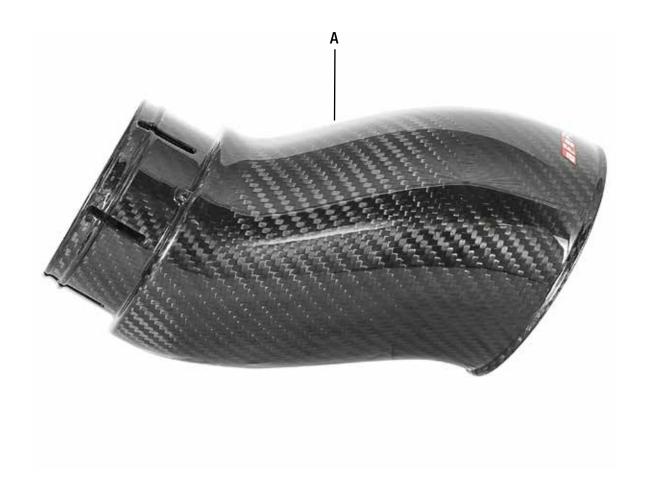






## Refer to Figure A for Steps 1-2

- Step 1: Remove the intake housing of vehicle to access the backside of the headlight.
- Step 2: Slide your hand through the back side of the headlight and push the cap off on the center of the headlight.

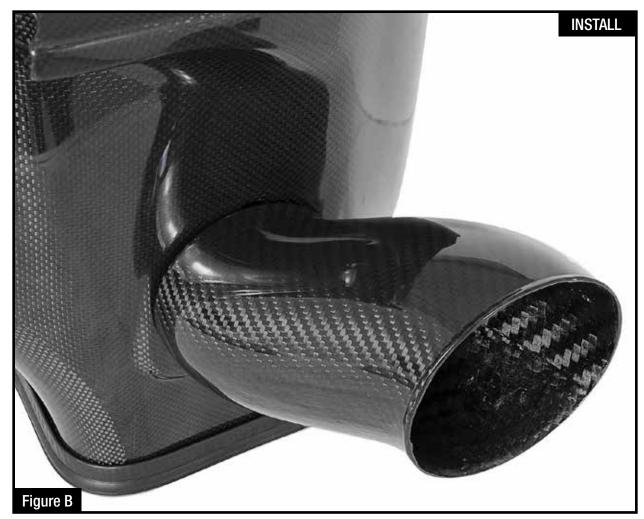

Refer to Figure B for Step 3

Step 3: Connect the inlet scoop to the aFe housing.





**Refer to Figure C for Steps 4-5** 

Step 4: Re-install housing into the vehicle and make sure the inlet scoop connects to the headlight hole. Step 5: Install the other components for the intake per the intake system instruction sheet.

Your installation is now completed.



**Black Series Air Intake** 



P/N: 52-72204-CF

Black Series Air Intake



P/N: 52-72205-CF

Momentum GT Intake



P/N: 51/54-72203

Momentum GT Intake



P/N: 51/54-72202

Momentum GT Intake



P/N: 51/54-72204

Momentum GT Intake



P/N: 51/54-72201