



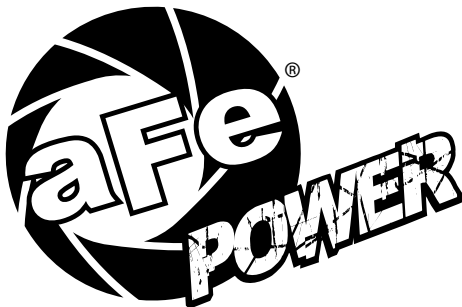

HD
MOMENTUM™

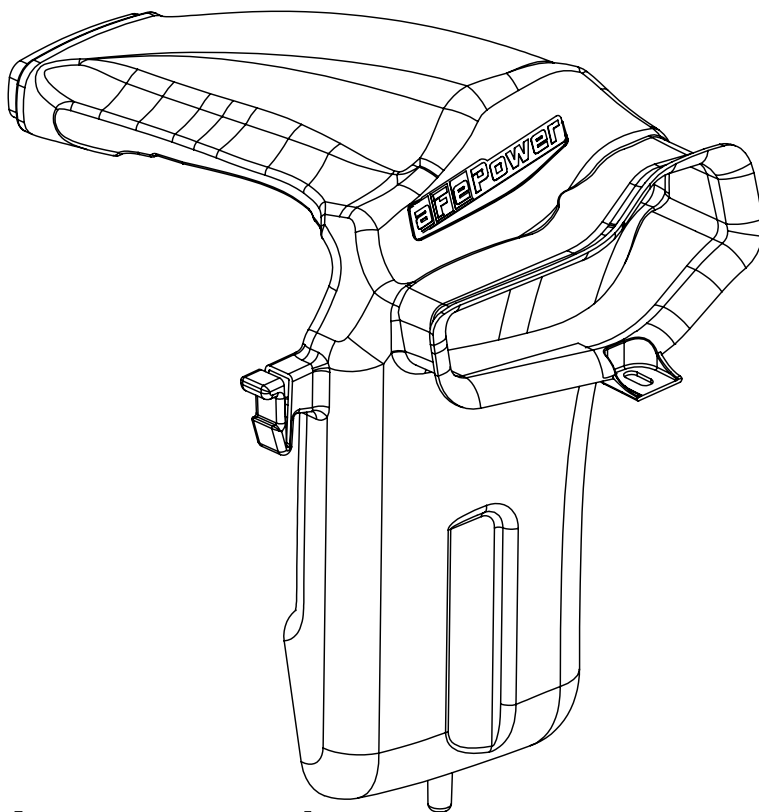

advanced FLOW engineering

Instruction Manual P/N: 54-73006-S

Make: **Ford** Model: **Super Duty F-250/F-350/F-450/F-550** Year: **2017-2019** Engine: **V8-6.7L (td) Power Stroke**



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.

Retain factory parts for future use.

Label	Qty.	Description	Part Number
A	1	Scoop, Rotomold	05-73006B3
B	1	Seal, Trim: 7/16" (8-1/2" in.)	05-00072

Installation will require the following tools:
Panel popper tool.

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.

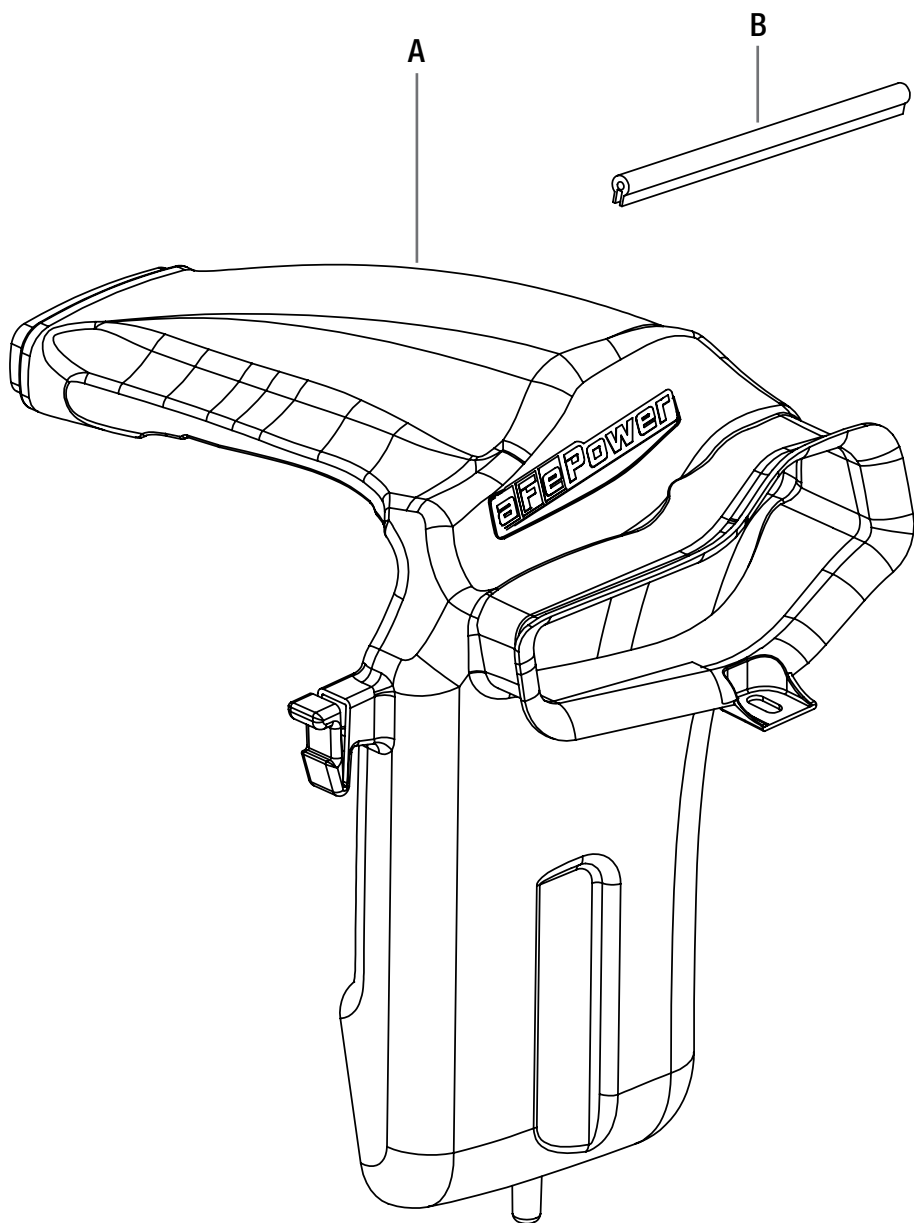




Figure A

Refer to Figure A for Step 1

Step 1: Remove the two push clips securing OE scoop.



Figure B

Refer to Figure B for Step 2

Step 2: Squeeze the two locking tabs inward and remove OE scoop by pulling in upward motion.

**Refer to Figure C for Step 3**

Step 3: Install aFe scoop into Momentum HD housing and then push scoop down until the two tabs lock into place.

NOTE: Make sure scoop is positioned behind the plastic OE radiator panel.



Figure D

Refer to Figure D for Steps 4-5

Step 4: Replace the two OE push clips removed in Step 1.

Step 5: Install supplied trim seal along the top edge of scoop inlet.

Your installation is now complete. Thank you for choosing aFe POWER!



Air Intake System



P/N: 50-73006 (P10R)
51-73006 (PDS)

DPF-Back Exhaust System



P/N: 49-43090-B (Blk Tip)
49-43090-P (Pol Tip)

DP-Back Exhaust System



P/N: 49-03093

Rear Differential Cover



P/N: 46-70022-WL (W/ Oil)
46-70022 (Black)

SCORCHER HD Module



P/N: 77-43020

Engine Oil Cap



P/N: 79-12006