



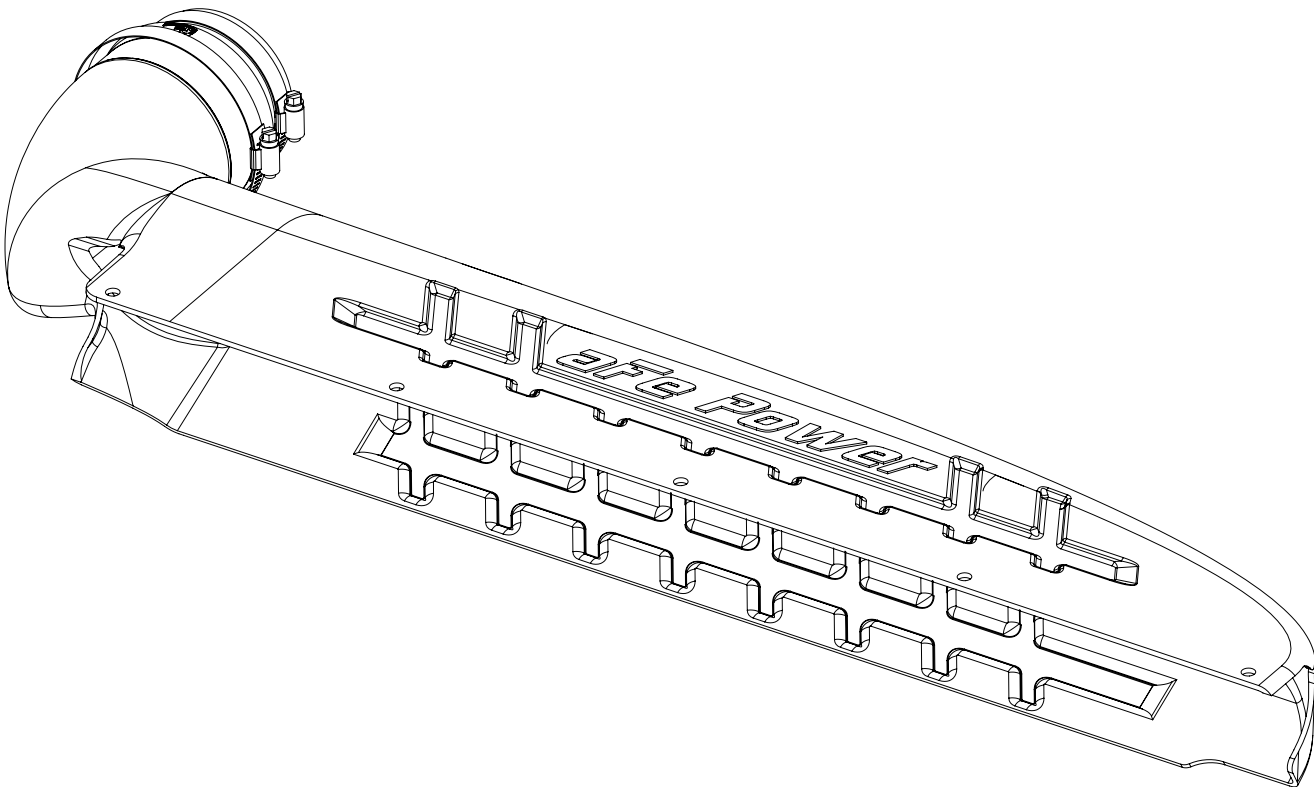

advanced FLOW engineering

Instruction Manual P/N: 54-76012-S

Make: **Toyota** Model: **Tacoma** Year: **2005-2015** Engine: **V6-4.0L**

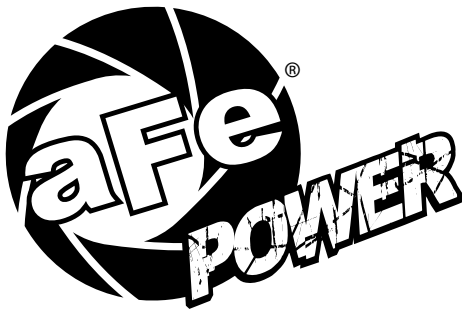

- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.


Retain factory parts for future use.


Label	Qty.	Description	Part Number
A	1	Scoop, Rotomold	05-76012B3
B	1	Coupling, Silicone Hump	05-01386
C	1	Clamp, #052	03-50008
D	1	Clamp, #060	03-50002

Installation will require the following tool(s):

Flathead screwdriver, 8mm nut driver.

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.

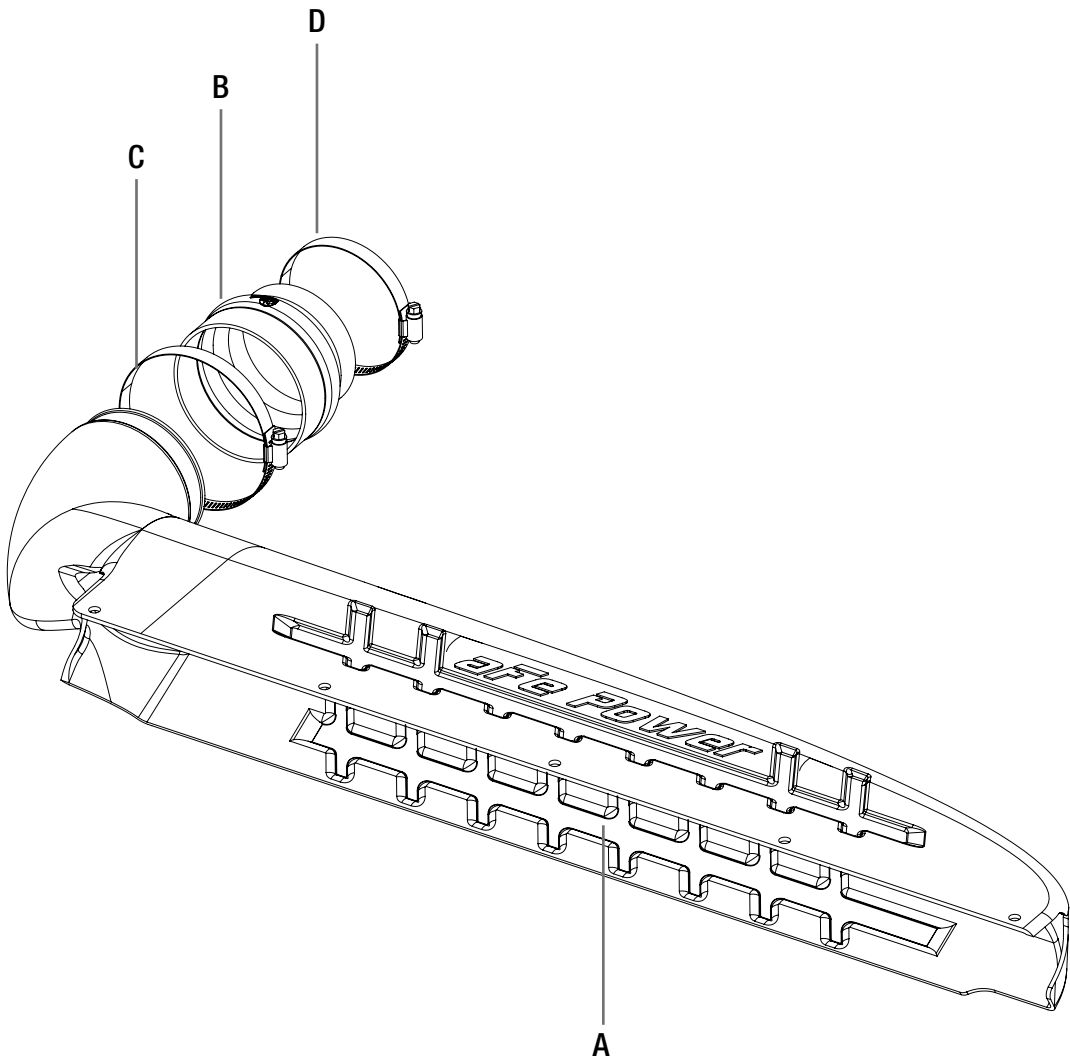

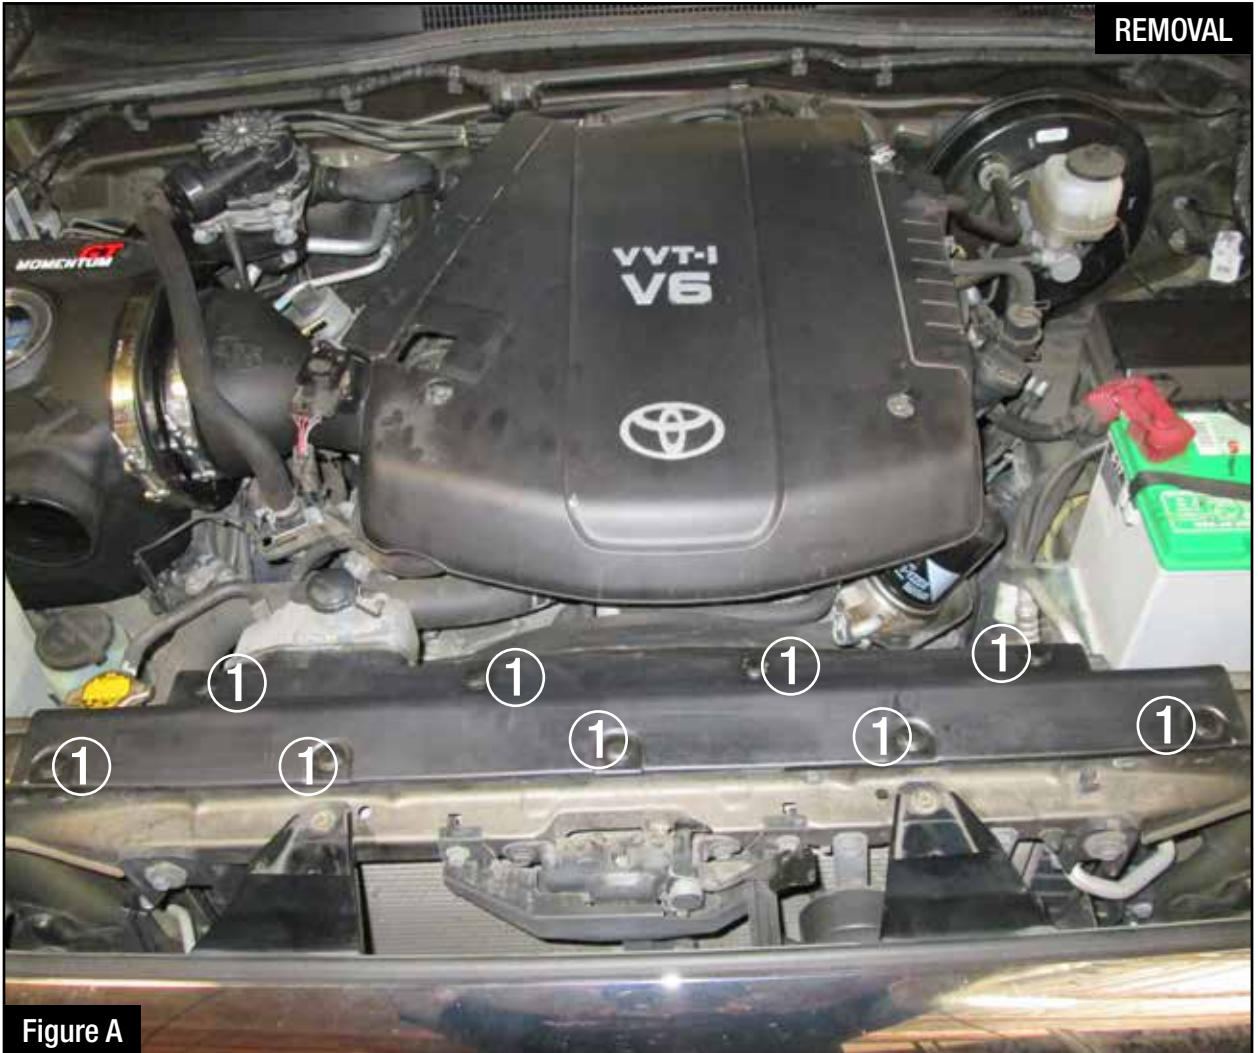

Refer to Figure A for Step 1

Step 1: Using a flathead screwdriver, remove the 9 panel clips (1) securing the plastic radiator support cover by popping up the center pin, then removing the entire clip. Remove the radiator support cover.

NOTE: Be careful not to damage the clips. 5 will be re-used.



Figure B

Refer to Figure B for Step 2

Step 2: Install the supplied silicone coupling (2) with the #060 clamp (3) on to the aFe airbox as shown.

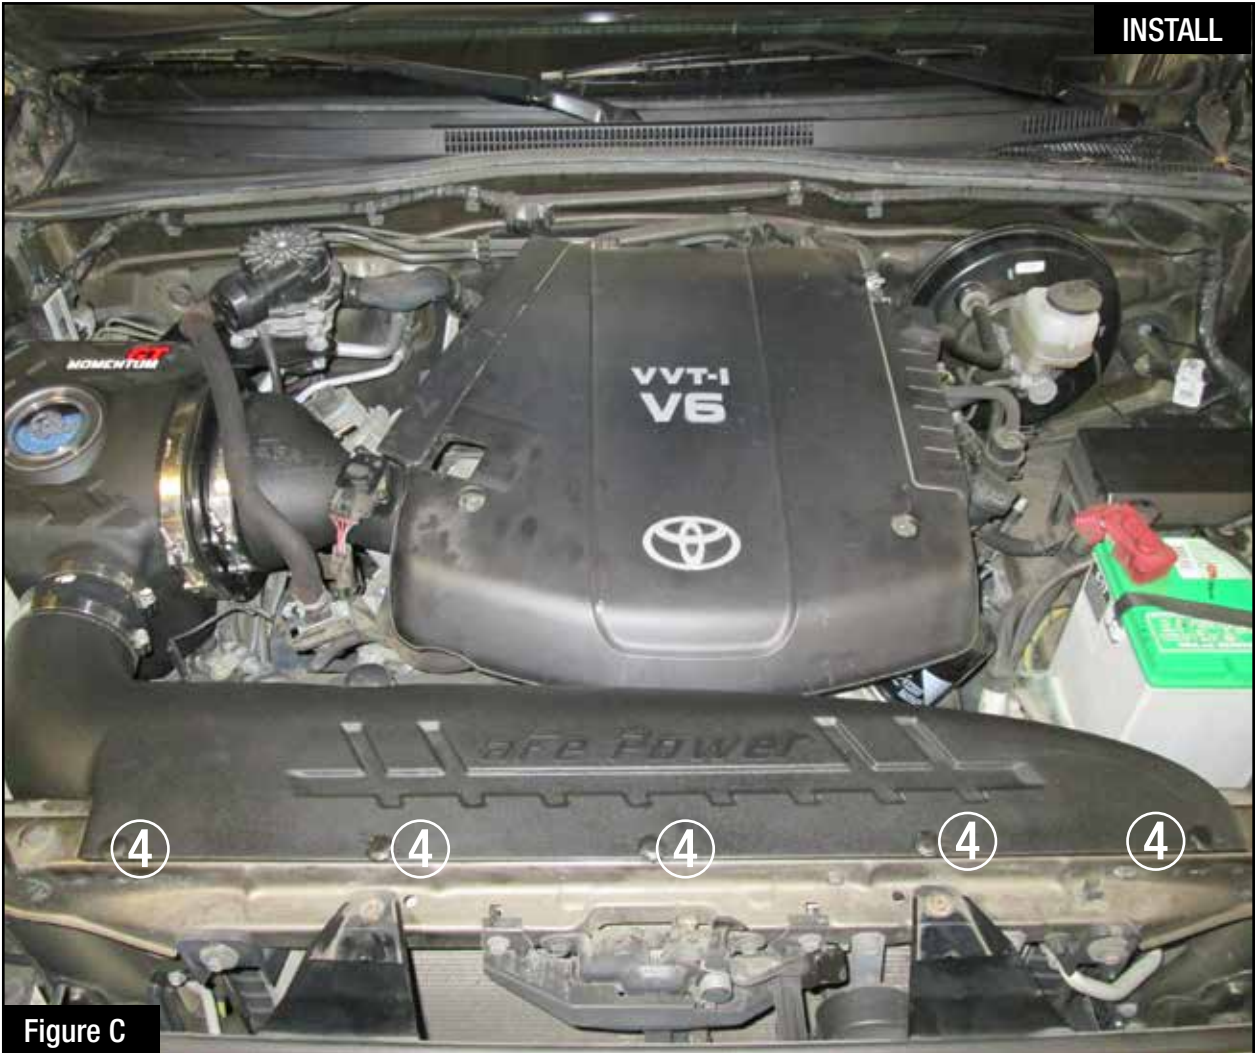


Figure C

Refer to Figure C for Steps 3-4

- Step 3: Place the #052 clamp onto the aFe coupler before installing the aFe Dynamic Air Scoop by lining up the 5 mounting holes ④ on the top of the radiator support, then sliding the scoop outlet into the coupler. Secure the scoop using 5 of the panel clips removed in Step 1.
- Step 4: Confirm that the coupling is seated all the way around both the airbox and scoop before tightening both clamps using an 8mm nut driver. Your installation is now complete.

NOTE: Check all clamps and connectors after 100-200 miles.



Momentum GT Intake



P/N: 54-76012 (P5R)
51-76012 (PDS)
75-76012 (PG7)

Momentum GT Intake



P/N: 54-76004 (P5R)
51-76004 (PDS)
75-76004 (PG7)

Throttle Body Spacer



P/N: 46-38002

Sway-A-Way Coilvers



P/N: 101-5600-15
(Front w/ Remote Reservoir)

Side-Exit Exhaust System



P/N: 49-46033-B (Blk Tips)
49-46033-P (Pol Tips)

Cat-Back Exhaust System



P/N: 49-46013 (Pol Tip)

Oil Filter



P/N: 44-LF014

Sway-A-Way Shocks



P/N: 102-0052-01 (Rear)

Exhaust Y-Pipe



P/N: 48-46006

Headers + Y-Pipe Combo



P/N: 48-46003-1YC

Headers



P/N: 48-46003 (Street)

Sway-A-Way Coilvers



P/N: 101-5200-03 (Front)