





Super Stock Intake Kit Installation Instructions: 2000-2004 Porsche Boxster/ Boxster S H6-2.7L / 3.2L

Kit Part #	55-10720	Tools Required	Part List:
Make:	Porsche	5/16" nut driver	1 Air filter (PN 30-10090)
Model:	Boxster/ Boxster s	Slotted screwdriver	1 Intake tube
Engine:	2.7L/ 3.2L H6		1 Coupler Straight 3.25"x2" red
Year:	2000-2004		1 Coupler Straight 3"x2" red
			4 Clamp #052

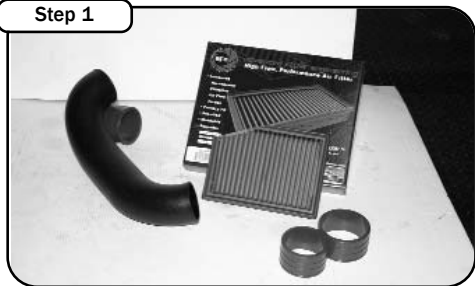

Step 1
Complete kit. Make sure all components are present prior to beginning installation.

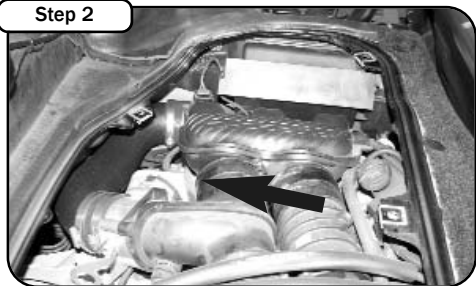

Step 2
Complete stock intake.



Step 3
In order to access engine compartment. Refer to your owner's manual for engine access instructions.



Step 4
Disconnect hose clamps on both ends of the intake tube.



Step 5
Carefully remove intake tube out of the engine compartment.



Step 6
Install the smaller 3" coupler and clamps on the throttle body. Do not tighten clamps at this time.




Step 7
Install the larger 3.25" coupler and clamps on the air box. Do not tighten clamps at this time.



Step 8
Carefully install the new intake tube in the engine compartment. Tighten all four clamps securing intake tube.



Step 9
Open the air filter access tray on the side of the air box and remove the OE air filter.

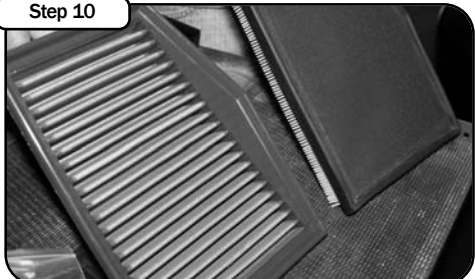

Step 10
Install the new aFe high flow air filter and reinstall the air filter access tray.



Step 11
Your installation is now complete. Make sure you tighten all clamps and check all electrical connections. Re check periodically

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" aFe P/N: 90-50000 gold oil aerosol, or aFe P/N: 90-50500 gold squeeze oil).
Filter Replacement: Magnum FLOW PN: 30-10090 (Red w/gold media).