



## ***advanced FLOW engineering***

### **Instruction Manual**

P/N: 77-44014

SCORCHER HD POWER MODULE

Make: <b>Chevrolet</b>	Model: <b>Silverado 1500</b>	Year: <b>2020-2021</b>	Engine: <b>L6-3.0L (td)</b>
Make: <b>GMC</b>	Model: <b>Sierra 1500</b>	Year: <b>2020-2021</b>	Engine: <b>L6-3.0L (td)</b>
Make: <b>Cadillac</b>	Model: <b>Escalade</b>	Year: <b>2021</b>	Engine: <b>L6-3.0L (td)</b>
Make: <b>Chevrolet</b>	Model: <b>Suburban</b>	Year: <b>2021</b>	Engine: <b>L6-3.0L (td)</b>
Make: <b>Chevrolet</b>	Model: <b>Tahoe</b>	Year: <b>2021</b>	Engine: <b>L6-3.0L (td)</b>
Make: <b>GMC</b>	Model: <b>Yukon</b>	Year: <b>2021</b>	Engine: <b>L6-3.0L (td)</b>
Make: <b>GMC</b>	Model: <b>Yukon XL</b>	Year: <b>2021</b>	Engine: <b>L6-3.0L (td)</b>



**THIS IS A HIGH-PERFORMANCE PRODUCT:** Do not use this product until you have carefully read the following agreement and installation instruction. This sets forth the terms and conditions for the use of this product. The installation of this product indicates that the BUYER has read and understands this agreement and accepts its terms and conditions.

**DISCLAIMER OF WARRANTY AND LIMITATION OF LIABILITY:** Advanced FLOW Engineering, Inc. (also known as aFe or aFe POWER) and its successors, distributors, jobbers, and dealers (hereafter “SELLER”) shall in no way be responsible for the product’s improper use and service. It is the installer’s responsibility to check for proper installation and if in doubt, contact the manufacturer. The SELLER assumes no liability regarding the improper installation or misapplication of its products. BUYER acknowledges it has had the opportunity to fully inspect the product. Accordingly, BUYER acknowledges that the product is being sold in “AS IS/WHERE IS” condition. SELLER shall not be held liable for special, indirect, incidental or consequential damages of any nature with respect to the products (including, without limitation, lost profits, lost sales, loss of production, property damage, personal injury or loss or damage resulting from interruption or failure in operation of the products) and BUYER hereby expressly waives and disclaims all such liability claims. The BUYER acknowledges and agrees that the disclaimer of liability contained herein is a material term of the sale of the product and, to the fullest extent permitted by law, BUYER shall defend, indemnify and hold SELLER harmless from any and all claims, demands, causes of action, controversies, liabilities, fines, losses, costs and expenses (including, but not limited to attorneys’ fees, expert witness expenses and litigation expenses) arising from or related to SELLER’s products.

**Before proceeding with the installation:**

- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support.
- Ensure you have all necessary tools before proceeding. Do not attempt to work on your vehicle when the engine is hot.

**Emission Disclaimer:** This product is not currently CARB exempt and is not available for purchase in California or for use on any vehicle registered with the California Department of Motor Vehicles.



Label	Qty.	Description	Part Number
A	1	Module	R77-44014
B	1	LED Switch	05-70029
C	2	Velcro (2" Inches)	05-01244
D	5	Cable Ties	05-60167





# SLEEP MODE

Figure A

## Refer to Figure A for Step 1

Step 1: Before installing your aFe POWER module, you will have to place your vehicle's ECU in sleep mode.

In order to do this, you will need to do the following:

- If the engine is cold: open the hood, close the doors, lock the car and wait 30 seconds.
- If the engine is warm: open the hood, close the doors, lock the car and wait 20 minutes.
- If the engine is warm and you can't wait 20 minutes: disconnect the battery.



**DO NOT OPEN VEHICLE DOORS WHILE SENSORS ARE DISCONNECTED OR BEFORE CONNECTING THE SCORCHER BLUE MODULE. DOING SO WILL TRIGGER A CHECK ENGINE LIGHT.**



**Refer to Figure B for Steps 2-3**

Step 2: Remove the engine cover by removing the oil cap and the 10mm bolt.

Step 3: Re-install the oil cap to make sure that small parts cannot fall in while installing the Scorcher HD Power Module.

**Figure C****Refer to Figure C for Steps 4-6**

Step 4: Locate the Fuel Pressure Sensor. It is underneath the intercooler pipe.

Step 5: Disconnect the Fuel Pressure Sensor by pulling back on the locking tab and pressing down on the clip while sliding the connector out.

Step 6: Locate the Fuel Pressure Sensor Harness on the aFe POWER harness. Plug the female connector of the aFe POWER harness into the Fuel Pressure Sensor, then take the male connector of the aFe POWER harness and connect to the female connector of the engine harness.



**Make sure that the connections are fully engaged. Usually, connectors make a snapping sound when fully engaged.**



Figure D

**Refer to Figure D for Step 7**

Step 7: Check with the picture and make sure that both the male and female sides of the aFe POWER harness is plugged in and the locking tabs are slid back into place.



**Figure E**

**Refer to Figure E for Steps 8-11**

Step 8: Mount the Scorchers HD module on top of the fuse box using the included Velcro.

Step 9: Use the included zip ties to secure wires away from moving parts and any components that will get hot when the engine is running.

Step 10: Remove the oil filler cap in order to reinstall the engine cover.

Step 11: Re-install the engine cover along with the oil cap and the 10mm bolt.

**Note: The doors of the vehicle can now be opened to proceed with the installation of the LED switch.**



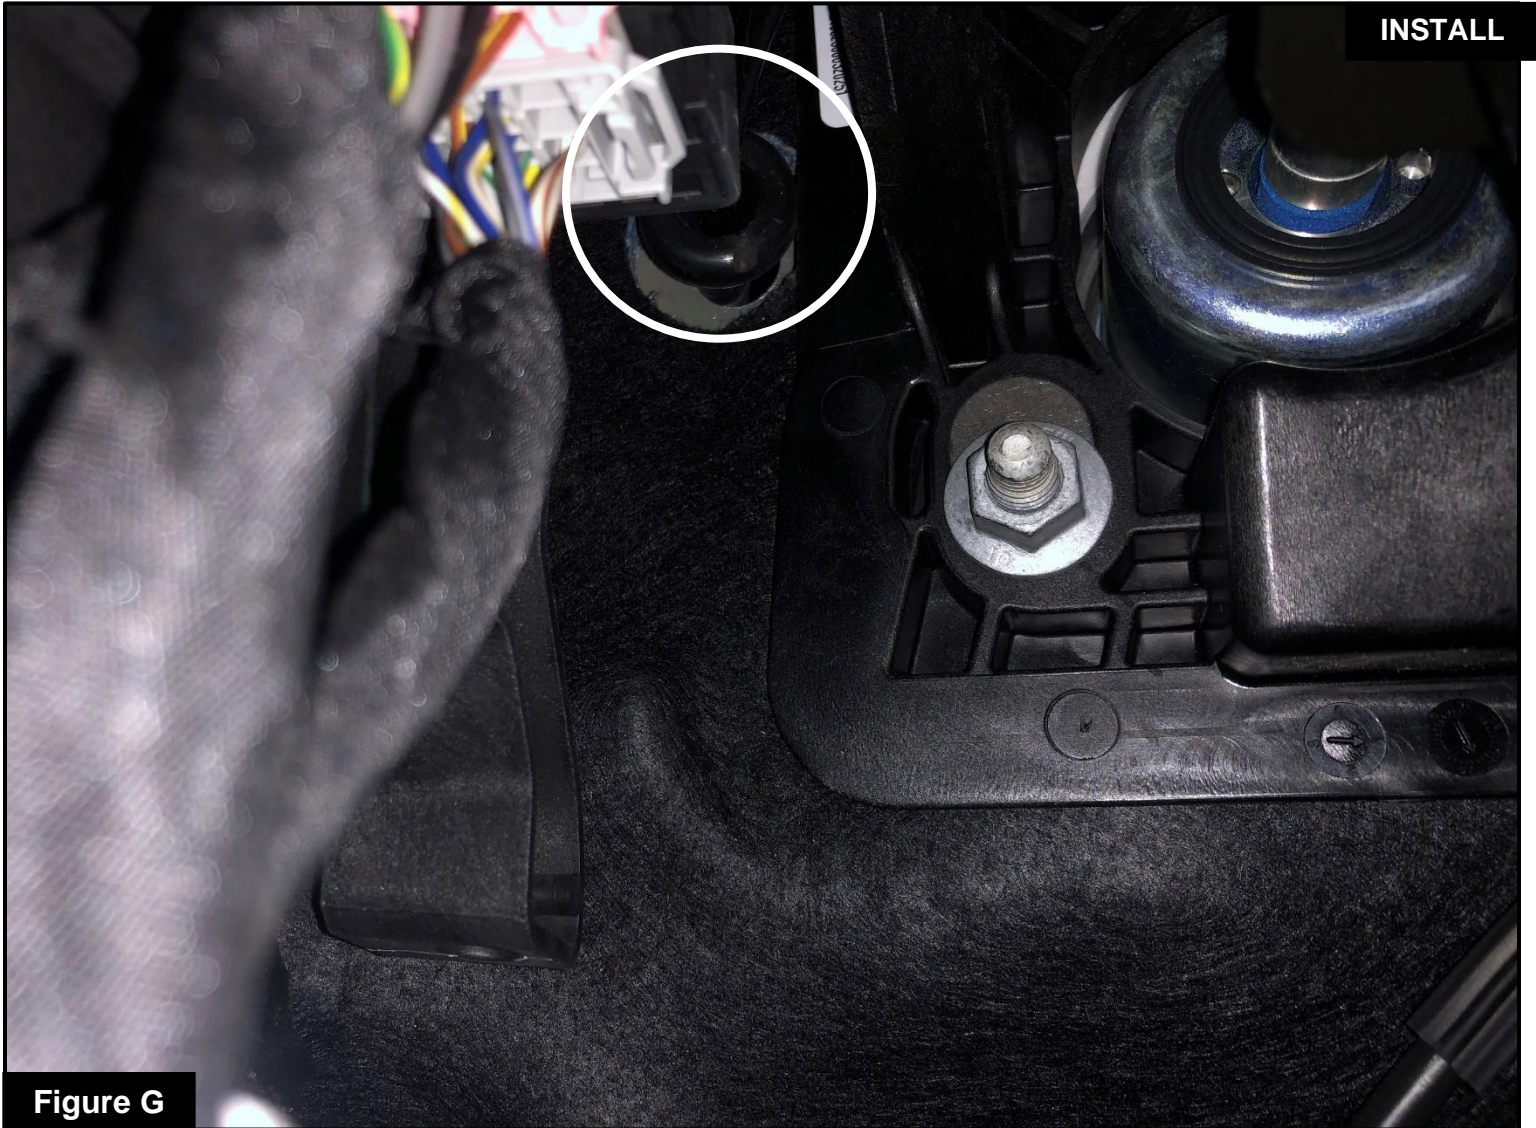


**Figure F**

**Refer to Figure F for Steps 12-13**

Step 12: Carefully route the switch behind the steering wheel cover

Step 13: Mount the switch on an open, flat surface using the included double-sided tape.

**Figure G****Refer to Figure G for Steps 14-16**

Step 14: Locate the grommet for the hood release cable inside of the cabin's driver side footwell and slightly pull it to the side in order to route the LED switch.

Step 15: Route the connector for the LED switch out to the engine bay using this hole.

Step 16: Connect the LED switch to the aFe POWER harness in the engine compartment.

**The installation of the module itself is now complete. Keep reading the installation instruction to learn how to use all of its features.**



Figure H

### **Refer to Figure H (LED Switch)**

When turning on the vehicle, each LED will flash, and it will stop at its last setting. The LED on the switch represents the different level of power.

- Green LED: Stock
- Yellow LED: Sport
- Orange LED: Sport+
- Red LED: Race

Use the grey button to select the desired setting. Power adjustments can be done at any time while the unit is on. Thank you for choosing aFe POWER.



Momentum HD Cold Air Intake



P/N 50-70064T

Pro GUARD HD Fuel Filter



P/N: 44-FF023

Pro GUARD HD Oil Filter



P/N: 44-LF047

Sprint Booster



P/N: 77-14009

Blue Squeeze Restore Kit




P/N: 90-50501

Magnum FLOW Pro 5R Air Filter



P/N: 30-10292

aFe POWER Diesel Frame

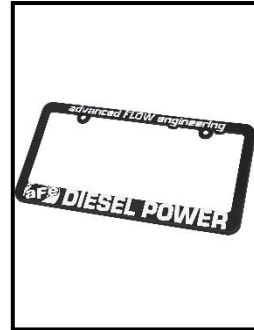

P/N: 40-10204

Rear Differential Cover



P/N: 46-71140B

Learn more about performance air intake systems we have.