




Congratulations on your purchase of an aFe Pro Dry S oil-free dry filter. Your new filter uses a revolutionary synthetic dry media that requires no oil to filter out dirt. Your new aFe Pro Dry S will provide more airflow for increased horsepower, torque, and fuel economy. Pro Dry S filters are cleanable and reusable. And because they use no oil, cleaning is quick and easy.

**TAP CLEAN 85% CLEAN**



You can tap your Pro Dry S filter and return it to 85% of its original airflow. Simply remove the filter from the intake kit and lightly tap it on a solid surface. Tap and turn the top and bottom of the filter until most of the visible dirt has been released. Reinstall the filter in your vehicle. Do not apply oil to the filter.

**VACUUM CLEAN 96% CLEAN**

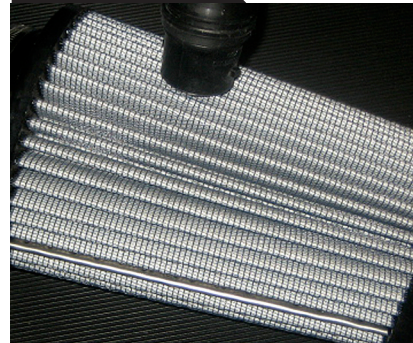

You can vacuum your Pro Dry S filter and return it to 96% of its original airflow. Remove the filter from the intake kit and vacuum away the dirt using a shop vacuum or regular house vacuum. Reinstall the filter in your vehicle. Do not apply oil to the filter.

**WASH CLEAN STEP 1**



You can wash your Pro Dry S filter and return it to 100% of its original airflow. Remove the filter from the intake kit and simply spray the filter with aFe cleaner and let sit for 10 minutes.

**WASH CLEAN STEP 2**



Rinse the filter with clean water to remove the dirt and excess cleaner. Continue rinsing until the water runs clear.

**WASH CLEAN STEP 3**



**100% CLEAN**

Allow the filter to dry completely (our synthetic media dries quickly and should dry within a few hours in normal conditions). Reinstall the filter in your vehicle. Do not apply oil to the filter.

**NEVER OIL YOUR aFe PRO DRY S FILTER**



**advanced FLOW engineering**

Part #06-00074, Rev B

Learn more about performance air intake systems we have.