Silver Bullet



Throttle Body Spacer

PN 46-32007

Important!


Please verify the parts list and read all instruction steps before you begin installation. (Dodge Challenger SRT8 6.4L shown in photo)

| Make | Model | Year | Engine | Make | Model | Year | Engine |
|-------|------------------|-------|---------|----------|----------------|-------|---------|
| Dodge | Charger R/T | 06-16 | V8-5.7L | Dodge | Magnum | 05-08 | V8-5.7L |
| Dodge | Charger SRT-8 | 06-10 | V8-6.1L | Dodge | Magnum SRT-8 | 05-08 | V8-6.1L |
| Dodge | Charger SRT-8 | 11-16 | V8-6.4L | Chrysler | 300C/300S | 05-16 | V8-5.7L |
| Dodge | Challenger R/T | 09-16 | V8-5.7L | Chrysler | 300 SRT-8 | 05-10 | V8-6.1L |
| Dodge | Challenger SRT-8 | 08-10 | V8-6.1L | Chrysler | 300 SRT-8/SRT | 11-14 | V8-6.4L |
| Dodge | Challenger SRT-8 | 11-16 | V8-6.4L | Jeep | Grand Cherokee | 06-10 | V8-6.1L |

NOTES: aFePOWER Intake System may require slight modification to fit with this throttle body spacer

IMPORTANT: Before starting the installation, identify the correct furnished screws for your specific application:

- For 05-10 V8-5.7L/6.1L engines, use the M6 x 70mm machined screws.
- For 11-15 V8-5.7L engines, use the #12 x 2"L self threading screws.
- For 11-15 V8-6.4L engines, use the #12 x 2-7/8"L self threading screws.
- **Step 1.** Disconnect the temperature sensor from the intake tube. Then remove the OE Intake tube out of the vehicle.
- Image: M6x70mm
 #12x2"L
 #12x2-7/8"L
- Step 2. Remove the 4 throttle body screws. Leave factory sealing O-ring in place.
 Step 3. Insert the new Silver Bullet throttle body spacer and provided gasket in between the throttle body and manifold as shown (The "Air-In" side should face the throttle body).
- **Step 4.** Fasten the throttle body assembly using the (4) correctly identified screws and washers. Tighten the screws to 5 Nm (48 lb/in).
- *Step 5.* Reinstall the intake tube. Make sure to tighten all of the clamps and reconnect the temperature sensor.
- Your install is now complete! Make sure to retighten all bolts and clamps after 100 miles of driving.

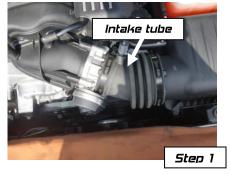









Parts List

- 1 Silver Bullet Spacer
- 1 Gasket
- 4 #12 x 2-7/8"L self threading screws
- 4 #12 x 2"L self threading screws
- 4 M6 x 70mm machined screws
- 4 Washers