



# Silver Bullet

## Throttle Body Spacer

PN 46-37001

### Important!

Please verify the parts list and read all instruction steps before you begin installation.  
( Civic Si shown in photo)

Make	Model	Year	Engine
HONDA	CIVIC Si	12-15	L4-2.4L
HONDA	ACCORD	08-12	L4-2.4L
ACURA	TSX	09-12	L4-2.4L
ACURA	ILX	13-14	L4-2.4L

**NOTES:** Takeda Intake system (TM-1018P) will require slight modification to fit with this throttle body spacer: On the throttle body side of the intake tube, cut 3/4" off for a perfect fit.

**Step 1.** Remove the OE intake tube from the vehicle using an 8mm nut driver. Disconnect the vent line from the intake tube.


**Step 2.** Remove the throttle body by removing the (4) M8 screws and the M8 screw securing the bracket.

**Step 3.** Insert the new **Silver Bullet** throttle body spacer and provided gasket in between the throttle body and manifold as shown (The "Air-In" side should face the throttle body).

**Step 4.** Fasten the throttle body assembly using the (4) furnished M8 screw, lock washer, and a flat washer. Tighten the screws to 10 Nm (89 lb/in). Reinstall bracket using OE bolt.

**Step 5.** Reinstall the intake tube. Make sure to tighten all of the clamps and reconnect the vent hose.

**Your install is now complete!** Make sure to retighten all bolts and clamps after 100 miles of driving.

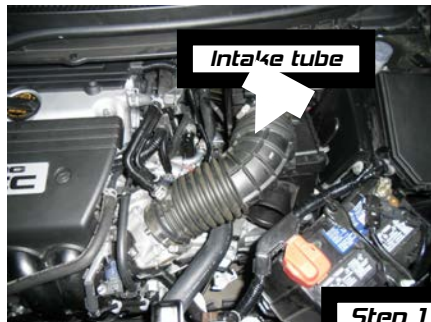

Step 1



Step 2



Step 3



Step 4



Step 5

### Parts List

- 1 **Silver Bullet** Spacer
- 1 Gasket
- 4 M8 x 90mm screws
- 4 M8 flat washers
- 4 M8 lock washers