




INSTALLATION INSTRUCTIONS

MAKE: DODGE
MODEL: RAM 1500
YEAR: 09-15
ENGINE: V8-5.7L / V6-3.0L

Exhaust Tip Upgrades

49C42046-B (Black Tip)
49C42046-P (Polished Tip)

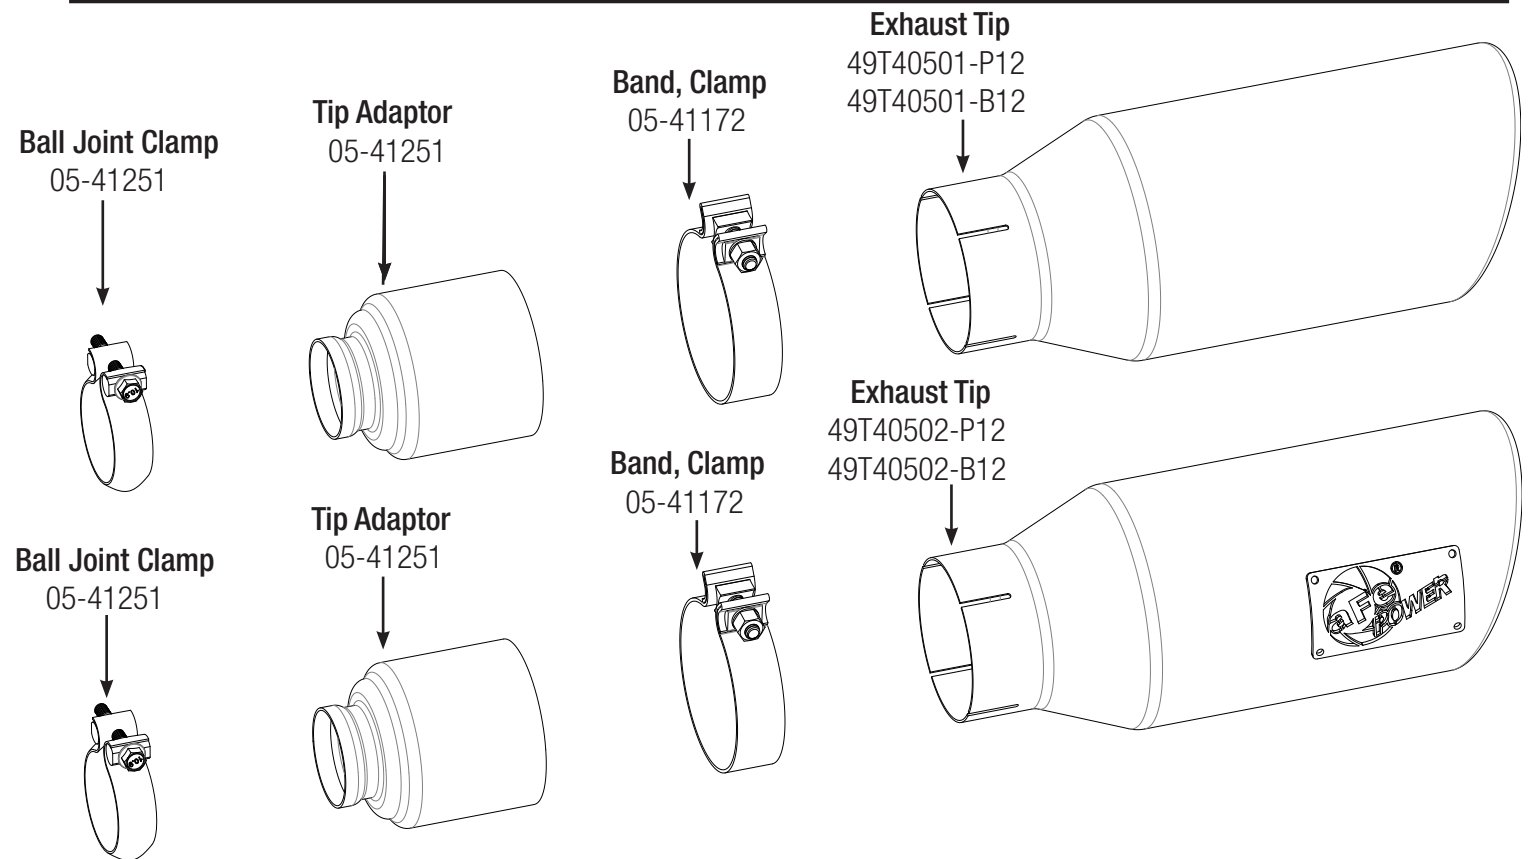

- Step 1:** (Read Instructions prior to installation) For ease of installation spread the pieces of the exhaust a long side of your vehicle according to the diagram shown.
- Step 2:** Loosen up OE spherical clamps attached to stock tips, and remove both stock tips.
- Step 3:** Install aFe Stock exhaust tip upgrade, Using the spherical clamps provided.
- Step 4:** Slightly Tighten down both clamps to tip inlet tubes into stock exhaust.
- Step 5:** Place right tip, into tip inlet tube at desired position and fully tighten down tip clamp.
- Step 6:** Repeat process for left side tip.
- Step 7:** Align left and right tips coming out of the bumper cut outs, and fully tighten down both spherical clamps.
- Step 8:** Your install is now complete!
- Step 9:** It is recommended to re-tighten all exhaust components after the first 50-100 miles.