



AIRDESIGN

SUPER RIM
TRUCK ACCESSORIES POWERED BY AIRDESIGN USA

DODGE- RAM 1500 2013+


INSTALLATION MANUAL



**READ CAREFULLY BEFORE
INSTALLATION**

FLOOR LINERS SET RAM 1500

PART # : 1140NNTJCH06A21

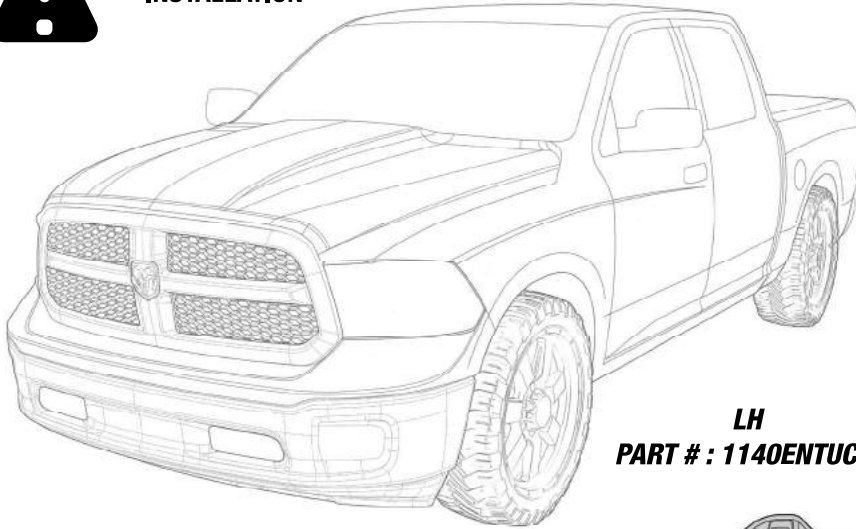


ALL TYPE OF CABS

LH

PART # : 1140ENTUCH06A23

RH


PART # : 1140FNTUCH06A22

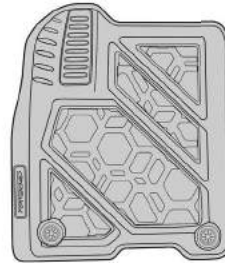

IMPORTANT


**NOT DESIGNED OR RECOMMENDED
FOR MODELS EQUIPPED WITH VINYL
FLOORING**

TOOLS

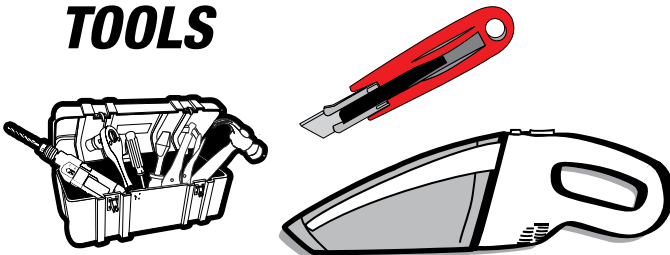

ONLY SUPER CREW CAB

PART # : 1140DNTUCH06A24

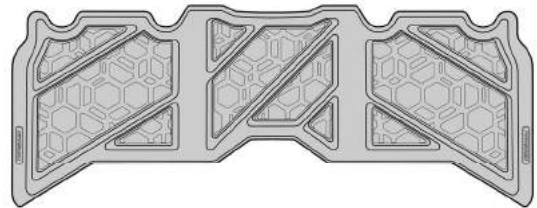

CHECK LIST

ITEM	DESCRIPTION	DRAWING	AMOUNT
A	DOME - AIRDESIGN		Included 3 PCS



CID DESIGN


SUPER RIM
TRUCK ACCESSORIES POWERED BY HUNTERDUN USA

DODGE-RAM 1500 2013+

INSTALLATION MANUAL


1 BEFORE INSTALLING

MAKE SURE YOUR VEHICLE ALREADY HAVE OEM CAR MAT FASTENERS YOU MUST HAVE THEM FOR PROPER INSTALLATION

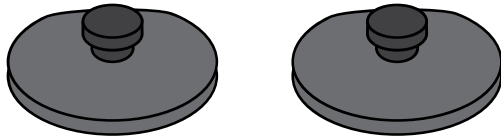

2 IDENTIFY

FRONT

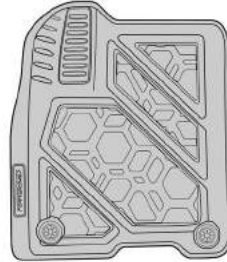

LEFT




RIGHT

BACK


IF IT DOES NOT HAVE, GET THIS PARTS FROM YOUR LOCAL DEALER

DRIVER'S SIDE

3 REMOVE OEM MAT

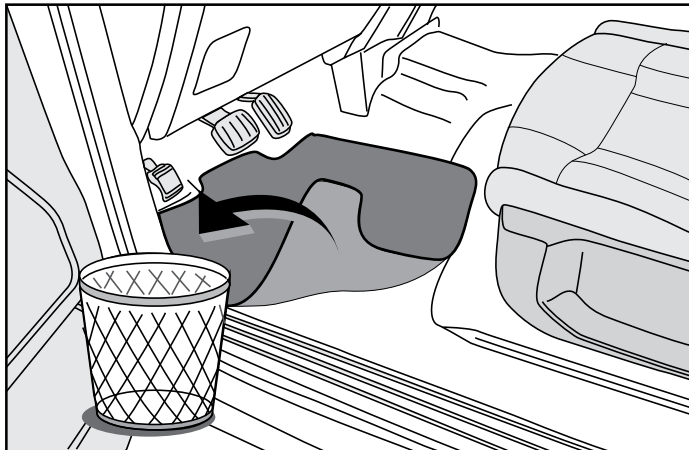


4 VACUUM

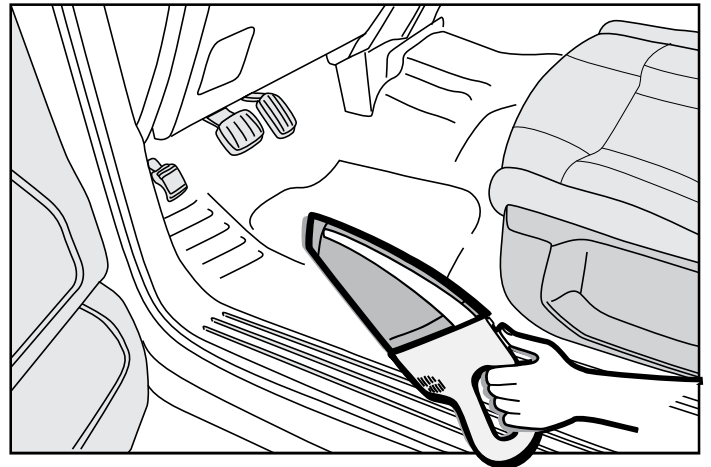



5 MOUNT

UNOBSTRUCTED

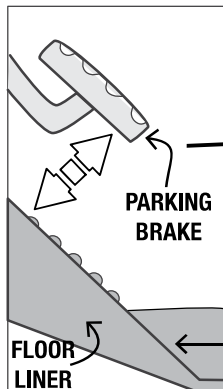

PARKING BRAKE

FLOOR LINER

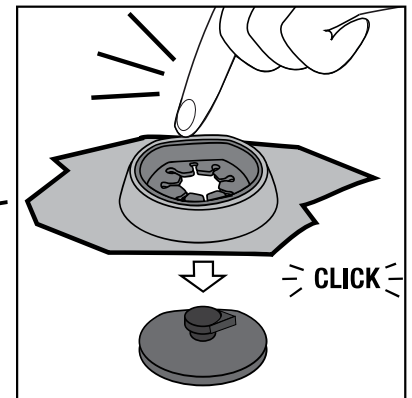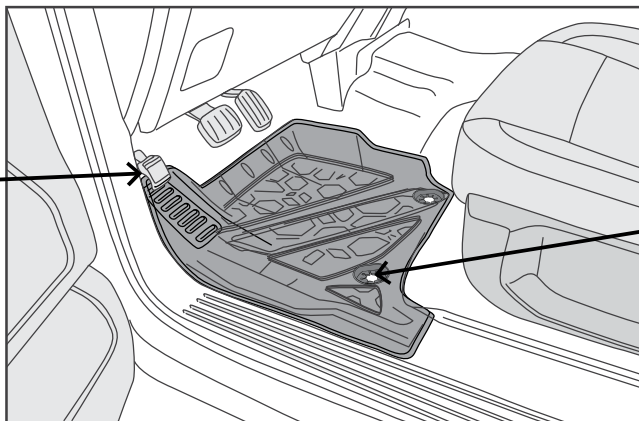



CID DESIGN

SUPER RIM
TRUCK ACCESSORIES POWERED BY AMERICAN USA


DODGE- RAM 1500 2013+

INSTALLATION MANUAL

6 FOR CO-DRIVER'S SIDE REPEAT STEPS 3 TO 5

RH

FRONT

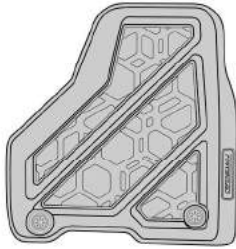


BACK

7 FOR REAR SIDE REPEAT STEPS 3 & 4


REAR

FRONT

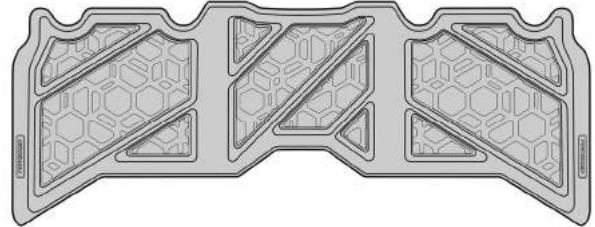


BACK

8 LIFT UP

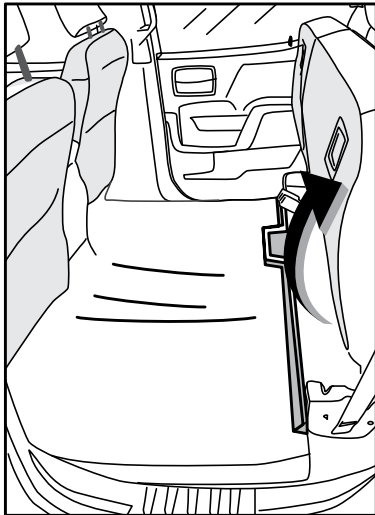

9 MOUNT

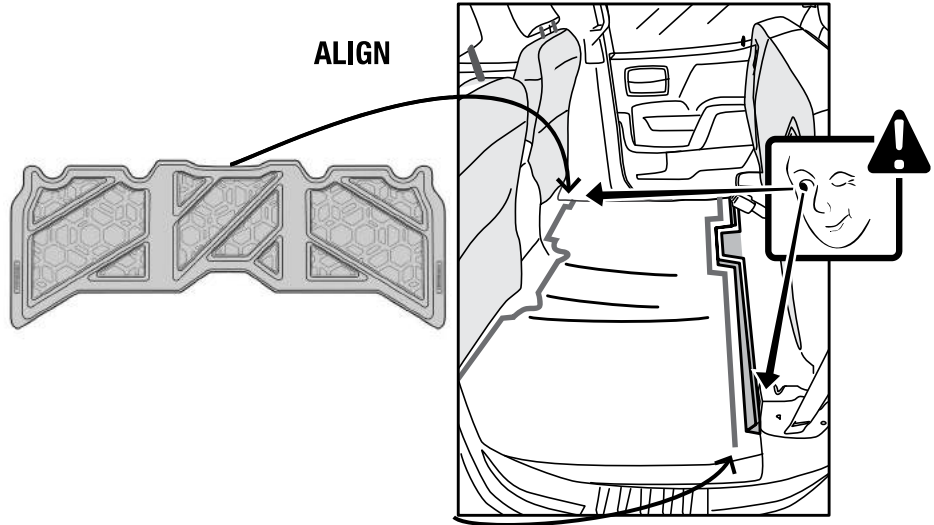

IMPORTANT

FAILURE TO CORRECTLY INSTALL OR RE-INSTALL THE FLOOR LINER TO THE ABOVE INSTRUCTIONS COULD RESULT IN THE LOSS OF CONTROL OF THE VEHICLE AND DEATH OR SERIOUS INJURY.

REGULAR CLEANING EXTENDS THE LIFE OF YOUR FLOOR LINERS. CLEAN USING ONLY A MILD DETERGENT SOAP AND WATER. DO NOT USE HARSH CHEMICALS OR ABRASIVE TYPE CLEANERS AS THESE PRODUCTS MAY DAMAGE THE FLOOR LINER.