
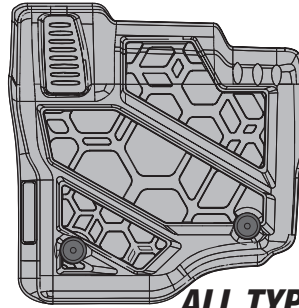
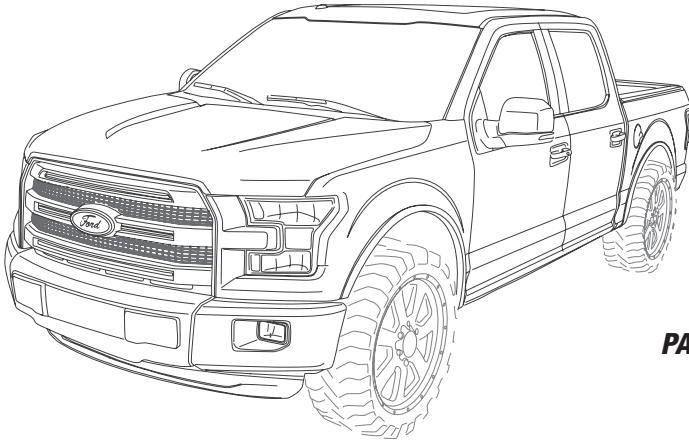
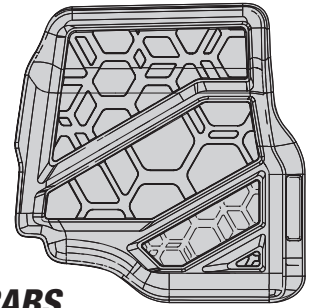
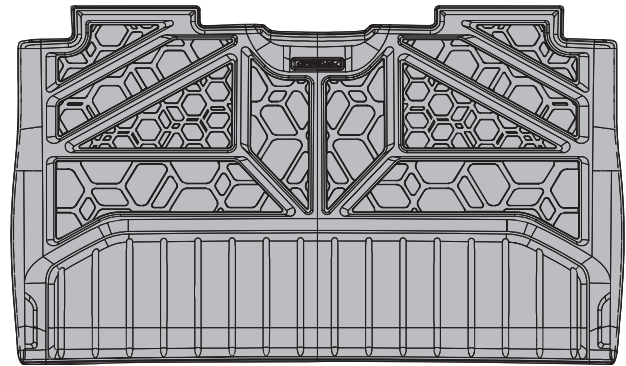



INSTALLATION MANUAL
FLOOR LINERS SET F-150 2015 - 2020
PART # : 1140NNTJFO20A13

ALL TYPE OF CABS
LH
PART # : 1140ENTUFO20A15

RH
PART # : 1140FNTUFO20A14
IMPORTANT


**NOT DESIGNED OR RECOMMENDED
FOR MODELS EQUIPPED WITH VINYL
FLOORING**

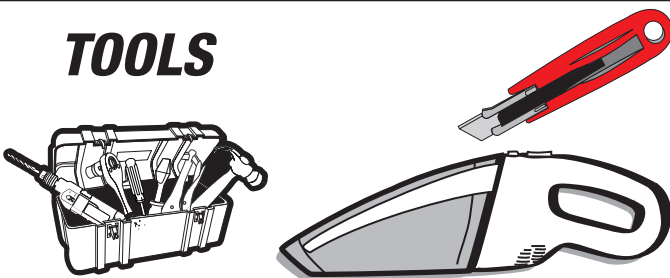


ONLY SUPER CREW CAB
PART # : 1140DNTUFO20A16
TOOLS

**READ CAREFULLY BEFORE
INSTALLATION**
CHECK LIST

ITEM	DESCRIPTION	DRAWING	AMOUNT
A	DOMES - AIRDESIGN		Included 3 pieces

INSTALLATION MANUAL

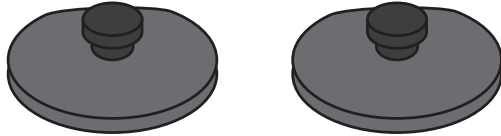
1 BEFORE INSTALLING

MAKE SURE YOUR VEHICLE ALREADY HAVE OEM CAR MAT FASTENERS YOU MUST HAVE THEM FOR PROPER INSTALLATION




IF IT DOES NOT HAVE, GET THIS PARTS FROM YOUR LOCAL DEALER


2 IDENTIFY

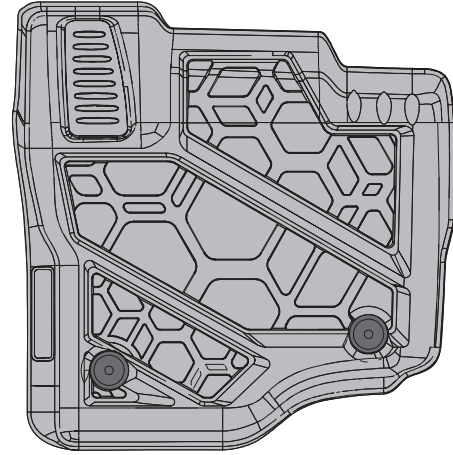

3 REMOVE OEM MAT



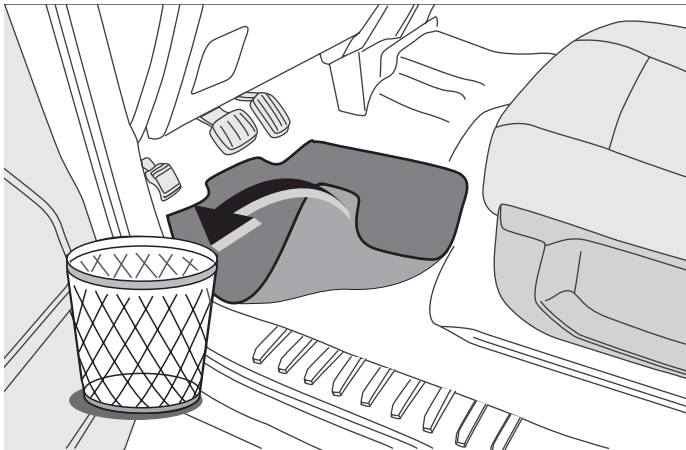


4 VACUM

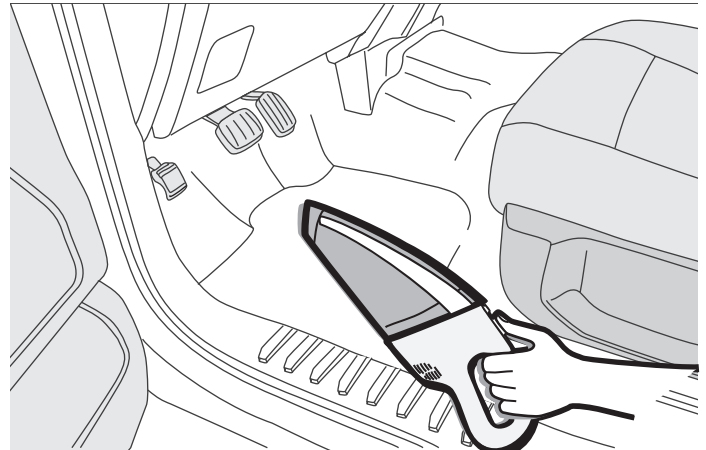

5 MOUNT

UNOBSTRUCTED

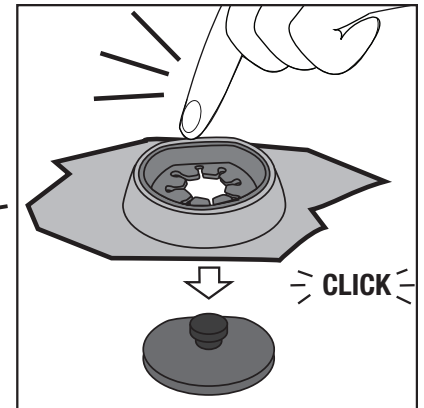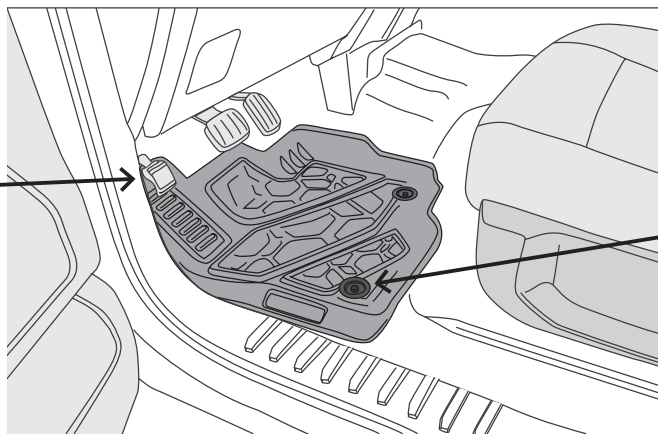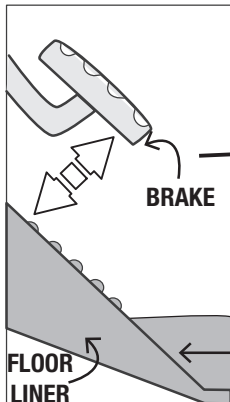


INSTALLATION MANUAL

6 FOR CO-DRIVER'S SIDE REPEAT STEPS 3 & 4

RH

FRONT

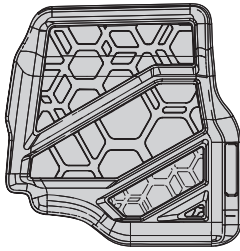


BACK

7 FOR REAR SIDE REPEAT STEPS 3 & 4


REAR

FRONT

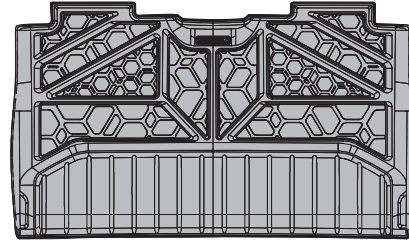


BACK

8 LIFT UP

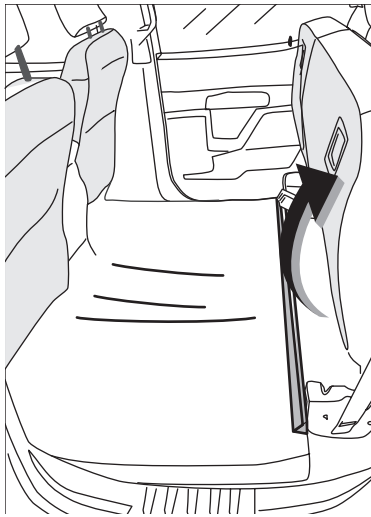

9 MOUNT

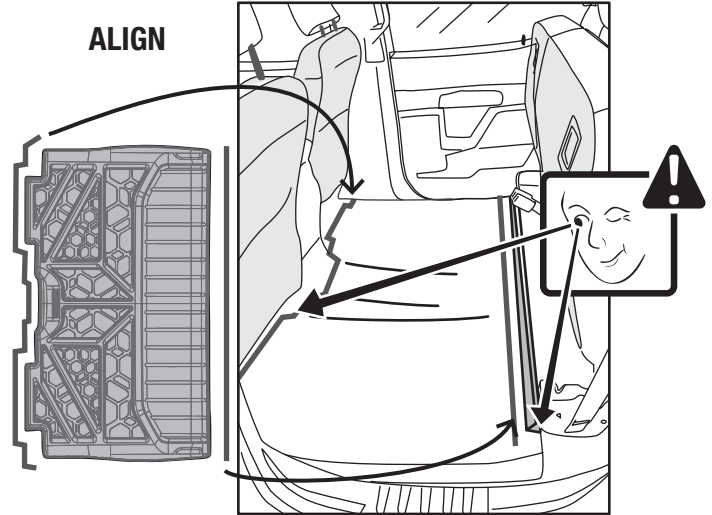

IMPORTANT

FAILURE TO CORRECTLY INSTALL OR RE-INSTALL THE FLOOR LINER TO THE ABOVE INSTRUCTIONS COULD RESULT IN THE LOSS OF CONTROL OF THE VEHICLE AND DEATH OR SERIOUS INJURY.

REGULAR CLEANING EXTENDS THE LIFE OF YOUR FLOOR LINERS. CLEAN USING ONLY A MILD DETERGENT SOAP AND WATER. DO NOT USE HARSH CHEMICALS OR ABRASIVE TYPE CLEANERS AS THESE PRODUCTS MAY DAMAGE THE FLOOR LINER.