


AIR RAID®

INTAKE SYSTEMS

P/N 200-133 Installation Instructions
 1996-2005 Chevrolet 4.3l S-10/GMC Jimmy
 1996-2004 Chevrolet 4.3l S-10/GMC Sonoma
 1997-2000 4.3l Isuzu Hombre
 1991-2001 4.3l Oldsmobile Bravada

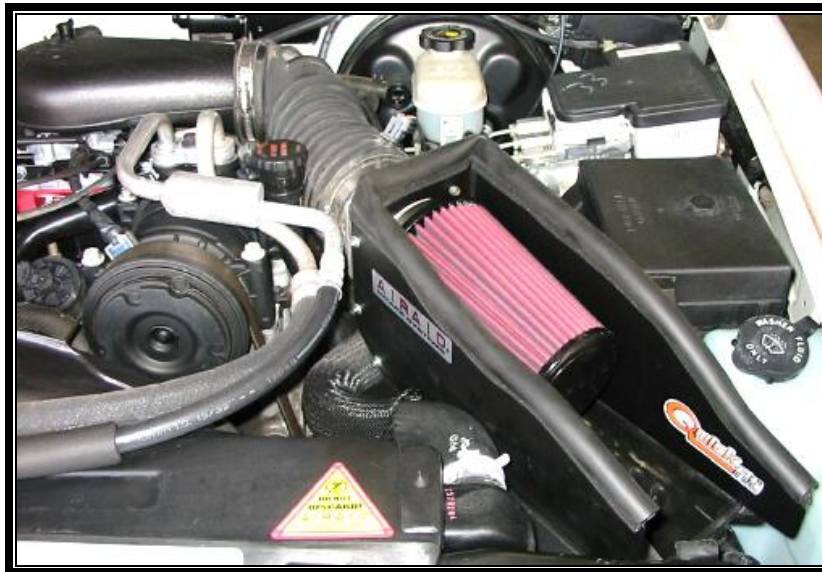

Packing List:

700-433	Airaid Premium Filter	1
KIT133MAFC	Black MAF Panel	1
KIT133SPC	Black Side Panel	1
KITWSTRIP02	Weather Strip 32 3/4"	1
KIT133HP	Hardware Pack	1
- Instructions Sheet		x1
- KIT60C250HCS	M6-1x25 Hex Bolt	x4
- KIT09FWZ019	1/4" Flat Washer	x4

- KIT6C31MXPPZ 6/32 Screw x3

Packing List Cont'd:

- KIT6CNKEPZ 6/32 Keps Nut x3
 - KIT6NWSAPZ #6 Flat Washer x3

Tools Required for this Installation:

Nut Driver
 10mm Socket
 Flat Head Screwdriver

Installation Instructions. Read Me!

I) DISCONNECT NEGATIVE (-) BATTERY CABLE.

II) Remove the Factory Air Filter Housing.

- a) Unscrew & remove the four wing nuts from the air cleaner housing lid.
- b) Loosen the rubber clamp to the mass air flow meter and remove air filter lid from vehicle. Do not remove mass air sensor. **See Fig#1**
- c) Remove the factory air filter from the air filter base. **See Fig#1** (*Note: Retain the air filter housing base. The Airaid Quick Fit intake system will mount on top of the factory base.*)
- d) Using a T-25 torx bit screwdriver (star head), remove three of the four bolts from the factory mass air sensor. **See Fig#2** Retain bolts for later use. (**Important: The lower left bolt must remain in the mass air sensor**)

III) Airaid Intake System Assembly & Installation

- a) Assemble the Quick Fit panels with the three nuts and bolts supplied. **Refer to Fig#3**
- b) Position the Quick Fit panel assembly on top of the factory air filter base. (*Note: The factory mass air sensor slides into the cool air box.*)
- c) Mount the mass air sensor on the Quick Fit panel using the three factory torx bolts removed previously.
- d) Using the supplied bolts and washers, mount the Quick Fit panel on the factory air filter base.
- e) Install the Airaid premium filter on the end of the mass air sensor. Tighten hose clamp using a flat blade screwdriver. **Refer to Fig#3**
- f) Install the supplied weather stripping onto top of Quick Fit panel. **Refer to Fig#3** (*Note: Weather stripping has been pre cut for proper fit.*)

IV) Finishing Up

- a) Check for any foreign objects or debris in the intake path.
- b) Check for proper hood clearance.
- c) Reconnect the negative battery cable & double check your work.

Figure #1



Figure #2

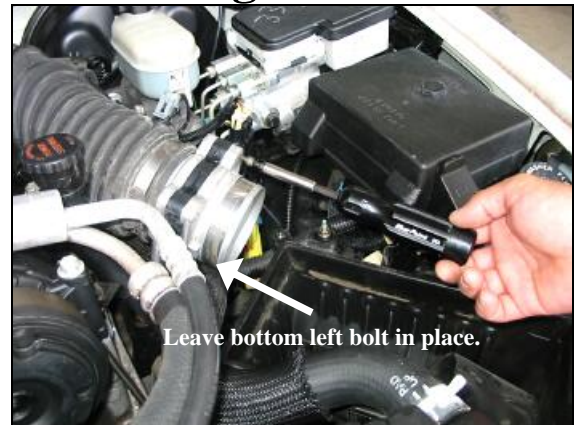


Figure #3



**Don't Forget Your Airaid
Filter Tune-Up Kit!
P/N 790-550**

