



400-529 INSTALLATION INSTRUCTIONS 94-95 Ford Mustang 5.0L

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping.

Thank you for selecting AIRAID.



Parts List

AIR-KIT529PA	Aluminum Plate	(1)
AIR-KIT529G	Gasket	(2)
AIR-KIT529H	Hardware	
	5/16-18 x 2 1/2 Bolts	(4)
	5/16 Washers	(4)
	Linkage Plates	(2)
	8mm x 16mm Flat Head Screws	(2)

Tools List


13mm Socket
5mm Hex Key Wrench
Standard Screwdriver

Installation Instructions. Read Me!

1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Remove air cleaner assembly.
3. Remove (2) 8mm bolts from throttle linkage bracket and save. **(Ref. D)**
4. Remove (4) bolts from the throttle body. **(Ref. C)**
5. Install the power plate using both gaskets. **(Ref. A)**
 - A. Place one gasket between the throttle body and power plate.
 - B. Place second gasket between the power plate and intake manifold.
6. Install (4) 5/16-18" x 2 1/4" bolts and (4) 5/16" washers. **(Ref. C)**
7. Install (2) throttle linkage plates using (2) 8mm x 16 flat head screws. **(Ref. D)**
8. Install throttle linkage bracket using (2) saved 8mm bolts.
9. Inspect & Test throttle linkage for full Open & Closed travel before driving. Some cruise or kickdown cables may require adjustment. Please refer to your vehicles service manual for proper adjusting.
10. Reinstall air cleaner assembly using **Step 2** as an example.
11. Reconnect battery cable. Enjoy!

The sound of power...The "whistle" means its working!

Ref. "D"- (2) Linkage Plates
(2) 8mm x 16 Flat Head Screws
(2) 8mm "Existing Bolts" (Linkage Bracket)

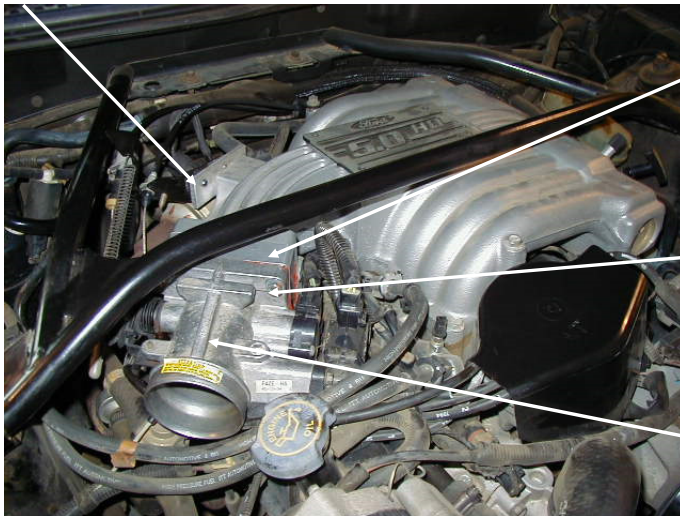

Ref. "A"- (1) Power Plate
(2) Gaskets

Ref. "C"- (4) 5/16-18" x 2 1/2" Bolts
(4) 5/16" Washers

Ref. "B"- Throttle Body