



## Installation instructions

Akrapovič Exhaust System:

### **Slip-On Line**

for the

**Mercedes-AMG A35** (type W177)

**Mercedes-AMG CLA35** (type C118/X118)

**Mercedes-AMG A35 Sedan** (type V177)

**Mercedes-AMG A35 Sedan L** (type Z177)

## SAFETY AND COMPLIANCE WARNING, PLEASE READ CAREFULLY


**BEFORE REMOVING THE STOCK EXHAUST SYSTEM AND BEGINNING THE INSTALLATION OF YOUR NEW AKRAPOVIČ EXHAUST, PLEASE MAKE SURE THAT ALL ITEMS LISTED BELOW ARE VERIFIED:**

- This manual is specific to the car indicated on the cover page, for which it is designed. Installation procedures vary depending on the type of car. Please verify that the Akrapovič **exhaust system and this installation manual correspond to the type of your car.**
- The exhaust system can get extremely hot during and after it is used. Make sure not to touch the exhaust system until it is completely cool. **Allow the exhaust and engine to cool down before beginning installation.**
- Make sure the car is **securely positioned to prevent** damage to yourself and other, or the car.
- Please check the parts you received against the parts list available on our website. Make sure that you have **all the parts necessary for the installation** of your new Akrapovič exhaust system. If any of the parts is missing, please do not proceed with uninstalling your stock exhaust system/installing the Akrapovič exhaust system and contact the retailer where you purchased the Akrapovič exhaust system.
- Every exhaust system muffler has its unique serial number, which identifies the authenticity of the product. You can find the serial number on the muffler's sleeve. Please refer to the **picture 1** below. Please verify that your exhaust system is an original Akrapovič product. If you have any doubts, please contact the reseller where you purchased the exhaust system or Akrapovič partners. This manual, any certificates and Akrapovič warranty apply to original products only.

## GENERAL NOTE

Photographs and other illustrations in this manual are symbolic and are intended to help represent individual steps for proper installation and use, as well as for a general overview. The actual component parts of the Akrapovič exhaust system may not entirely correspond to the photographs and other illustrations.

**Picture 1 - Serial Number Position**

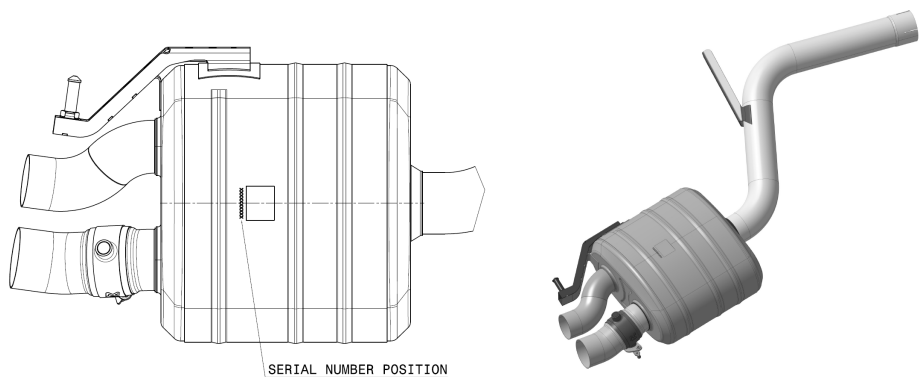

## **NOISE AND EMISSION WARNINGS**

### **General warning**

Because of the world-wide distribution of Akrapovič d.d. products, neither Akrapovič d.d. nor any of its subsidiaries make any representation that the exhaust system complies with the air and/or noise emissions laws, or labeling laws, of any jurisdiction. The purchasers are entirely responsible for informing themselves of the applicable laws where the products are to be used and to comply with those law.

Although legal compliance of Akrapovič products in a specific country should be determined by the user, you can find some basic guidance on compliance of your Akrapovič exhaust system with various legal requirements on the product-related part of our website. For EC and ECE type approvals, please refer to the certificate enclosed to your product.

### **USA WARNING**

Various U.S. states and the U.S. federal government have individual laws regulating the use of aftermarket exhaust parts and systems, especially as those parts and systems modify, remove, or replace original equipment catalysts. Please consult the appropriate laws in your area before installing any aftermarket part or system on your vehicle to ensure compliance with all applicable laws. Neither Akrapovic d.d. nor any of their subsidiaries or the sellers of the parts or systems make any representation that any of their parts or systems comply with any such laws.

### **CALIFORNIA WARNING**

California laws prohibit the use of any aftermarket exhaust part or system that modifies, removes or replaces original equipment catalysts unless the California Air Resources Board has issued an Executive Order regarding such part or system or unless the part or system is exempted by being used only on racing vehicles on closed courses. Neither Akrapovic d.d. nor any of their subsidiaries make any representation that any of their parts or systems has received such an Executive Order or that any of their parts or systems conform with the racing vehicles exemption. The purchasers are entirely responsible for informing themselves of applicable California laws and to comply with those laws.



## SYMBOLS

The following symbols are used throughout these installation instructions:



**TOOLS AND PROTECTIVE  
EQUIPMENT REQUIRED**



**TIGHTENING TORQUE**



**LUBRICATION**



**HAND TIGHTEN**



**INSTALLATION TIP**



**CAUTION OR IMPORTANT**

### USE BOLT SEALANT

Apply 3 to 4 small drops of bolt sealant onto the cleaned and degreased threads before tightening the bolts.

**WARNING! Avoid contact with skin, eyes and mucous membranes. Do not inhale fumes. Keep out of reach of children.**



### USE ANTI-SEIZE LEAD-FREE COPPER PASTE (black tube)

Provides trouble-free and long-lasting protection against seizing, corrosion and rusting of bolts, threaded ends, nuts, joints, etc. Also protects against vibration, wear and impact. **WARNING! Avoid eye contact. Keep out of reach of children.**




### USE ANTI-SEIZING GREASE (white tube)

Prevents seizing, corrosion and excessive wear between the titanium components of your exhaust system. **WARNING! Avoid eye contact. Keep out of reach of children.**



## Tools & equipment

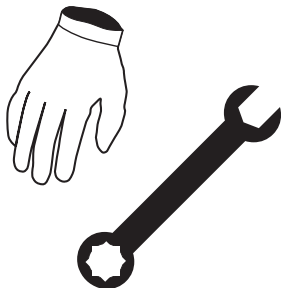

- mechanic gloves
- eye protection
- Pipe cutting tool
- T-handle swivelling 10 mm wrench
- T-handle 8 mm wrench
- T-handle 13 mm wrench
- Torx 40
- Torx E12
- Torx E14
- Socket 15 mm
- Socket 16 mm
- Rubber bracket unhooking tool
- Power drill
- 3.2 mm drill bit
- Riveting pliers
- Flat screwdriver
- Cutting nippers

## PARTS LIST

The following parts should be found in the box:

- Installation Manual
- Homologation certificate/ compliance documents if applicable
- Warranty
- Fitting material
- Muffler, pipes, Carbon Fiber components or Sound Kit components

**IMPORTANT: The car should be in the off position throughout the dismantling and installation process, as well as any other work done on the exhaust system!**

## **REMOVAL OF STOCK EXHAUST SYSTEM:**

The process of uninstalling the original exhaust system may vary depending on the existing exhaust system. Please follow the original exhaust system manufacturer's instructions for uninstalling the original exhaust system.

If you for any reason decide otherwise, please note that any information provided in this respect herein should be considered as general information provided for your convenience only. Akrapovič shall not assume any liability or responsibility with regard to uninstalling your existing exhaust system, warranty coverage of such exhaust system or vehicle or their further fitness for use.

**In case your Akrapovič exhaust system may not be used on certain roads or under certain conditions, please keep the stock or other exhaust system that you can use in such circumstances legally.**


## REMOVAL OF STOCK EXHAUST SYSTEM:


Put the vehicle onto a car lift.

! **CAUTION:** ensure that the car is lifted safely and properly in order to avoid the risk of vehicle damage, injury, or even death!

1. **For vehicles with bumper trim only:** unscrew the marked bolts and remove the bumper trim panel (F 01, 02).

! **CAUTION:** make sure not to injure yourself or damage any part of the vehicle during this process!

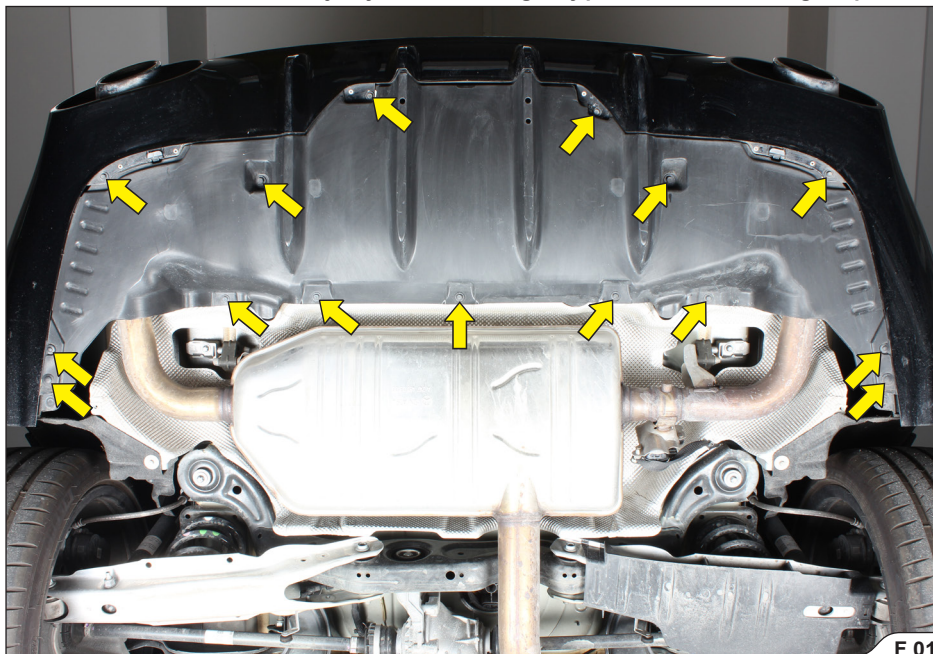


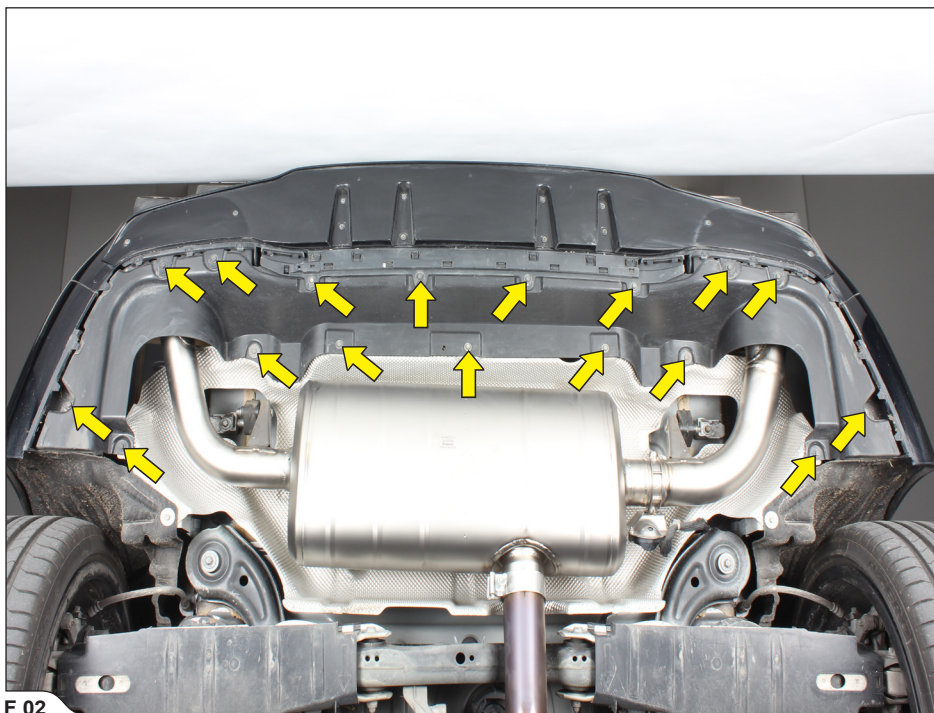


F 02

- Support the muffler, mark the stock exhaust system at the middle set of impressed dots, exactly as shown; carefully cut the pipe at the marked cutting line (using pipe cutting tool or equivalent), unscrew the link pipe's rubber bracket, disconnect the exhaust flap connector and cable holder, unscrew the muffler's rubber brackets and carefully remove the muffler off the vehicle (F 03, 04, 05, 06, 07).


**! CAUTION:** make sure not to injure yourself or damage any part of the vehicle during this process!

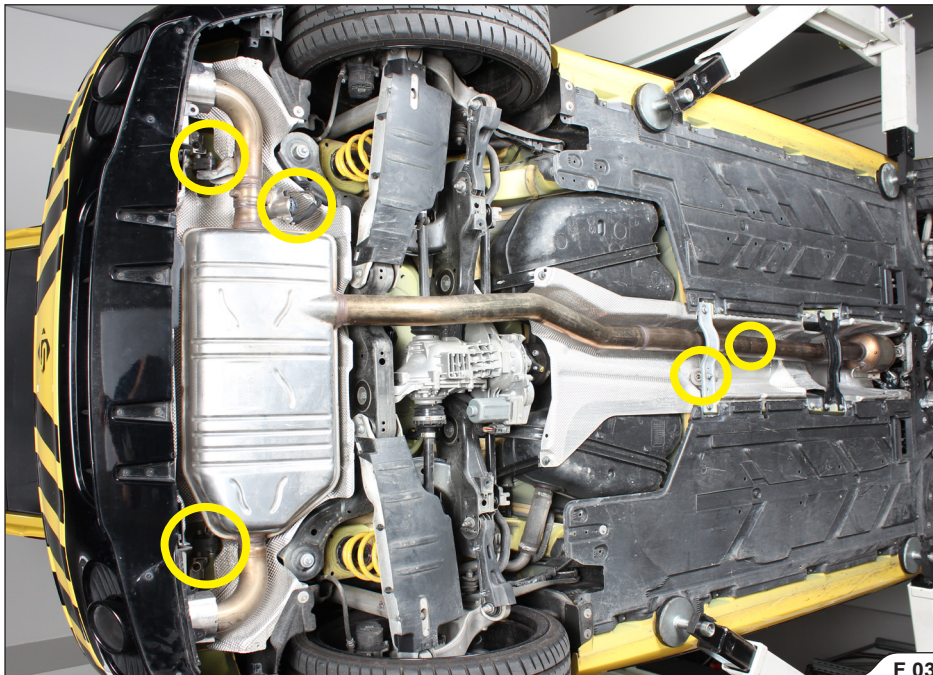




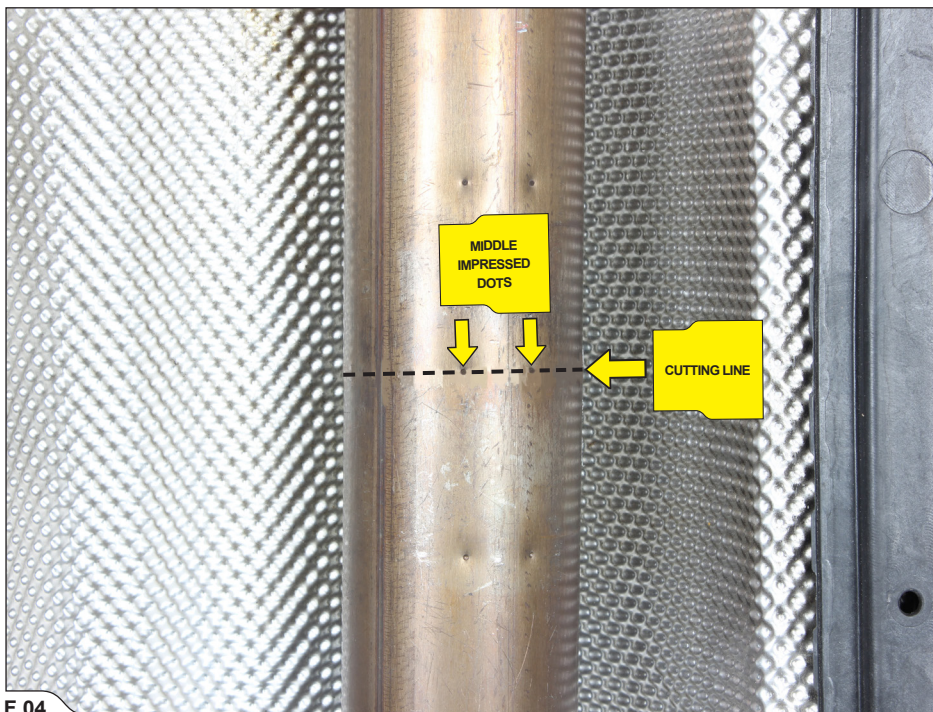

F 04

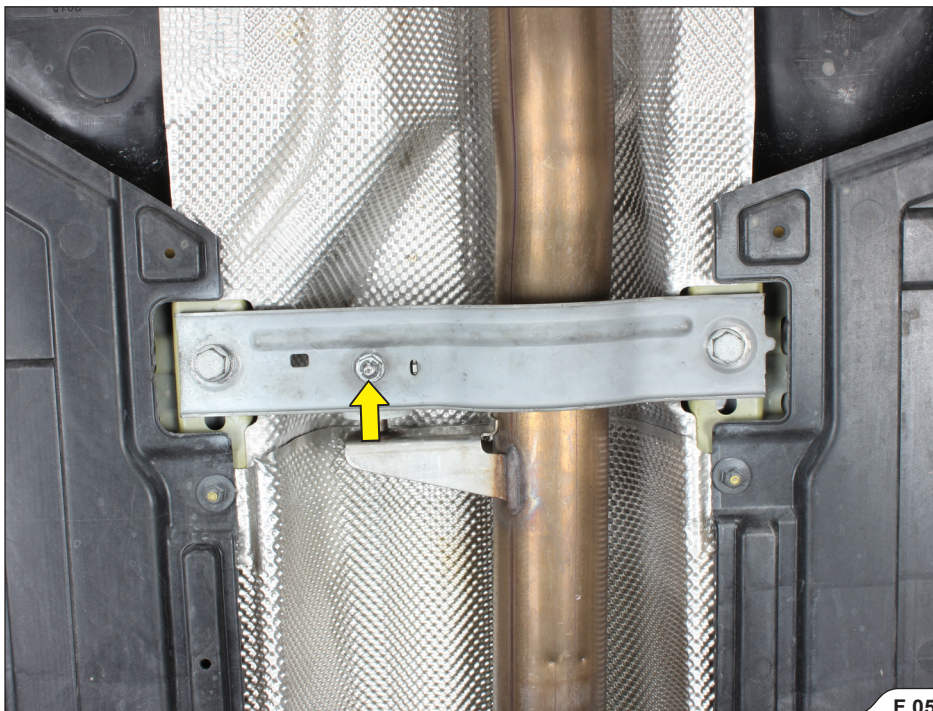



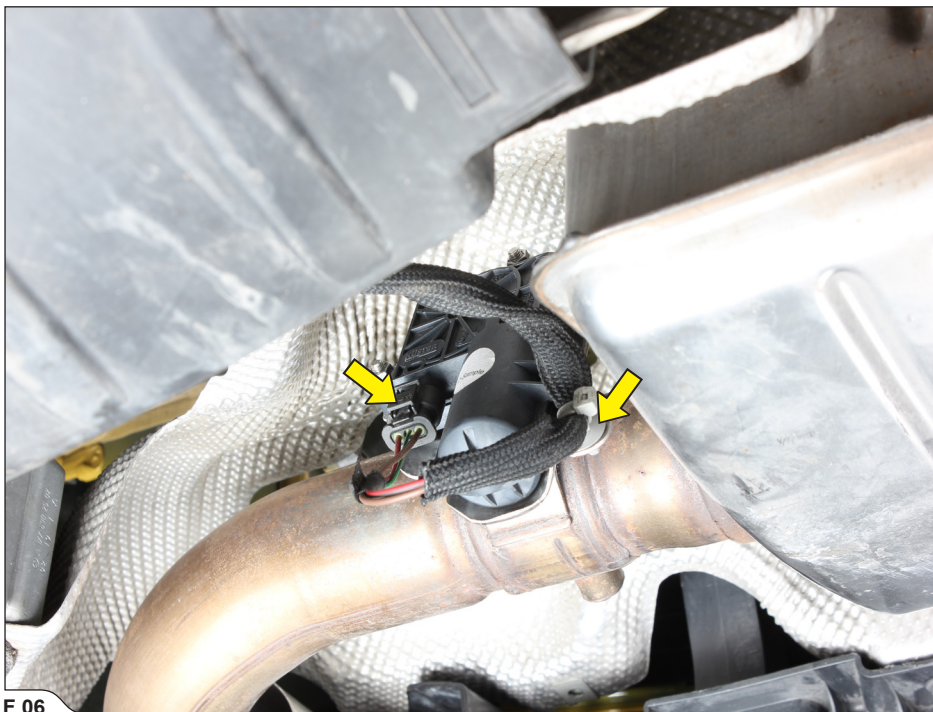


F 06



3. Carefully remove rubber brackets and exhaust valve actuator off the muffler (F 08, 09).

! **CAUTION:** make sure not to injure yourself or damage any part of the muffler during this process!

✂ **INSTALLATION TIP:** for easier mounting, lubricate the rubber brackets (WD40®)\*.  
\*WD-40® is a trademark of the WD-40 Company.

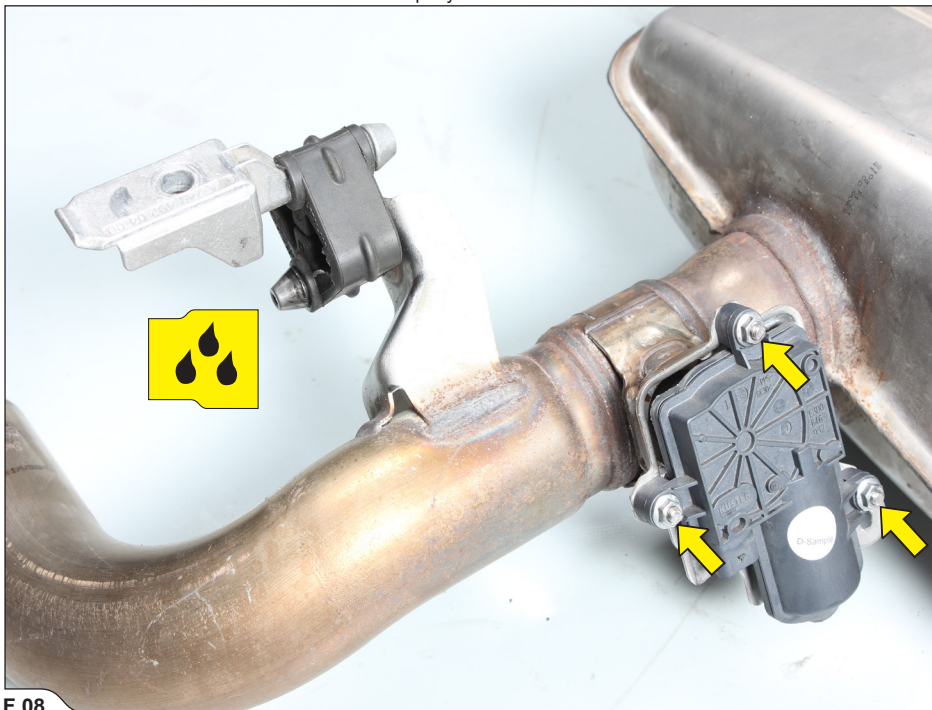


F 08



4. Undo the rear bumper's plastic fasteners on both sides of the vehicle (F 10, 11).

! **CAUTION:** make sure not to injure yourself or damage any part of the vehicle during this process!

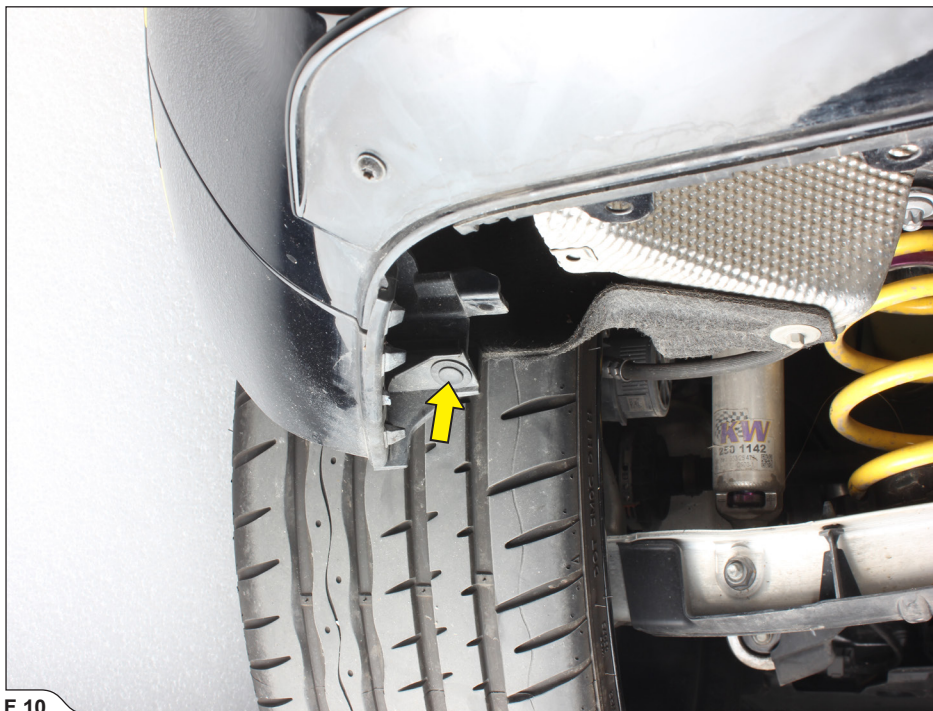

F 10





5. Unscrew the marked bolt on both sides of the vehicle (F 12, 13).

! **CAUTION:** make sure not to injure yourself or damage any part of the vehicle during this process!




F 12





6. Unscrew both tail pipes off the bumper and unscrew the rest of the marked bolts (F 14).


! **CAUTION:** make sure not to injure yourself or damage any part of the vehicle during this process!

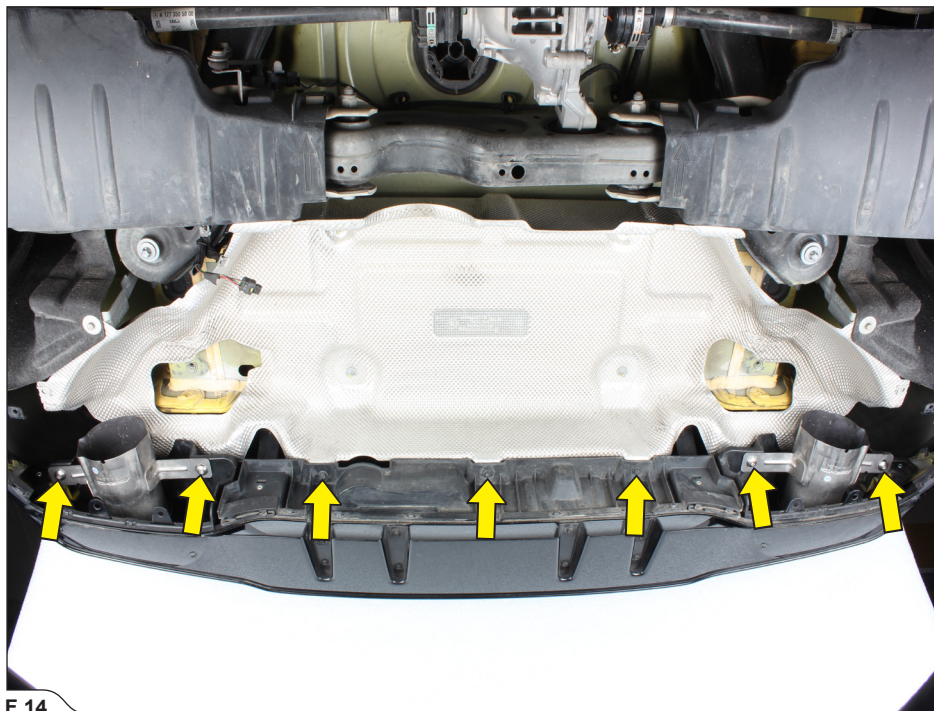

F 14

7. Open the trunk and remove the trunk floor panel and trunk trim panel (to get access to bumper's nuts) and unscrew the bumper's nuts; check vehicle manufacturer manual for correct trunk panels disassembly (F 15, 16).

**!** CAUTION: make sure not to injure yourself or damage any part of the vehicle during this process!

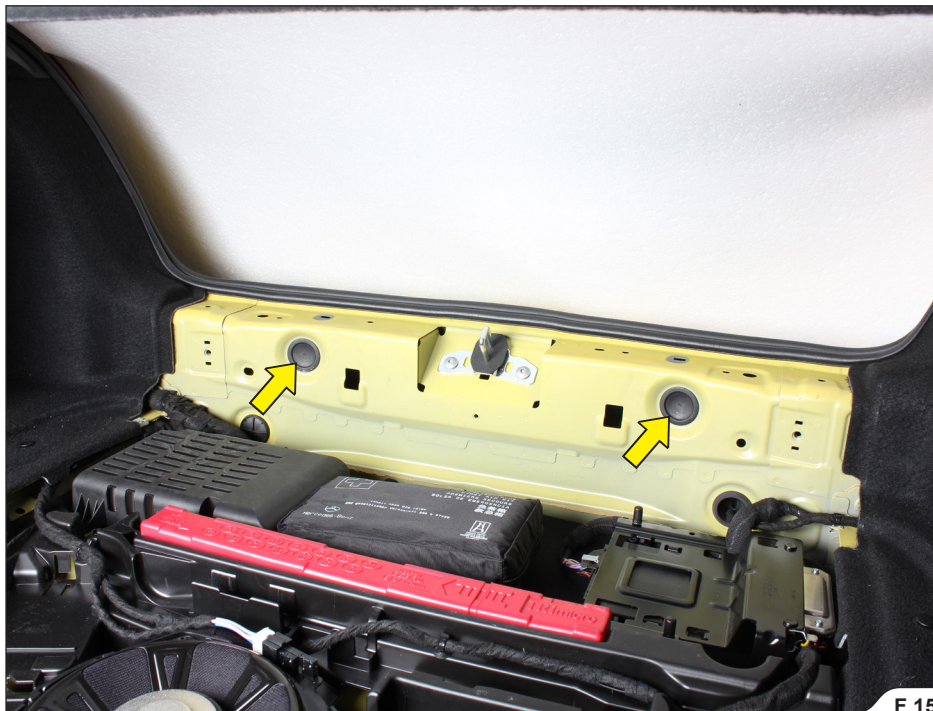



F 16

8. Partially remove the bumper, disconnect the marked connector and remove the bumper off the vehicle (F 17).


! **CAUTION:** make sure not to injure yourself or damage any part of the vehicle during this process!





9. Drill the marked tail pipe's bracket rivets - using 3.2 mm (0,126 inch) drill bit, undo the fasteners and remove tail pipe' covers on both sides of the bumper (F 18, 19).

! **CAUTION:** make sure not to injure yourself or damage the bumper during this process!

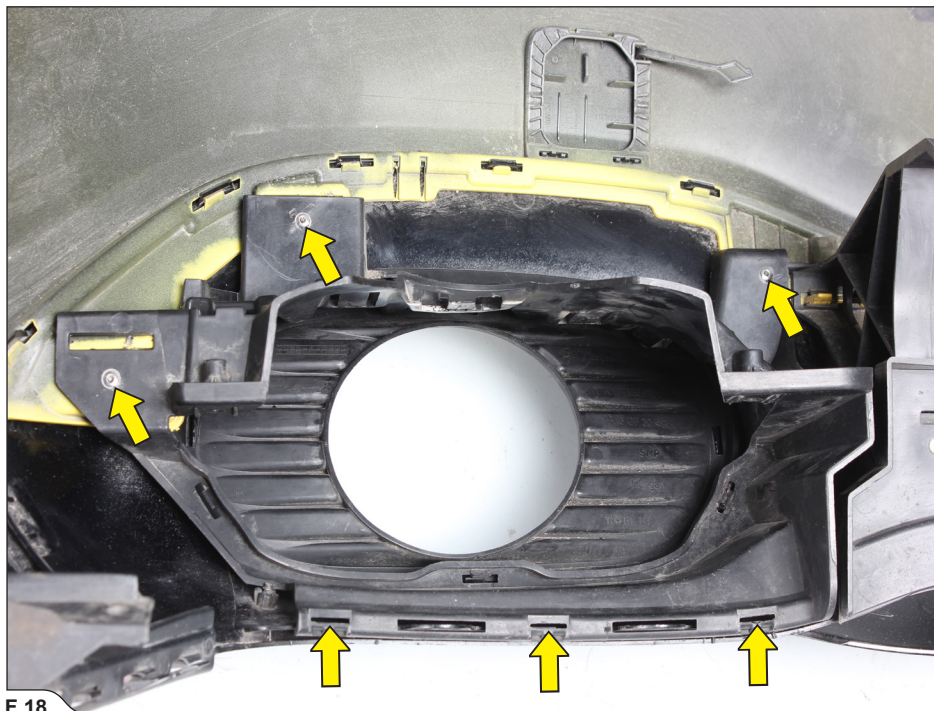

F 18



10. Insert both tail pipes' brackets back onto the bumper and rivet them, using rivets from Akrapovič installation kit (F 20).

**!** CAUTION: make sure not to injure yourself or damage the bumper during this process!




F 20

## INSTALLATION OF THE AKRAPOVIČ EXHAUST SYSTEM:

1. Install the stock exhaust valve actuator (using bolts, nuts and bolt sealant from Akrapovič installation kit), stock rubber brackets and clamp (Akrapovič installation kit) onto the Akrapovič muffler, as shown (F 21, 22, 23, 24).

**!** CAUTION: make sure not to injure yourself or damage any part of the muffler during this process!

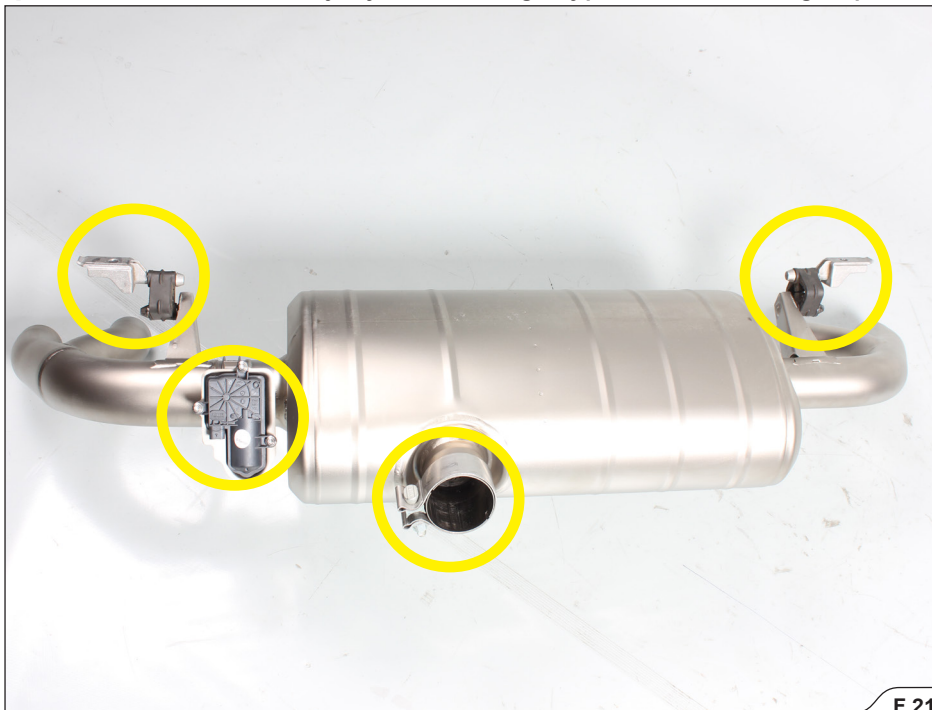







F 22

**INSTALLATION TIP:** for easier mounting, lubricate the rubber brackets (WD40®)\*.  
\*WD-40® is a trademark of the WD-40 Company.

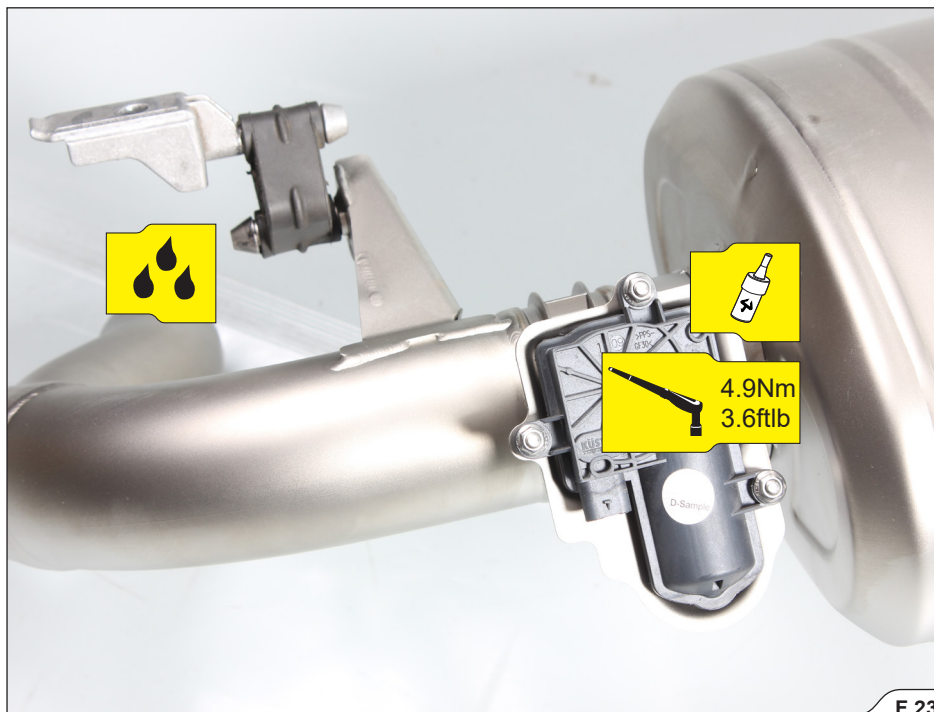

 **INSTALLATION TIP: for easier mounting, lubricate the rubber brackets (WD40®)\*.**  
\*WD-40® is a trademark of the WD-40 Company.




F 24

2. Install the stock rubber bracket onto the Akrapovič link pipe and assemble the muffler with link pipe, as shown (F 25, 26).

**!** CAUTION: make sure not to injure yourself or damage any part of the muffler during this process!



**!** IMPORTANT: hand tighten the clamps only (F 26)!

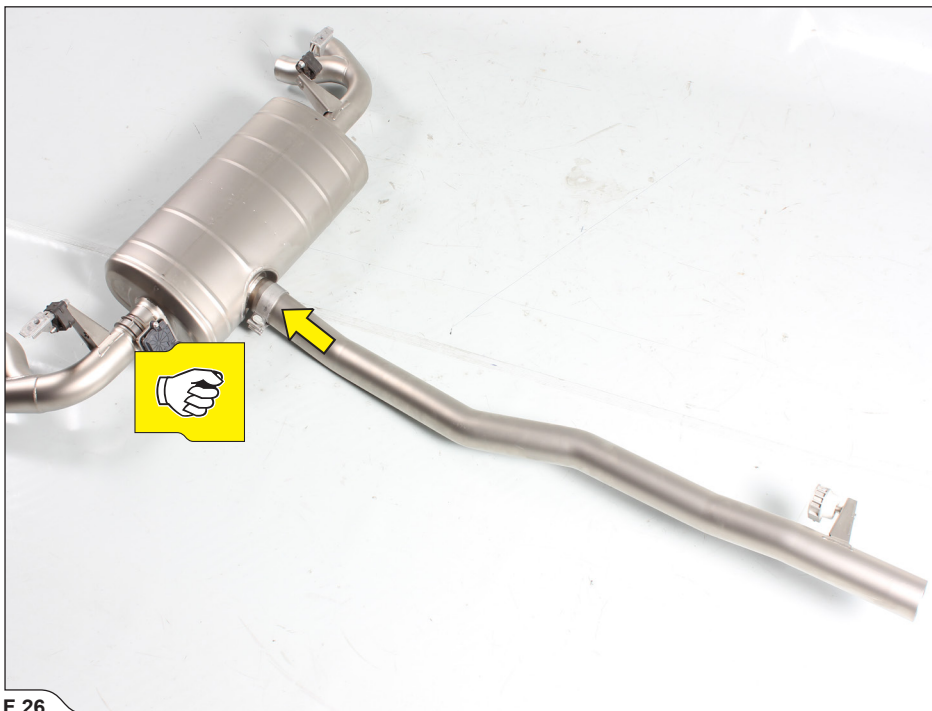

F 26

3. Reinstall the rear bumper onto the vehicle; check the vehicle manufacturer's workshop manual for correct installation and tightening torques.
4. Install the tail pipes into the bumper; make sure, that you attach the marked tail pipes' hooks into the bumper tail pipes' brackets correctly (**F 27, 28, 29, 30**).

**!** **IMPORTANT:** make sure, not to damage tail pipes, bumper or any part of the vehicle during this process!





F 28








F 30

5. Adjust and center both tail pipes in respect to the bumpers' cutouts and tighten the tail pipes onto the brackets, using stock bolts (F 31, 32, 33).

! **CAUTION:** make sure not to injure yourself, damage the tail pipes or any part of the vehicle during this process!

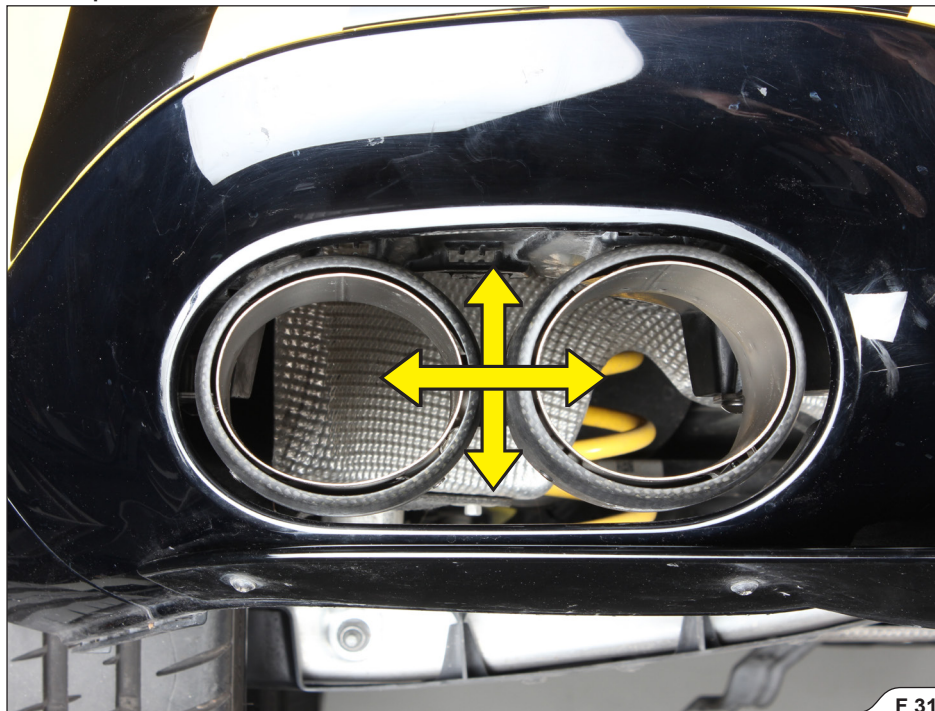




F 32

 **AKRAPOVIC**






6. Slide the double clamp from Akrapovič installation kit onto the stock pipe, as shown (F 34).
- ! **CAUTION:** make sure not to injure yourself or damage any part of the vehicle during this process!

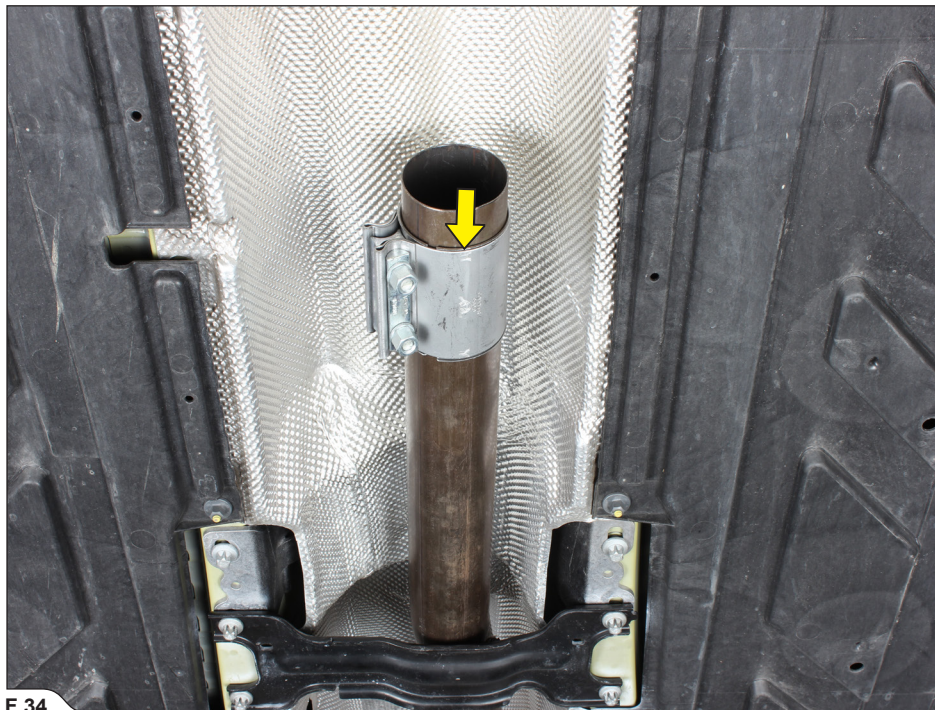

F 34


7. Carefully install the Akrapovič exhaust system onto the vehicle, adjust and align it in respect to the tail pipes; tighten and attach all rubber brackets onto the chassis, tighten the clamps to the specified torque and connect the exhaust flap actuator's connector (F 35, 36, 37, 38, 39, 40, 41).

**CAUTION:** make sure not to injure yourself or damage the vehicle or exhaust system during this process!

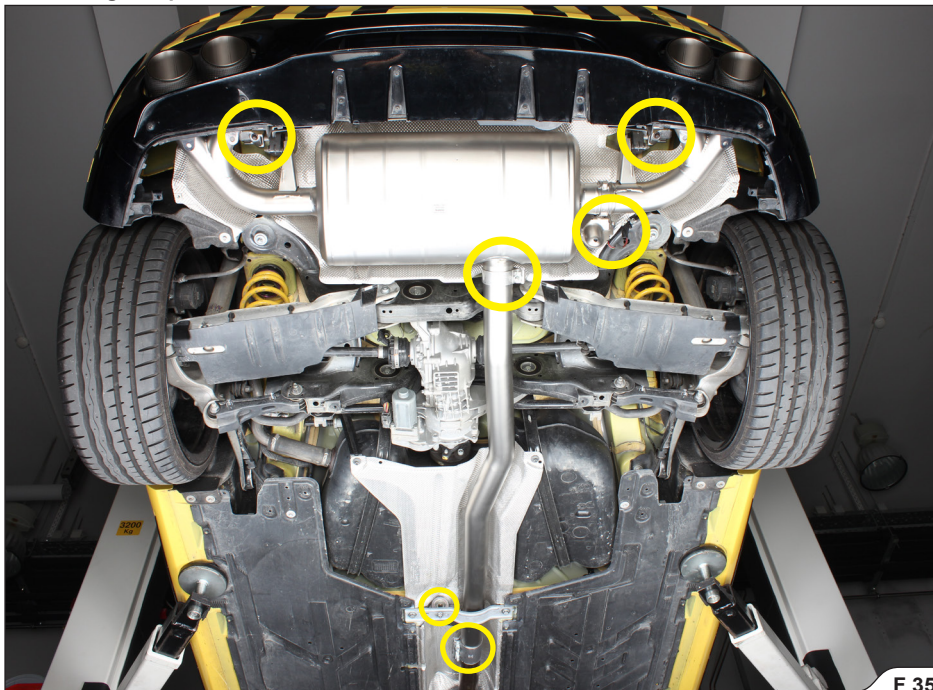




F 36

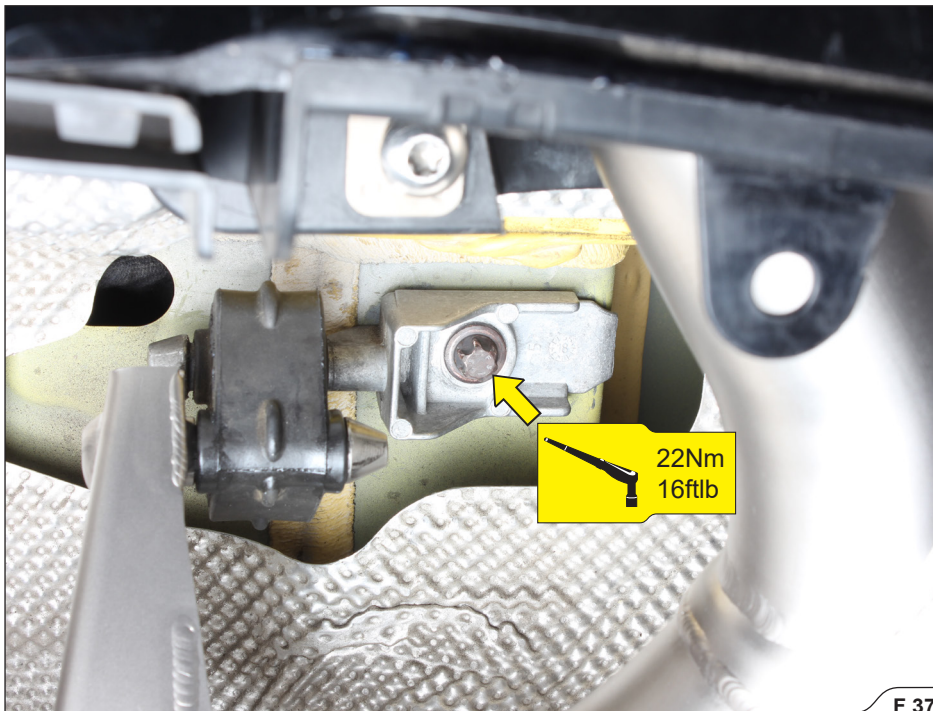





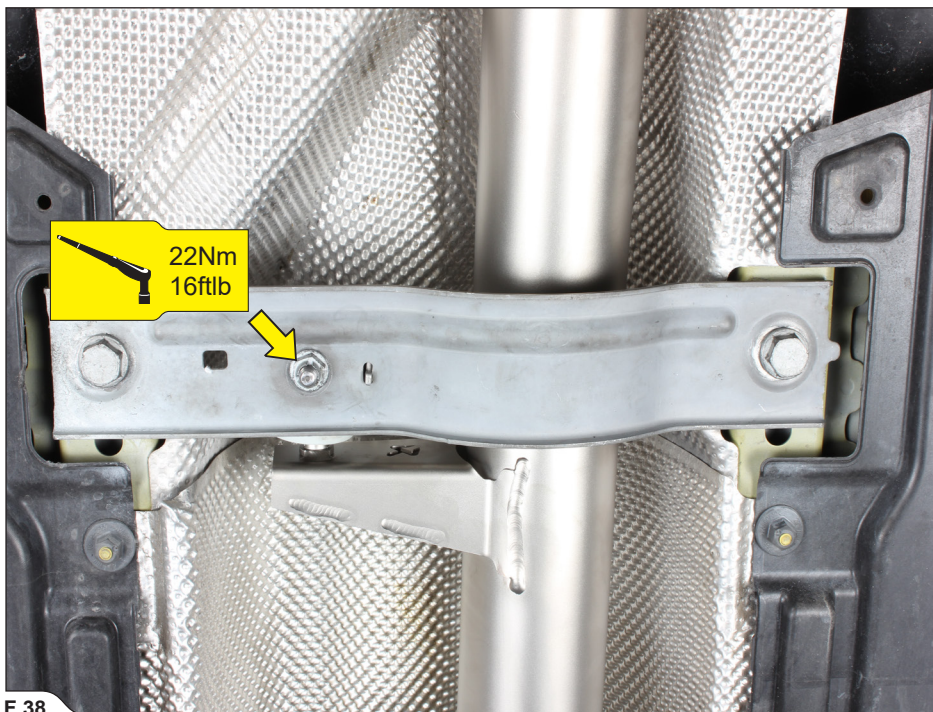


F 38

**!** IMPORTANT: make sure to adjust the clamp at the middle of the joint, before tightening (F 39)!

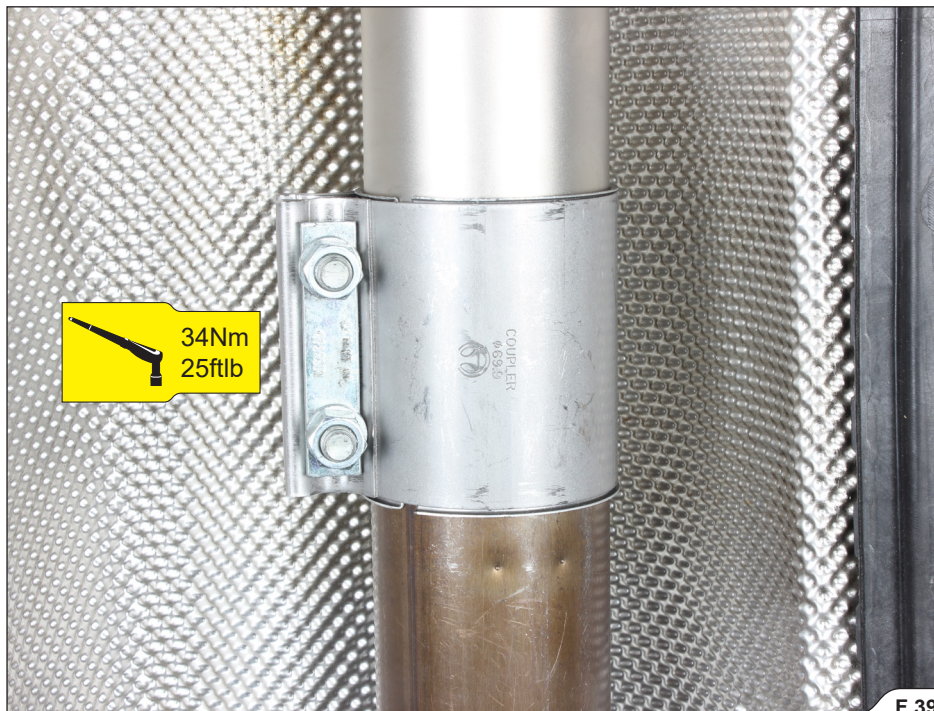

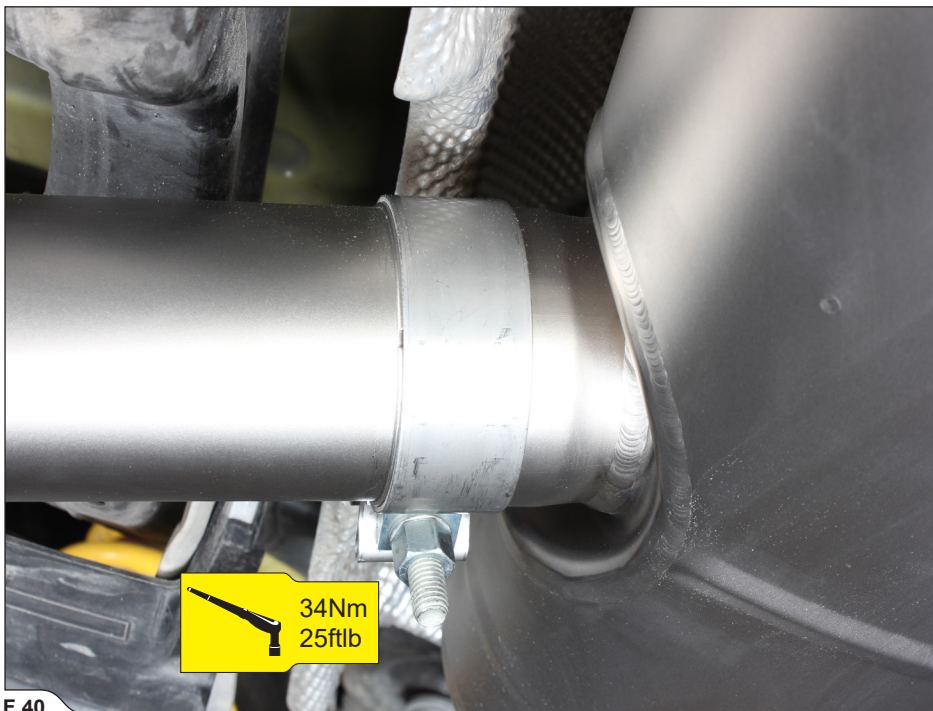

F 40

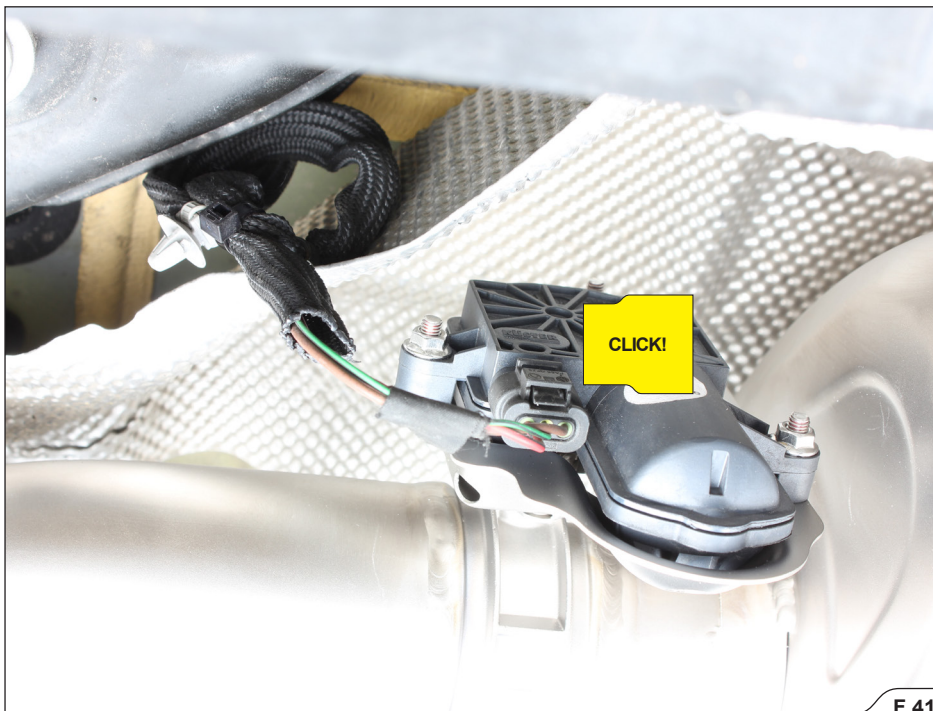



8. Secure the wiring, as shown, using tie wrap from Akrapovič installation kit (F 42).

**!** **IMPORTANT:** make sure to secure the wiring harness in such a way, that it won't touch any hot or moving parts of the vehicle!



F 42

## **FINAL INSTALLATION:**

- !** **IMPORTANT:** reinstall the dismantled or partially removed stock parts (wheel arches, bumper etc.); check vehicle manufacturer manual for tightening torques.
- !** **IMPORTANT:** make sure all the nuts and bolts are sufficiently tightened. In case the exhaust system touches the cowling or other parts, repeat the adjustment of the exhaust system or contact your authorized dealer.
- !** **IMPORTANT:** clean all exhaust components before the first start of the engine or the stains will burn onto the surfaces!

## **MAINTENANCE OF THE AKRAPOVIČ EXHAUST SYSTEM:**

1. Clean the titanium exhaust components with a multi-purpose spray lubricant (WD-40<sup>®</sup> or equivalent)\*, carbon fiber exhaust components with soft and dry cloth and stainless steel components with soft cloth sprayed with contact cleaner, then wipe with soft and dry cloth. A change in the color of the exhaust system is normal due to high temperatures.
2. Periodically make sure all the bolts and springs are sufficiently tight.

\*WD-40<sup>®</sup> is a trademark of the WD-40 Company.



**INSTALLATION TIP: IT IS NORMAL FOR WHITE SMOKE TO COME OUT OF THE MUFFLER AT FIRST OPERATION.**

- !** **CAUTION:** DO NOT STAND BEHIND THE MUFFLER AT ANY TIME.
- !** **CAUTION:** DO NOT USE AUTOMOTIVE WHEEL CLEANERS OR ANY CLEANING PRODUCTS WHICH CONTAIN ACIDIC ADDITIVES TO CLEAN THE AKRAPOVIČ EXHAUST SYSTEMS.

**WARNING: THE EXHAUST SYSTEM CAN BE EXTREMELY HOT. ALLOW THE EXHAUST AND ENGINE TO COOL DOWN BEFORE BEGINNING INSTALLATION OR ANY OTHER WORK ON THE EXHAUST SYSTEM. THIS MANUAL IS SPECIFIC TO THE MERCEDES-AMG A35 TYPE W177. THERE MAY BE SOME DIFFERENCES IN INSTALLATION PROCEDURES FOR OTHER MODELS.**

**TROUBLESHOOTING:**

<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
Exhaust gas leaks out of the muffler/pipe clamp connections	loosened clamp	tighten the clamp to specified torque
	connection is not completely joined	tap the connection into place and tighten the clamp to specified torque