




# ALTERNATOR MOUNT

## 214L

Small Block Chevy - Long Water Pump  
Driver's Side - Low

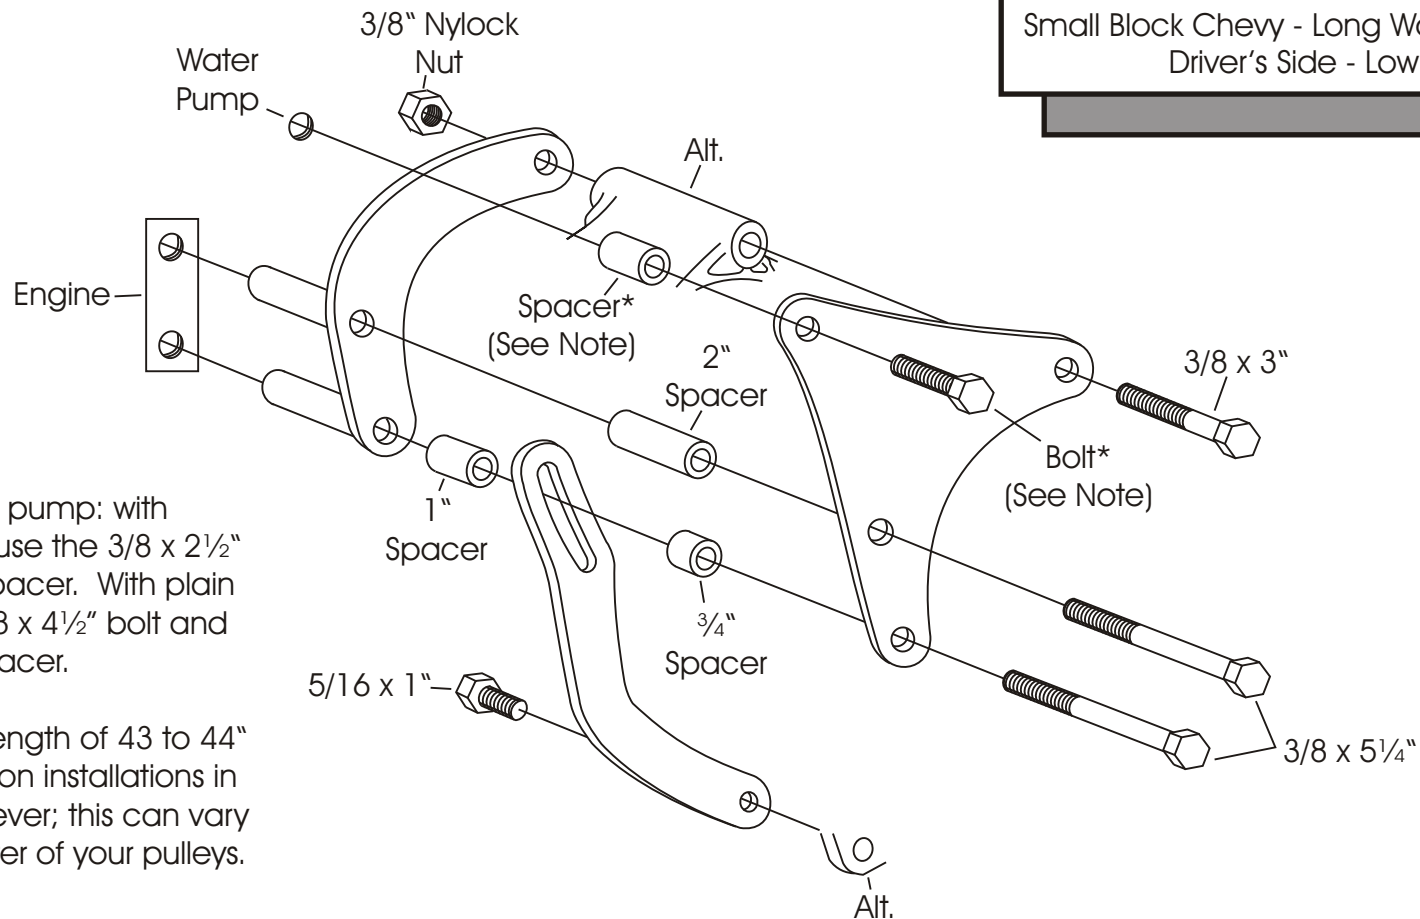

**\*NOTE:** At water pump: with threaded boss use the 3/8 x 2 1/2" bolt and 1 3/4" spacer. With plain boss use the 3/8 x 4 1/2" bolt and nut and 1 1/2" spacer.

We use a belt length of 43 to 44" with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.

**As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.**