## <u>ALTERNATOR</u> MOUNT

232L

Small Block Chevy - Short Water Pump Driver's Side


3/8 x 3½"

Bolt

3/8 x 3/4"

Bolt



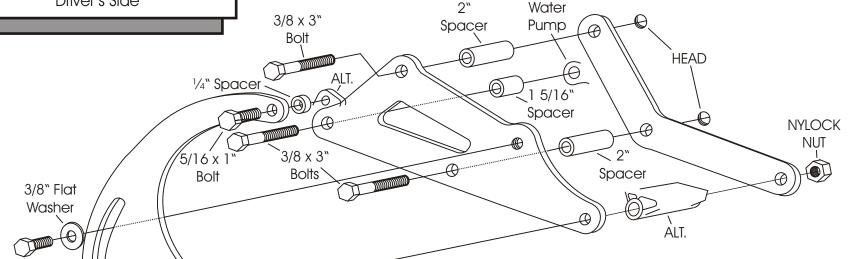

As with any mount system, assemble all of the brackets to engine BEFORE TIGHTENING THE BOLTS.

We use a belt length of  $55\frac{1}{2}$  -  $56\frac{1}{2}$  " with this

mount on installations in our shop. However;

this can vary with the diameter of your

pulleys.

As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.