



## Installation Guide for 19-21 RAM 1500 LUXX-Series LED Tail lights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrival innovative technology. The following installation guide we take you through the installation of your new **ALPHAREX TAIL LIGHTS** for your 19-21 RAM 1500 step by step.



### Table of Contents



#### **PART I REMOVE TAIL LIGHTS**

- **INSTALLATION TOOLS**
- **STEP 1.** Remove tailgate cables and plastic clips
- **STEP 2.** Unscrew tail lights screws
- **STEP 3.** Unplug sockets and remove tail lights

#### **PART II INSTALL ALPHAREX TAIL LIGHTS**


- **STEP 1.** Plug the sockets and install tail lights
- **STEP 2.** Complete Installation

*Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.*


# PART I REMOVE TAIL LIGHTS

## INSTALLATION TOOLS


PREPARE THESE TOOLS FOR INSTALLATION



Torx  
Screwdriver

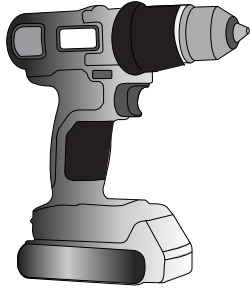

Power Tool



Metal  
Panel  
Popper



1/4 Ratchet



1/4 Extension

T25  
Star Torx



Socket

**NOTE: Whenever using a power tool, please make sure do not overtighten the screws.**

Whenever working on your vehicle always make sure your vehicle is parked with the ignition off.



## STEP 1. REMOVE TAILGATE CABLES AND PLASTIC CLIPS

Open the tailgate and remove the tailgate cables for left and right side.




Use a panel popper to remove the 2 plastic clips for each side.



## STEP 2. UNSCREW TAIL LIGHTS SCREWS

Remove the top and bottom T25 screws.  
Please set them aside for later reinstallation.

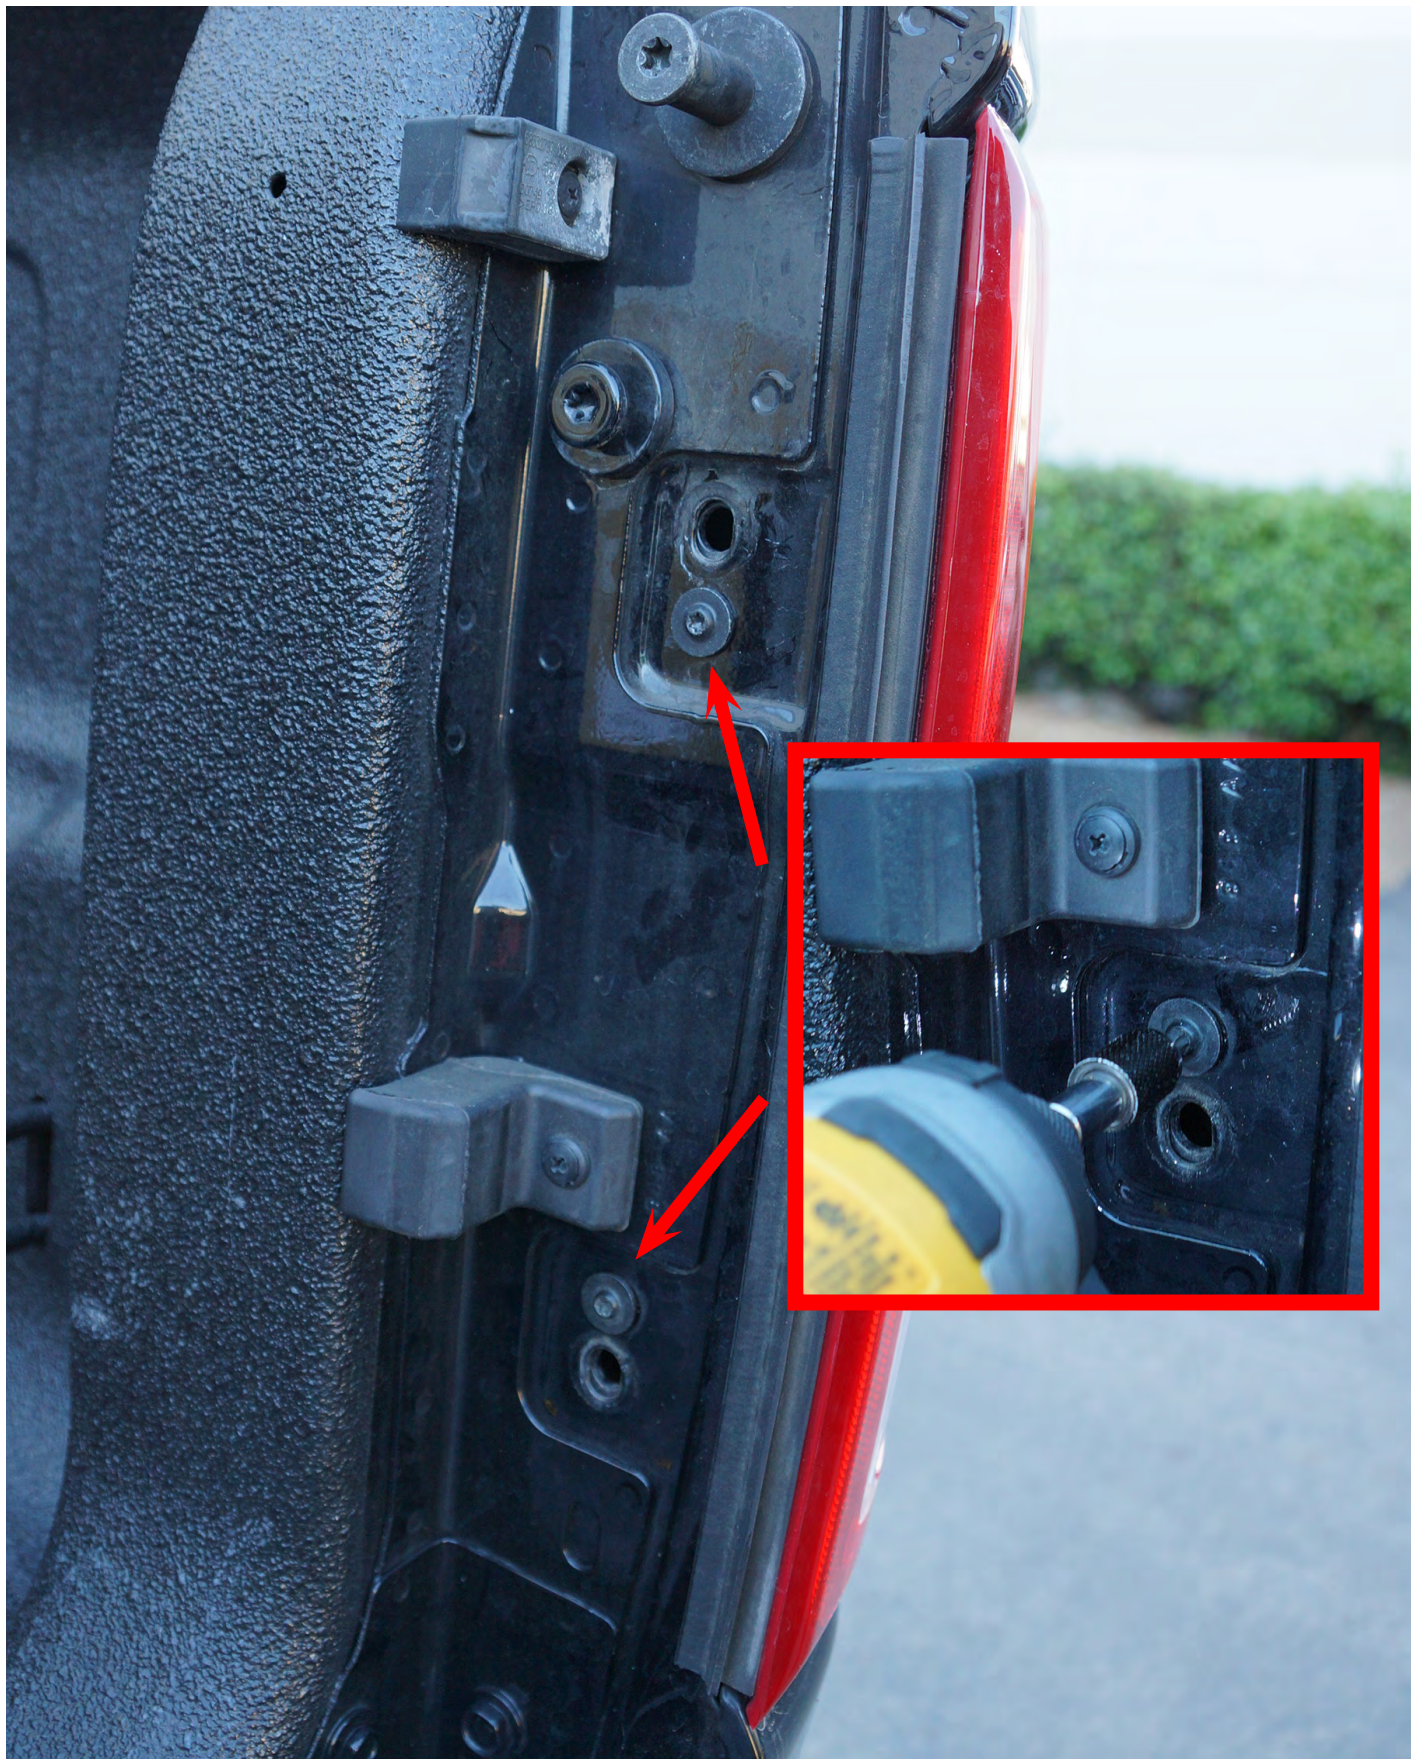

After screws removal, gently pull the tail light outward with a slight angle.



### **STEP 3. UNPLUG SOCKETS AND REMOVE TAIL LIGHTS**

Unplug the sockets before removing the tail lights.





Repeat the same steps for the other side of tail light and remove it completely.



## PART II INSTALL ALPHAREX TAIL LIGHTS



### STEP 1. PLUG THE SOCKETS AND INSTALL TAIL LIGHTS

Plug the sockets to the new ALPHAREX tail lights.







Reverse the removal process to install the new tail lights into the vehicle.





Tighten the 2 X T25 screws for each side of tail light and insert the 2 X plastic clips for each side.

**NOTE: Whenever using a power wrench, please make sure do not overtighten the screws.**

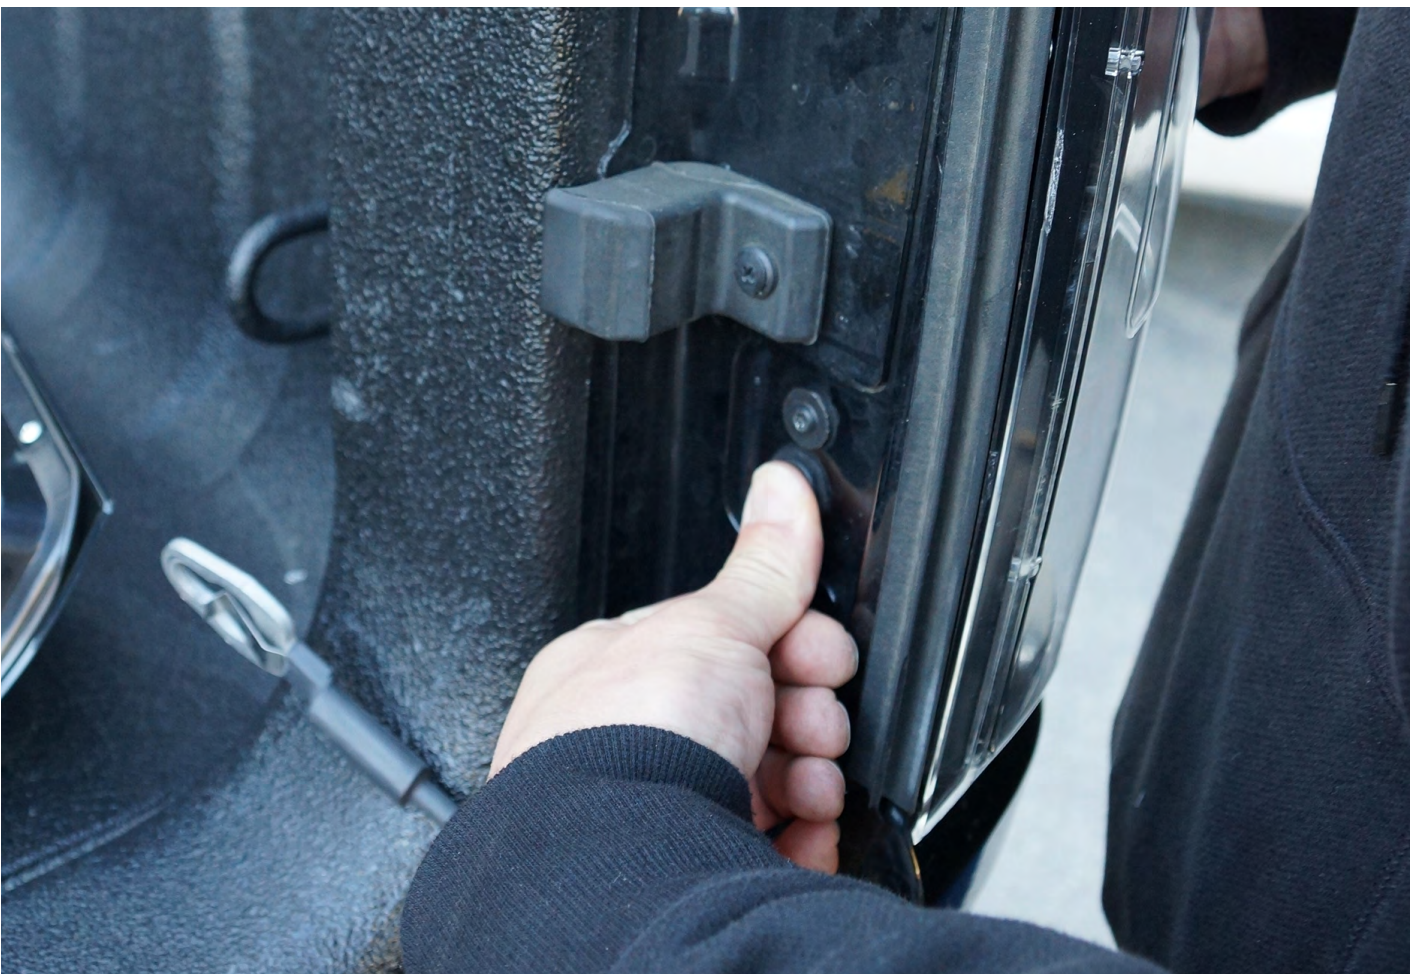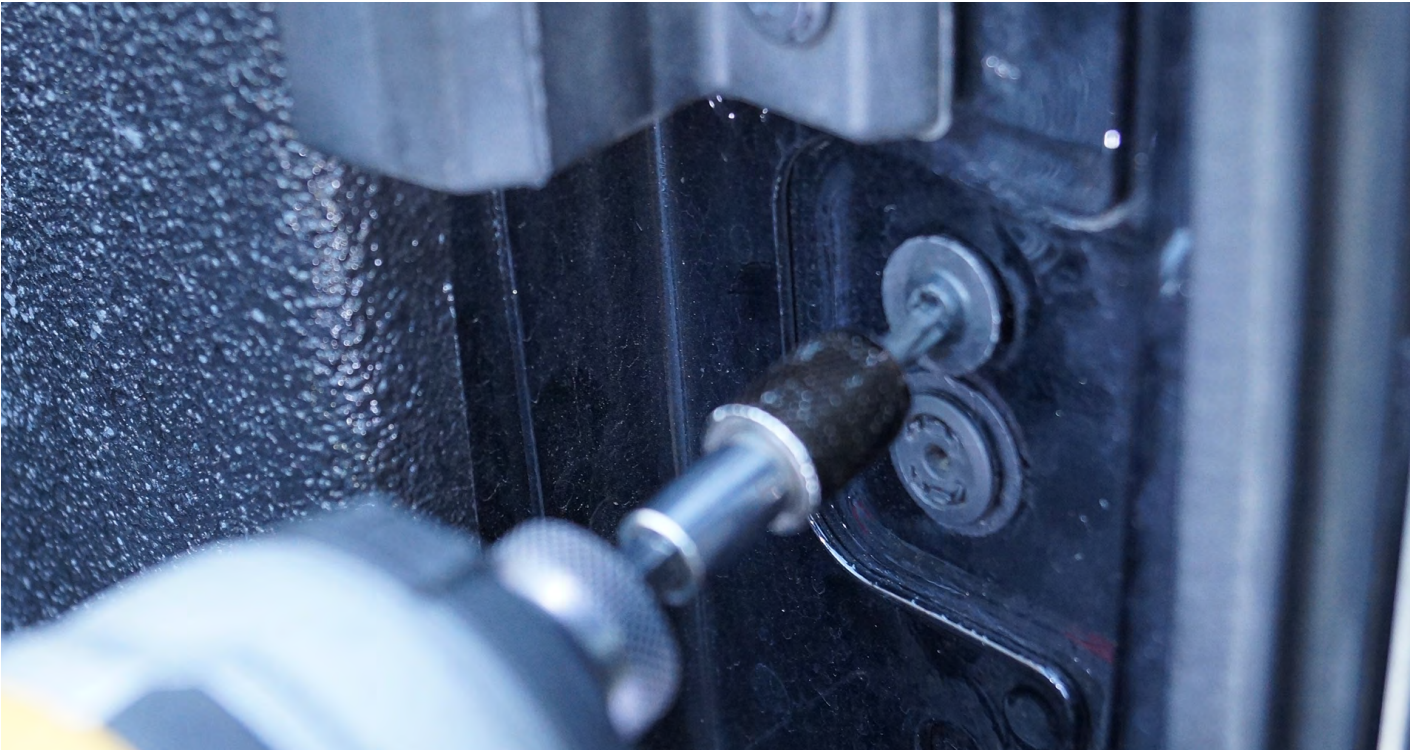

## STEP 2. COMPLETE INSTALLATION

Congratulations!  
you have completed the installation for ALPHAREX 19-21 RAM 1500 LUXX-Series LED tail lights.



Discover other custom and factory tail lights on our website.