



Installation Guide for 2006-08 Dodge Ram Headlights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrivalled innovative technology. This installation guide takes you through the step-by-step process of installing your new **ALPHAREX HEADLIGHTS** for your 2006-08 Dodge Ram

DO NOT USE DIELECTRIC GREASE!



Table of Contents



PART I REMOVE HEADLIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Disconnecting the negative battery terminal
- **STEP 2.** Front grille removal
- **STEP 3.** Remove Headlight bolts
- **STEP 4.** Remove Headlights
- **STEP 5.** Unplug connectors

PART II INSTALL HEADLIGHTS & DRL WIRING


- **STEP 1.** Install ALPHAREX headlights & DRL Harness
- **STEP 2.** Tap the fuse
- **STEP 3.** Connect headlight plugs
- **STEP 4.** Adjust headlight level (PRO & LUXX SERIES)
- **STEP 4.** Adjust headlight level (NOVA SERIES)
- **STEP 5.** Complete Installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.


PART I REMOVE HEADLIGHTS

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION




Metal
Panel
Popper



Flat
Screwdriver



Phillips
Screwdriver

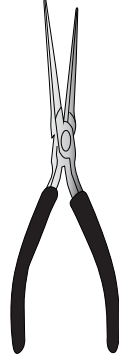

Pliers



1/4 Ratchet



1/4 Extension

10mm



Socket

STEP 1. DISCONNECTING THE NEGATIVE BATTERY TERMINAL

Whenever working on your vehicle, always start by disconnecting the negative battery terminal.




STEP 2. FRONT GRILLE REMOVAL

Begin the process of removing the front grille by detaching the bolts and carefully extracting the plastic retainers.



STEP 3. REMOVE HEADLIGHT BOLTS

Take out the two 10mm bolts securing the headlight.

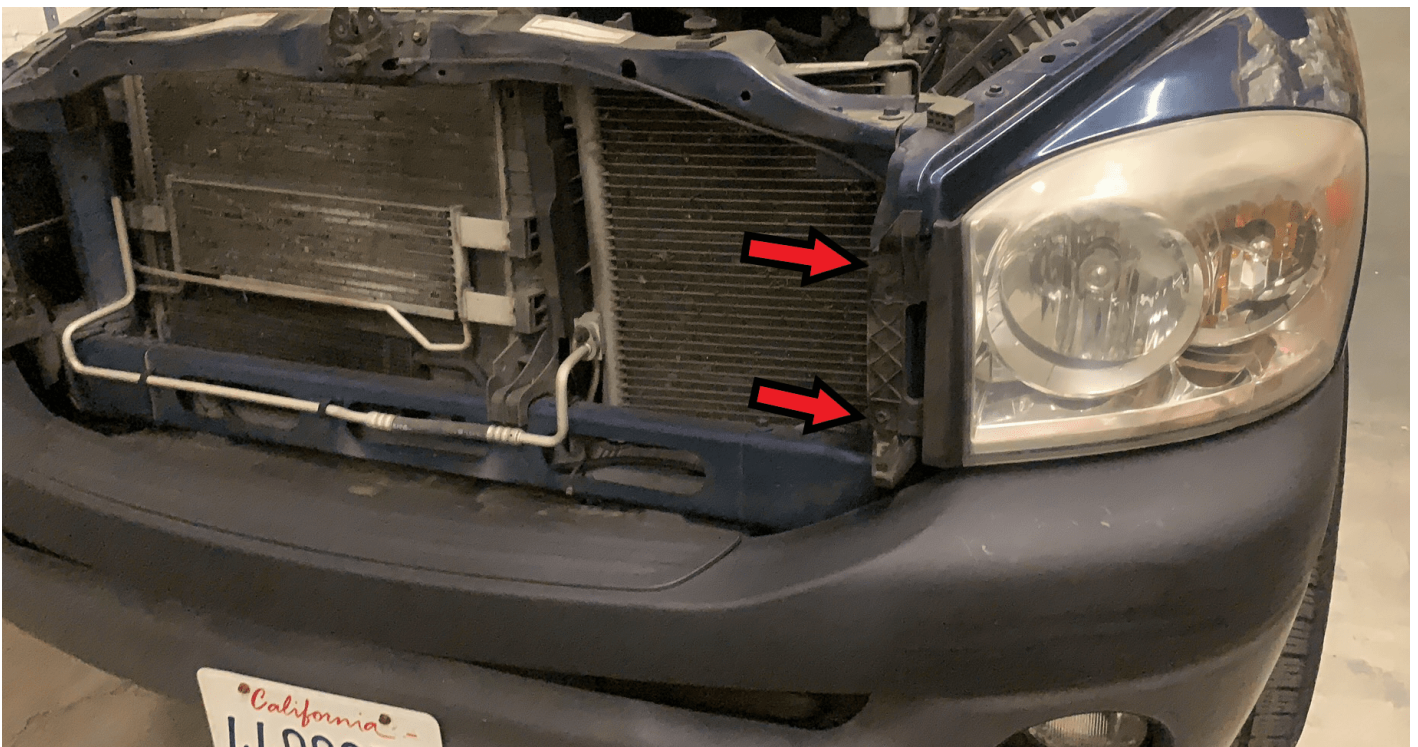

In the wheel well, identify the black round rubber grommets. Remove these grommets to create an open space, allowing access to a single 10mm nut for removal.



STEP 4. REMOVE HEADLIGHTS

Remove the headlight by gently pulling it towards the front of the vehicle.



STEP 5. UNPLUG CONNECTORS

Disconnect the two connectors and proceed to remove the headlight.




Now that one headlight is removed, follow the same procedure for the other headlight.

PART II INSTALL HEADLIGHTS & DRL WIRING

STEP 1. INSTALL ALPHAREX HEADLIGHTS & DRL HARNESS





With both headlights disconnected, proceed to install the DRL harness. Connect the red wire to the battery's positive terminal and the black wire to the battery's negative terminal.

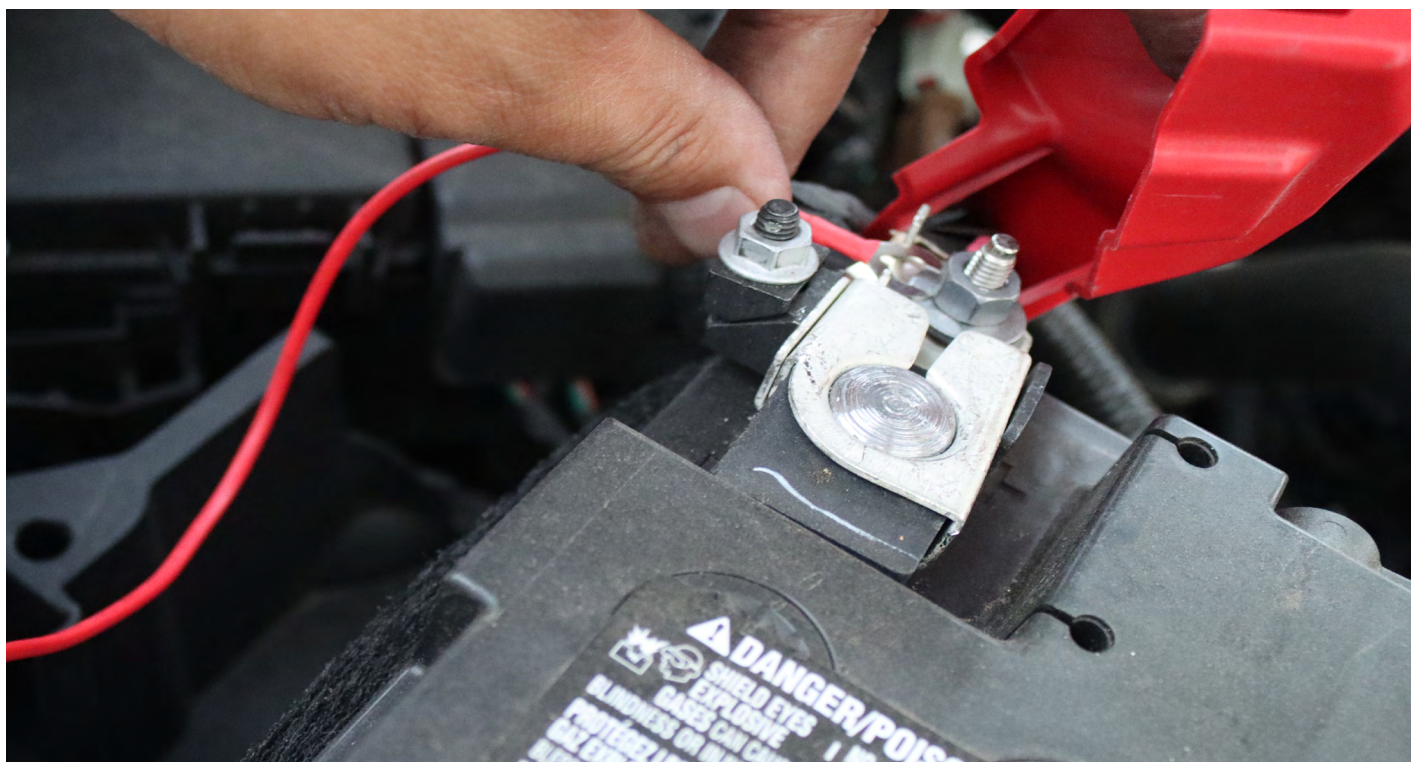

STEP 4. ADJUST HEADLIGHT LEVEL

When making adjustments, try doing it in 360-degree increments for better precision.

FOR PRO / LUXX SERIES HEADLIGHTS

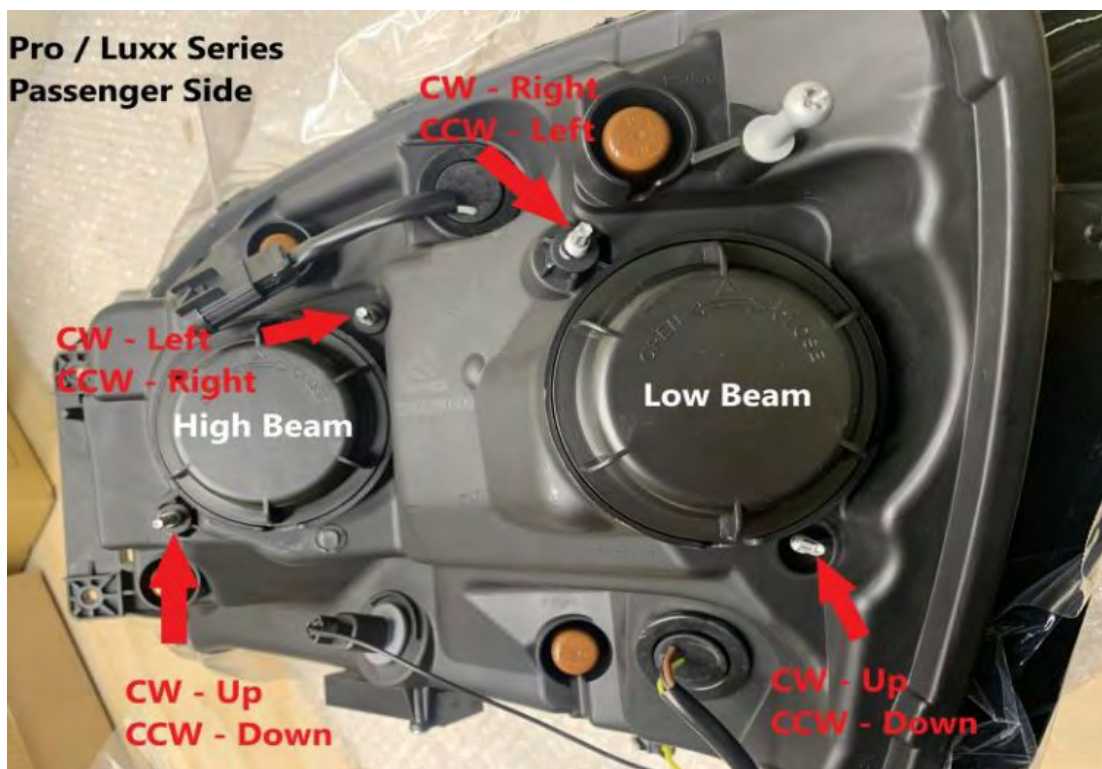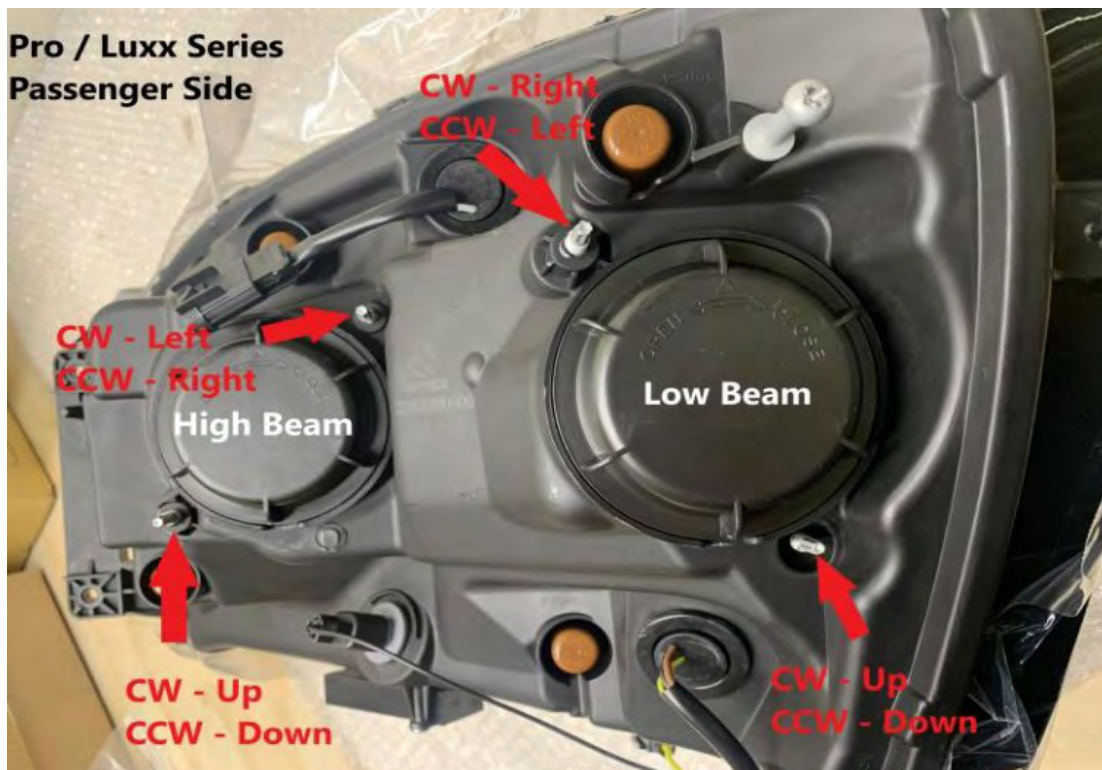


CW = Clockwise

CCW = Counterclockwise

Follow the same procedure for the other headlight.

FOR NOVA SERIES HEADLIGHTS

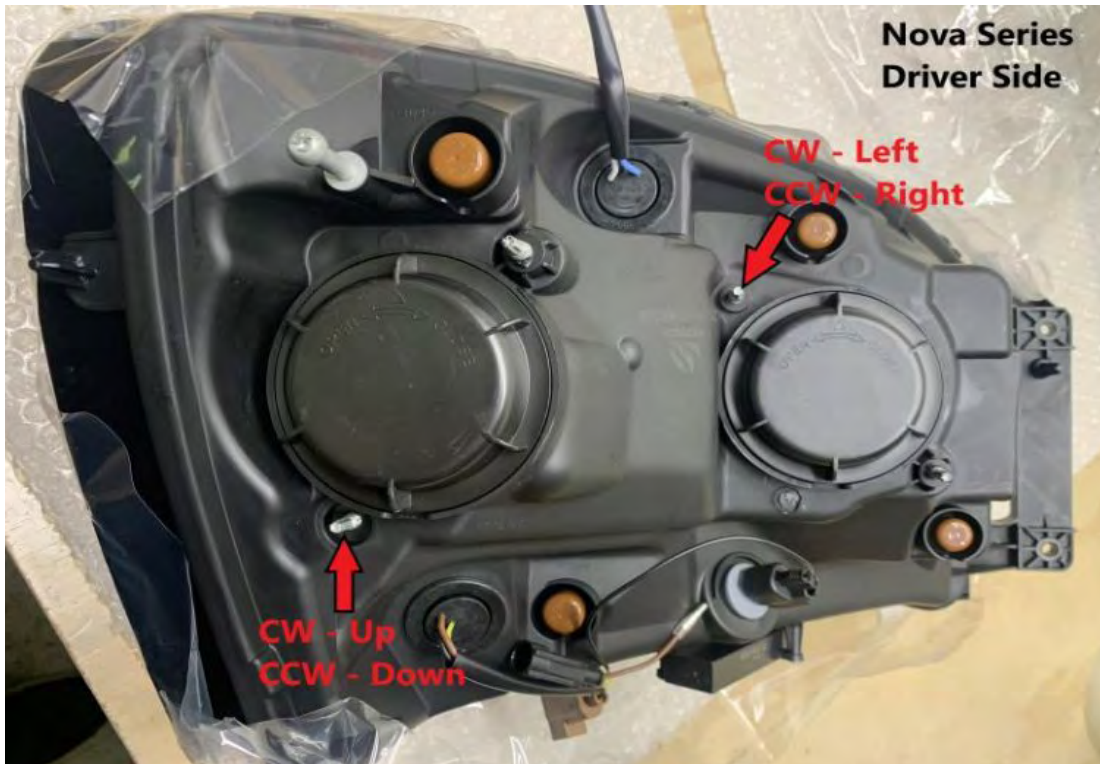


CW = Clockwise

CCW = Counterclockwise

Follow the same procedure for the other headlight.

STEP 5. COMPLETE INSTALLATION

Once everything has been tested, aim your ALPHAREX headlights by parking 25ft from a wall and level the headlight evenly.

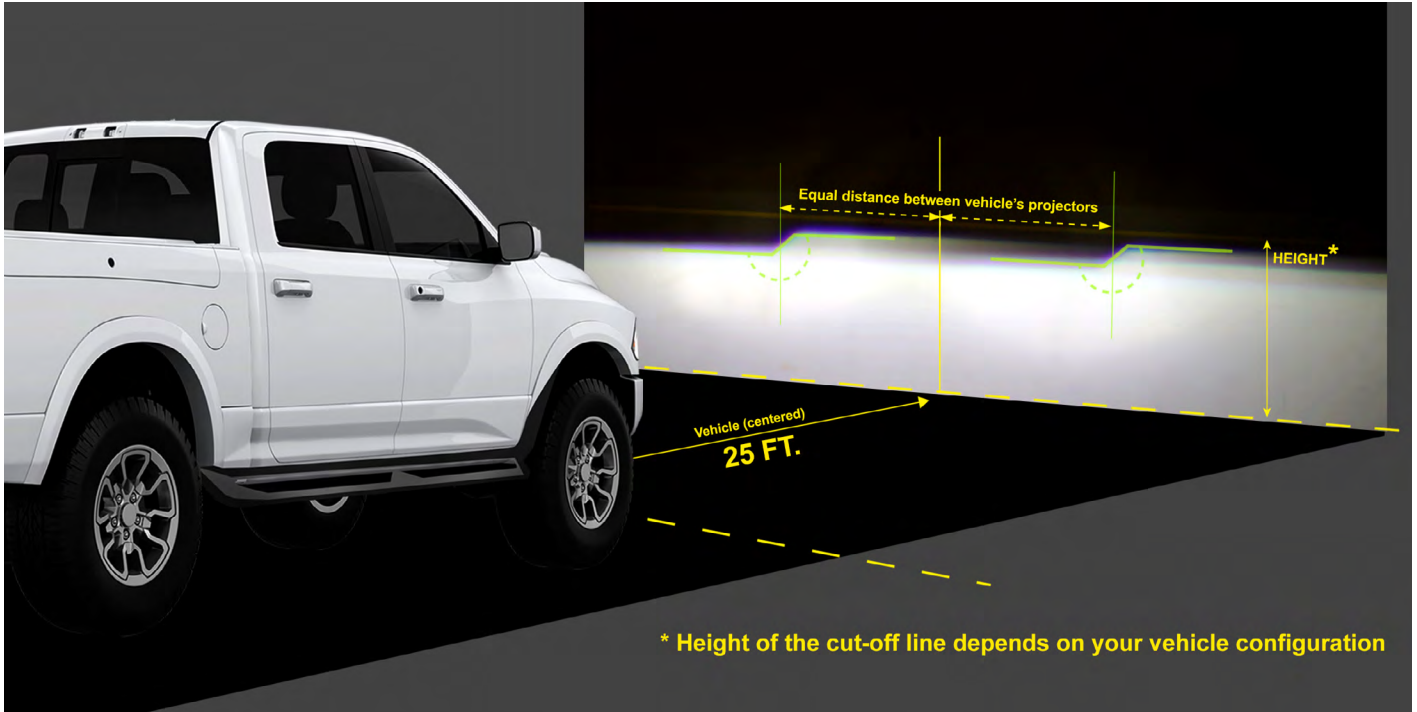

Congratulations! You have completed the installation for ALPHAREX **06-08 Dodge Ram HEADLIGHTS.**

