



Installation instructions for Sliders **Dodge Ram 2010-newer**

Please read before beginning

- This installation requires two people

Required tools

- 9/16 wrench
- 9/16 socket with ratchet and extension.
- Drill
- Drill bit 1/4"
- Paint or rust inhibitor (to seal drilled holes for rust prone areas)

Included hardware

Quantity

- | | |
|--|--------|
| • 70014 Bolt, Button Head Cap, SS, 1/4-20 x 1 1/4" | 10 ea. |
| • 70009 Washer, Flat, SS, 1/4 ID x 5/8 OD (.03" Thick) | 20ea |
| • 70008 Nut, Nylock, SS, 1/4-20 | 10 ea |
| • 70078 Flat Washer 3/8 id | 12 ea. |
| • 70024 Nylock Nut 3/8-16 grade 5 | 12 ea. |
| • 70206 Washer, Nylon Self Retaining Washers | 10 ea |
| • Straps | 6 ea. |

Installation Instructions

1. Note that the straps with the nut welded to one end are for the center sections and are designed to avoid a narrow section in the body well. (See figures 1 and 2). Refer to photos 3 and 4 to install the forward and back strap plates into body housing. These need to be installed first. Place the nylon self retaining washer over the bolts, as this will help keep the straps in place while fitting your sliders on.
2. Lift slider into place and install hex bolt with washer into strap plate followed by the flat washer and nylock nut.
3. Once the sliders are mounted to the body you will notice that there are 2 holes at each mounting bracket that line up with the pinch weld of the vehicle. Use these holes as a guide to drill through the pinch weld. Use supplied 1/4" hardware to mount the brackets to the pinch weld for additional support.



Figure 1

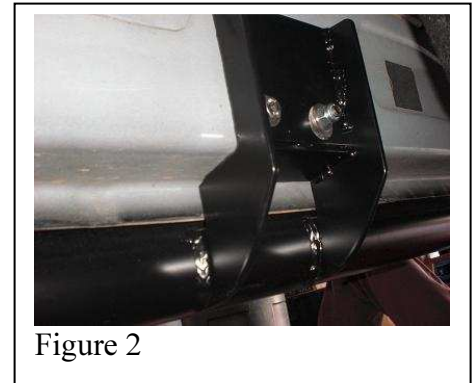


Figure 2

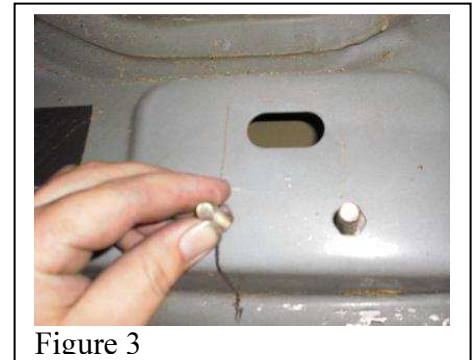


Figure 3

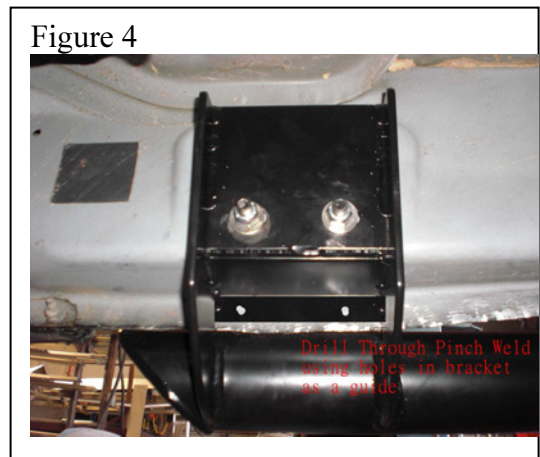


Figure 4