

PRODUCT DESCRIPTION: Headlight
APPLICATION: 2017-2019 Ford Superduty



INSTALLATION GUIDE

READ COMPLETE INSTRUCTIONS BEFORE INSTALLATION
Improper installation may void warranty.



TOOLS NEEDED: 10mm Socket. Flat head screwdriver

STEP 1



Stock 2017 Ford Superduty Headlights

STEP 2




Open hood and disconnect negative battery terminal

STEP 3




Remove 13 body panel clips from radiator shroud

STEP 4

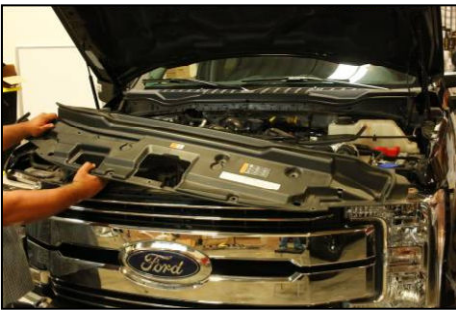


Remove radiator shroud and set aside

STEP 5

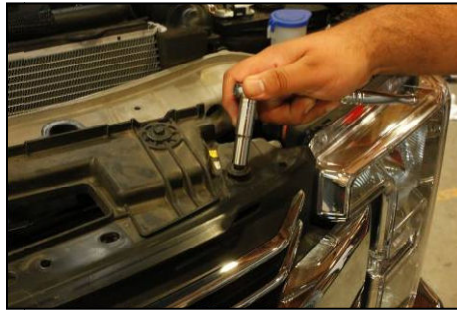

Remove eight 8mm bolts from top of radiator grill

STEP 6

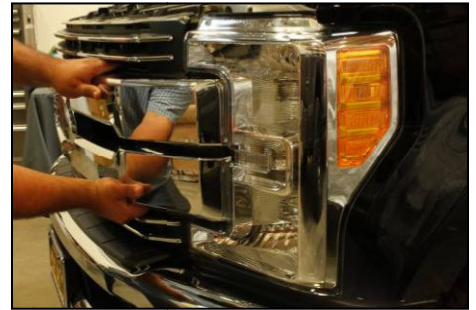

Grab center outside of grill and pull forward to detach grill from headlight on both sides.

STEP 7



Tilt top of grill forward to reveal bottom grill clips. Use flat head screwdriver to push clip down.

STEP 8



Detach 4 clips remove grill and set aside

STEP 9



Remove two 10mm inner headlight bolts

STEP 10



Remove lower outer 10mm fender headlight bolt behind rubber bumper molding

STEP 11



Remove top 10mm headlight bolt

STEP 12



Slide headlight forward then up to remove headlight. Disconnect all connections from factory headlight

STEP 13



Connect factory connections to new Anzo USA headlight

STEP 14



Reverse steps 9-12 to install new Anzo USA headlight

STEP 15



Repeat steps 9-14 for opposite side headlight. Reverse steps 2-8 to install grill and shroud.

STEP 16



Check all functions of lights before operating vehicle.