



Description: [LED Taillight](#)

Part Number: 311001 - 311002 - 311002 - 311100

Application: 2000-2006 Chevrolet Suburban / Tahoe



Tools needed: Phillips screwdriver



Step 1: Locate the main circuit board for the tail light underneath the vehicle located in the passenger rear.



Step 2: Unplug the middle wire harness from the circuit board.



Step 3: locate the two screws on the side of the light.



Step 4: Unscrew the two screws with the phillips screwdriver.



Step 5: Remove the tail light from the vehicle.




Step 6: Remove the protective sticker backing from the resistors and stick them inside the top tail light housing.



Step 7: plug the two resistors into the tail light.



Step 8: Put the tail light in and screw in the two screws to hold the tail light in place.

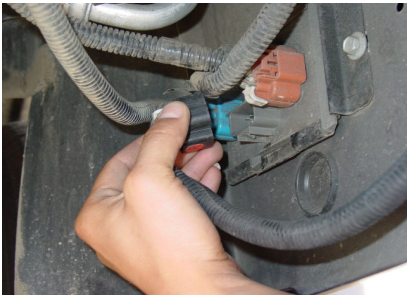

Step 9: Plug the wire harness into the circuit board and test the function of the light to make sure it is working properly