



Description: [LED Taillights](#)  
Part Number: 311022 - 311023 - 311024  
Application: 2004-2008 Ford F-150



Tools Needed:  
8mm socket.

Step 1: Open tailgate exposing  
the two 8 mm screws which hold  
the taillight to the body.



Step 2: Pull the taillight assembly  
straight out of the housing.

Step 3: Twist and pull the green  
and black socket out of the  
taillight assembly.




Step 4: Remove the black socket  
from the vehicle harness.

Step 5: Plug the harness to  
the ANZO LED taillight socket.



Step 6: Install the green socket into the ANZO taillight assembly.

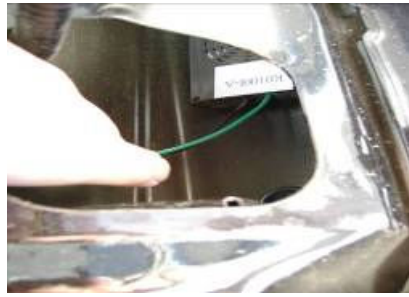

Step 7: Install the resistor in a safe place out of the taillight way



Step 8: Plug the resistor to the taillight.



Step 9: Install the taillight in to the housing of the truck using the two 8mm. Screws.



Step 10: Make sure all functions are working properly before driving.