


"DON'T GET LEFT IN THE DARK"



19-24 DODGE RAM 1500

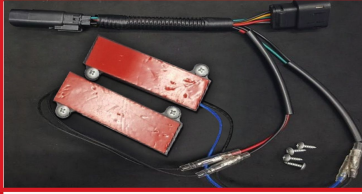

FOR OE HALOGEN MODELS

CONNECT THE OE FACTORY CONNECTOR DIRECTLY TO THE NEW TAIL LIGHT CONNECTOR. THE NEW LIGHTS ARE PRE-INSTALLED WITH THE HALOGEN HARNESS. ONLY REFER TO THE NEXT STEPS IF YOUR OE TAIL LIGHTS ARE THE LED MODELS.



FOR OE LED MODELS WITHOUT BLIS

CONNECT THE OE FACTORY CONNECTOR DIRECTLY TO THE NEW TAIL LIGHT CONNECTOR. THE NEW LIGHTS ARE PRE-INSTALLED WITH THE HALOGEN HARNESS. ONLY REFER TO THE NEXT STEPS IF YOUR OE TAIL LIGHTS ARE THE LED

FOR OE LED MODELS WITH BLIS


REFER TO 12 STEPS BELOW



STEP 1 REMOVE OEM BLIS MODULE

USE T20 TORX BIT AND UNSCREW THE 4 CIRCLED SCREWS TO REMOVE BLIS ASSEMBLY FROM OE LIGHT.


(DRIVER SIDE/LEFT SHOWN IN PHOTO)

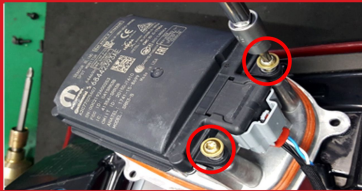

STEP 2 REMOVE OEM BLIS MODULE

USE T20 TORX BIT AND UNSCREW THE 2 SCREWS TO REMOVE BLIS SENSOR FROM BLIS HEAT SINK.

REPEAT STEP 1 & 2 ON OPPOSITE SIDE

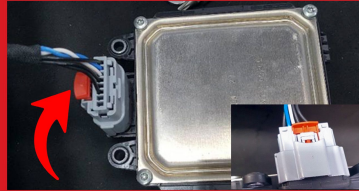

STEP 3 DISCONNECT BLIS MODULE


PRESS DOWN ORANGE TAB ON BLIS SENSOR CONNECTOR AND DISCONNECT BLIS SENSOR.

* DO NOT DROP OEM BLIS MODULE *



STEP 4 SET BLIS SENSOR ASSEMBLY ASIDE FOR LATER USE

* DO NOT DROP OEM BLIS MODULE *
REPEAT STEP 1 & 2 ON OPPOSITE SIDE

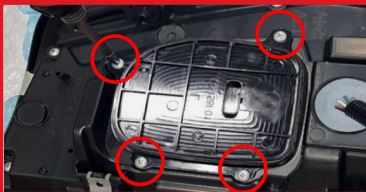

STEP 5 REMOVE BLIS COVER ON NEW TAIL LIGHT

REMOVE SCREWS FROM BLIS COVER FROM NEW LIGHT. PRESS DOWN TAB ON CONNECTOR AND DISCONNECT.



STEP 6 REMOVE HALOGEN HARNESS

REMOVE PRE-INSTALLED HALOGEN MODEL HARNESS WITH RESISTORS, PRESS DOWN BLACK TAB ON HARNESS TO DISCONNECT.



STEP 7 SET ASIDE AND STORE

SET ASIDE/STORE HALOGEN HARNESS AND RESISTORS.

REPEAT STEP 5 & 6 ON OPPOSITE SIDE



STEP 8 INSTALL BLIS MODULE ON NEW TAIL LIGHT

LOCATE BLIS ASSEMBLY REMOVED FROM OE TAIL LIGHT (SEE STEP 2)
CONNECT DISCONNECTED CONNECTOR FROM NEW LIGHT TO OEM BLIS SENSOR.



STEP 9 ASSEMBLE BLIS SENSOR

ASSEMBLE BLIS SENSOR TO BLIS HEAT SINK USING SCREWS FROM STEP 2

REPEAT STEP 8 & 9 ON OPPOSITE SIDE



STEP 10 CONTINUE TO BLIS MODULE INSTALLATION

FEED WIRE HARNESS TO INSIDE OF LIGHT

REPEAT ON OPPOSITE SIDE



STEP 11 COMPLETE BLIS MODULE INSTALLATION

SET BLIS MODULE INTO NEW TAIL LIGHT. LEAVE NO GAPS BETWEEN HOUSING AND MODULE.
ASSEMBLE BLIS MODULE TO NEW TAIL LIGHT USING 4 SCREWS FROM STEP 1



STEP 12 INSTALLATION COMPLETE

TEST ALL FUNCTIONS BEFORE DRIVING ON THE ROAD