




Description: Tail Light
Part Number: 321170
Application: 2003-2006 Porsche Cayenne




Tools Needed: Flat head
screwdriver, 3/16 hex key

Step 1: remove the two plastic
screw covers with the flat head.

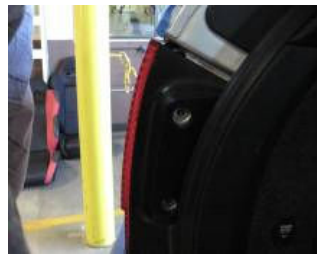

Step 2: Use the hex key to
remove the screws.

Step 3: Remove the tail light
once the two screws are off.

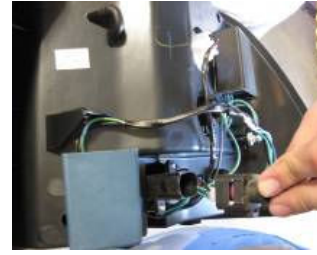

Step 4: Unplug the wire harness
from the stock light.

Step 5: Plug the wire harness
into the new Anzo light.

Step 6: Put new light in place
and screw in the hex screws.



Step 7: Test all functions before
driving.

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.