



Read complete ins before installa Improper installa void warra

## 

Tools Needed: Phillips screwdriver.



Step 3: Twist off the light bulb socket from the third brake light.



Step 6: When connecting our new Anzo third brake light make sure orange wire lines up with the white/yellow wire and black to red/areen wire

Description: <u>3rd Brake Light</u> Part Number: 531001 - 531002 - 531007 Application: 2002 - 2008 Dodge Ram



Step 1: Locate the two phillips screw on both ends of the third brake light and remove




Step 4: Remove the middle light bulb from the socket.



Step7: Twist the two cargo blubs into the new Anzo light.



Step 2: Take off the the vehicle.

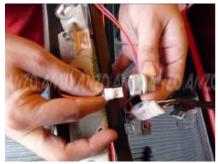

Step 5: Plug our ne third brake light in orginal bulb socket



Step 8: Test all fun proper installation I driving.

AnzoUSA<sup>™</sup> products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA<sup>™</sup> product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.