



Description: L.E.D Third Brake Light Installation
Application: 2015-2017 Chevy Colorado

Tools required: T-15 Screwdriver




Original 3rd Brake Light



Step 1: Remove the two T-15 screws from the 3rd brake light.



Step 2: Detach the 3rd brake light from the wiring harness. Some force is required to remove the original 3rd brake light.

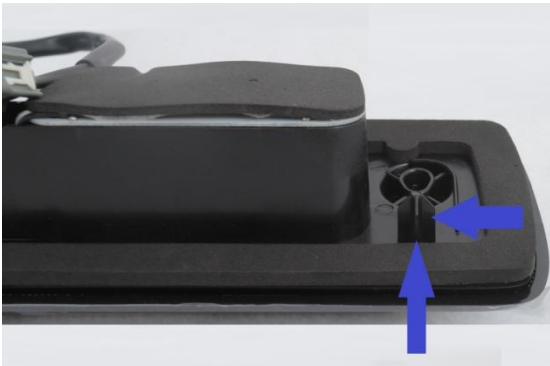

Step 3: Depending on the year of the truck, you may have to file down on the following tabs for a perfect fit.



Step 4: Check the Anzo 3rd brake light for fitment once pleased with alignment, connect harness cables. Reuse the factory two T-15 screws and only hand tight.



We do not recommend using a power drill as it could over tighten the screw and crack the 3rd brake light housing.



Step 5: Test Anzo 3rd brake light by running through the cycles.
Reverse Lights



Step 5: Test Anzo 3rd brake light by running through the cycles.
Brake Lights