



Description: [3rd Brake Light](#) Part
Number: 531001 - 531002 - 531007
Application: 2002 - 2008 Dodge Ram




Tools Needed: Phillips
screwdriver.



Step 1: Locate the two phillips
screw on both ends of the
third brake light and remove



Step 2: Take off the
the vehicle.

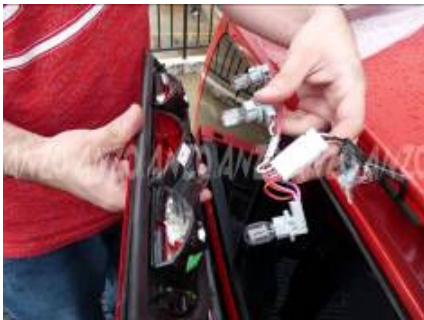

Step 3: Twist off the light bulb
socket from the third brake
light.



Step 4: Remove the middle
light bulb from the socket.



Step 5: Plug our ne
third brake light in
original bulb socket



Step 6: When connecting our
new Anzo third brake light
make sure orange wire lines
up with the white/yellow wire
and black to red/green wire



Step7: Twist the two cargo
blubs into the new Anzo light.



Step 8: Test all fun
proper installation I
driving.