



Description: [3rd Brake Light](#) Part
Number: 531001 - 531002 - 531007
Application: 2002 - 2008 Dodge Ram




Tools Needed: Phillips screwdriver.



Step 1: Locate the two phillips screw on both ends of the third brake light and remove



Step 2: Take off the third brake light from the vehicle.

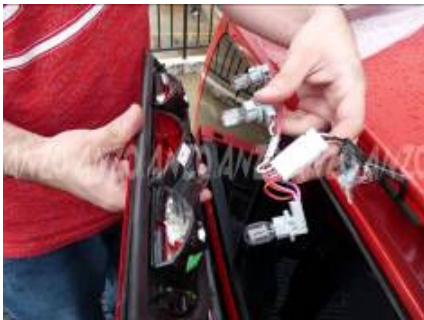

Step 3: Twist off the light bulb socket from the third brake light.



Step 4: Remove the middle light bulb from the socket.



Step 5: Plug our new third brake light in original bulb socket



Step 6: When connecting our new Anzo third brake light make sure orange wire lines up with the white/yellow wire and black to red/green wire



Step 7: Twist the two cargo bulbs into the new Anzo light.



Step 8: Test all functions of the new third brake light for proper installation before driving.