



# PATENT PRODUCT

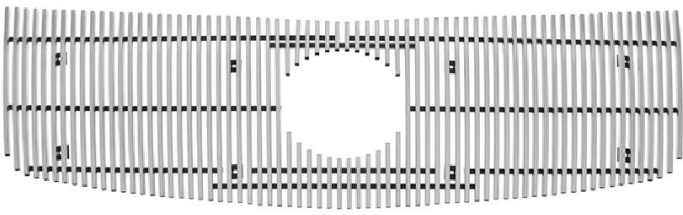
## Grille Installation Instruction

Rev. 190401

<b>Part#</b>	GR01FEG70 C/S/J	<i>Application</i>	<b>For 2002-2006 Cadillac Escalade With Logo Show/2002-2006 Cadillac Escalade EXT With Logo Show/2002-2006 Cadillac Escalade ESV With Logo Show</b>
--------------	--------------------	--------------------	---

<b>Parts List</b>	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Billet Grille	1	Stainless steel	4	“J” Hooks	2	
	2	Tab	1		5	Truss Head Screws	8	6-32×1.5”
	3	“J” Hooks	6		6	Nuts	8	

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Remove the black cover attached to the grille remove the grille shell.	
3	Center the billet grille into the opening of the factory grille shell. Secure the bolt to the threaded holes on the front of the grille. Be sure the bolts are through the OEM grille shell.	
4	From the rear, place a hook from the back, then thread a nut and tighten. Screw the M4 screw in the corner.	
5	Re-install the grille shell on the vehicle. Re-install the cover on top.	
6	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!