

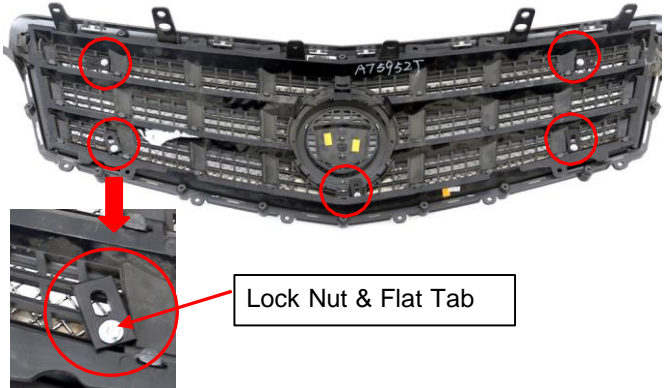




PATENT PRODUCT

Grille Installation Instruction

Part#	GR01GEI52T		Application	13-14 Cadillac ATS Logo Show (Main Upper)				
Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1		3	Flat Tab	5	
	2	Lock Nut	5					
Install Notes: Overlay <input checked="" type="checkbox"/> Replacement <input type="checkbox"/> Drill <input type="checkbox"/> Cut <input type="checkbox"/>								
Step	Description				illustration			
1	Identify the grille & hardware with parts list.							
2	Remove the factory grille from vehicle will be much easy for installing. Option: Pop hood, remove the black plastic cover (on top of factory grille / front panel) from vehicle. This will allow access to the rear of the OEM grille to install the mesh grille.							
3	Center the Mesh grille onto the factory grille. Be sure the threaded studs welded on the rear of the mesh grille, are through the OEM grille shell.							
4	Secure billet grille using the lock nuts and flat tabs from the back side of the factory grille.							
5	Make sure the mesh grille is centered and tighten the fasteners.							
6	Reinstall the factory grille with mesh grille onto the vehicle, which was removed in step 2							
7	Installation completed!!!				