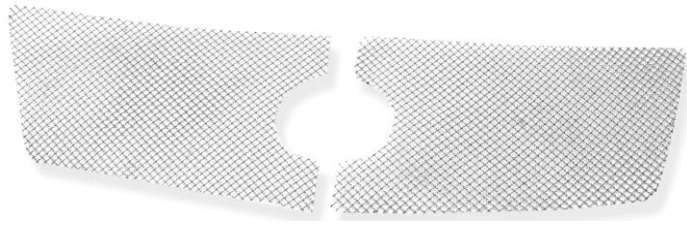



Part#	GR01GFD81Z/G	Application	For 2007-2014 Cadillac Escalade Without Frame/ Not Fit Platinum/ESV And Hybrid Models				
-------	--------------	-------------	--	--	--	--	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel				


Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	



2	Unclip the plastic rivets and remove the plastic cover over the grille. Remove the six 10mm bolts along the top of the grille (1). Apply masking tape to the painted surfaces of the grille. Remove the bolts and factory fasteners attaching the bumper cover to the inner plastic wheel wells (2). There are two bolts along the bottom and one towards the top of the wheel well.
---	--

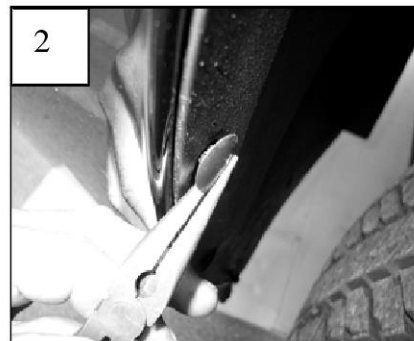

3	Pull the inner fender wells away from the bumper cover. This will gain access to disconnect the turn signals lights and fog lights. Use a slotted screwdriver to unfasten the light covers; twist the lights from the sockets to disconnect them (3). Once the lights have been disconnected; remove the bumper cover assembly (4).
---	---

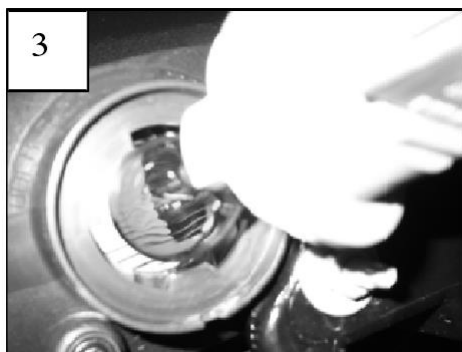

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

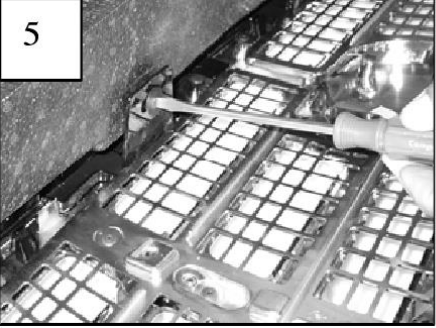Part#	GR01GFD81Z/G	Application	For 2007-2014 Cadillac Escalade Without Frame/ Not Fit Platinum/ESV And Hybrid Models
4	Place the bumper cover face down on a work surface. Use a slotted screwdriver to remove the fasteners securing the bumper pad to the bumper cover (5). Separate the plastic rivets holding the mesh inserts in place. These can be removed with a small 1/16" punch (6). Do not damage the rivets; they will be re-used.		
5		6	7
5	Use a pair of wire cutters (or similar tool) to cut the molded tab behind the logo area(7). This is a location tab next to one of the rivet points. Center the mesh inserts in place. Use the factory rivets to secure the mesh.		
6	Re-install the bumper pad to the bumper cover; re-install the bumper cover assembly and the plastic engine cover back onto the vehicle.		
7	Installation completed!!!		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!