

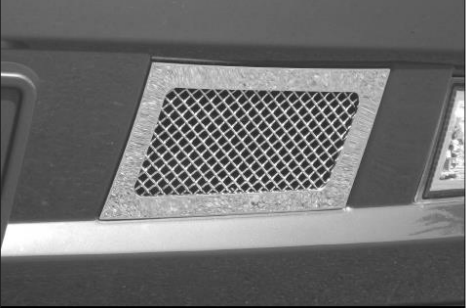


|              |                            |                    |  |
|--------------|----------------------------|--------------------|--|
| <b>Part#</b> | <b>GR01GFD82<br/>T/C/H</b> | <i>Application</i> | <b>For 2007-2014 Cadillac Escalade Not Fit ESV Platinum<br/>And Hybrid Models Without Tow hook</b> |
|--------------|----------------------------|--------------------|--|

| Parts List | Item | Part Name   | QTY | Description     | Item | Part Name       | QTY | Description |
|------------|------|-------------|-----|-----------------|------|-----------------|-----|-------------|
|            | 1    | Mesh Grille | 2   | Stainless steel | 5    | Studs           | 2   | 6-32×1 1/2" |
|            | 2    | Washers     | 4   |                 | 6    | L Brackets      | 2   |             |
|            | 3    | Studs       | 2   | 6-32×2"         | 7    | Nylon Lock Nuts | 4   | 6-32        |
|            | 4    | J Hooks     | 2   |                 |      |                 |     |             |

**Install Notes:** Overlay  Replacement  Drill  Cut

| Step | Description   | illustration   |
|------|---|--|
| 1    | Identify the grille & hardware with parts list.   |    |
| 2    | Access the tow hooks from below the bumper. It may be easier if the front of the vehicle is raised on jack stands or ramps. Use an 18mm socket and wrench to remove the factory tow hooks from the frame.                                   |  |
| 3    | Use a slotted screwdriver to unclip and remove the factory plastic tow hook covers.   |   |
| 4    | Thread a stud in each nut welded to the grille. Hold the grille up to the factory shell and make sure it is centered.   |  |
| 5    | Use one of the L brackets to secure the upper stud. Attach the J hook to the bottom stud. Install the washers and nuts. Make sure the brackets wrap around the bumper cover. Tighten the hardware until the grille is firmly held in place. |  |
| 6    | Make sure the billet grille is centered and tighten the fasteners, but do not over-tighten.   |  |
| 7    | Installation completed!!!   |  |

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!